

SHARPER IMAGE®

Travel Alarm Clock with Dual LED Flashlight

Item No. 202422



INSTRUCTION MANUAL


Introduction

Thank you for purchasing the **Sharper Image Travel Alarm Clock with Dual LED Flashlight**. Please take a moment to read these instructions and store them for future reference.

Features and Specifications

- Compact size, ideal for travel
- Hour, minute and second display
- Calendar with day-of-the-week display
- Indoor temperature display: -9.9°C to 50°C (14.2°F to 122°F)
- 12- or 24-hour time format
- Accurate to within 60 seconds per month (on average)
- Operating temperature: 0°C to 50°C (32°F to 122°F)
- Temperature resolution: 0.1°C (0.1°F)
- Alarm with Snooze button
- Button-activated blue backlight
- LED flashlight
- Lock switch (prevents buttons from being pushed accidentally in transit)
- Battery life: approximately 1 year
- Requires 4 AAA batteries (not included)

Identification of Parts

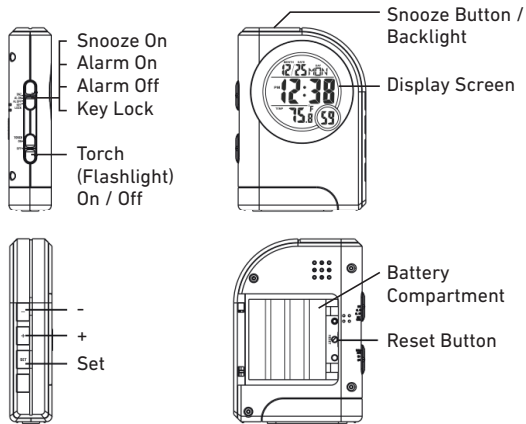

Note: Your device may have a slightly different appearance than the item pictured.

Battery Installation

- Slide open the battery door
- Load a set of 4 new AAA size batteries, following the polarity ("+" and "-") as indicated
- Close the battery door

Warning: Do not mix old and new batteries. Do not mix alkaline, standard (carbon-zinc) and rechargeable (nickel cadmium) batteries.

SETTINGS

To Set the Language

1. Press and hold the SET button for a couple of seconds. This will put the clock in Language Set mode.
2. Press the "-" key to scroll through the 4 available languages: English (EN), German (DE), French (FR) and Italian (IT).

To Set the Calendar

1. Press the SET button after the Language Set mode.
2. Press the "+" or "-" button repeatedly to set the year.
3. Holding down either the "+" or "-" button changes the year at high speed.

4. Press the SET button to confirm year set and set the date.
5. Press the "+" or "-" button repeatedly to set the date.
6. Holding down either the "+" or "-" button changes the date at high speed.

To Set the Time

1. Press the SET button after Calendar Set mode.
2. Press the "+" or "-" button repeatedly to set the minutes. When you press the "+" or "-" button once, the seconds count resets to 00.
3. Holding down either the "+" or "-" button changes the time at high speed.

To Set the Format

1. After Time Set, press the SET button to enter Format Set mode.
2. Press the "+" button to toggle between the 12-hr. and 24-hr. time display format.
3. Press the "-" button to toggle between the °C and °F temperature display format.
4. Press the SET button to confirm and quit the set mode.

Flashlight Operation


Slide the Torch switch to ON or OFF to control the dual LED flashlight.

USING THE ALARM


To Set the Alarm Time

1. Press the "+" or "-" button repeatedly to set the alarm time. The alarm time will be shown on the screen, along with the "AL" icon to show that you are changing the alarm time.
2. Holding down either the "+" or "-" button changes the alarm time at high speed.

To Active the Alarm Function

1. Slide the ALARM switch to the ON position. The  icon will appear. The alarm function is now activated.
2. When the alarm sounds, press the SNOOZE/LIGHT button. The alarm will be silenced, and the alarm will sound again at the same time tomorrow.
3. To deactivate the alarm function, slide the ALARM switch to the OFF position.

To Active the Snooze Function

1. Slide the alarm to "SNOOZE" position, the  icon and Zz will appear on the time display. The snooze function is now activated.
2. When the alarm sounds, press the SNOOZE / LIGHT button. The alarm will be silenced and sound again in approximately 5 minutes.
3. To deactivate the alarm when the Snooze Function is on, you must slide the ALARM switch to the OFF position.

Lock Function

After you set your time and alarm time, slide the switch to the KEY LOCK position to protect the time and alarm settings against any unnecessary changes in transit.

Check Temperature

The temperature is displayed in the Temp field. "Hi" or "Lo" will be shown if the temperature is out of the measurement range.

Resetting the Unit

In the unlikely event of a malfunction, you may reset the device to factory settings. Slide open the battery door and press the RESET button with a pencil or a paper clip.

Care of Your Alarm Clock

- Avoid exposing your clock to extreme temperatures, water or severe shock.
- Avoid contact with any corrosive materials such as perfume, alcohol or cleaning agents.
- Do not subject the clock to excessive force, shock, dust, temperature or humidity. Any of these conditions may shorten the life of the clock.
- Do not tamper with any of the internal components of this clock. This will invalidate the warranty and may cause damage.

Warning

- There is a danger of explosion if the batteries are replaced incorrectly. Replace batteries only with the same or equivalent type. Refer to the engraved battery marks inside the battery compartment for the correct battery polarity (+ and -).
- Dispose of used batteries according to local laws.

Customer Service

If you require any assistance with your **Sharper Image Travel Alarm Clock with Dual LED Flashlight**, please call **1 (877) 714-7444**, and select **Option 3**.