

Indoor/Outdoor Pop-Up Snowman


Item No. 202779

User's Guide

Congratulations on your purchase of the Indoor/Outdoor Pop-Up Snowman. This cheerful decoration adds holiday spirit to any home or yard in just seconds. Please take a moment to review these instructions and keep them for future reference.

Set-Up and Use

1. Attach the 4 support feet to the side of the base, as shown in Fig. 1.
2. Locate the two connectable trunk frame tubes and join these together, as shown in Fig. 2.
3. Carefully fit the Snowman over the top of the trunk frame, as shown in Fig. 3.
4. Carefully allow the Snowman to drop towards the ground around the frame, as shown in Fig. 4.
5. Carefully move the Snowman to your preferred position, ensuring that it is placed on a rigid and level surface. Note: If the Snowman is being placed outdoors, please secure the plastic support feet to the ground with the included metal stakes, as shown in Fig. 4.
6. Plug the Snowman into an AC outlet and adjust the lights with the controller box. The controller box allows the user to change the sequence and effects of the light chain.

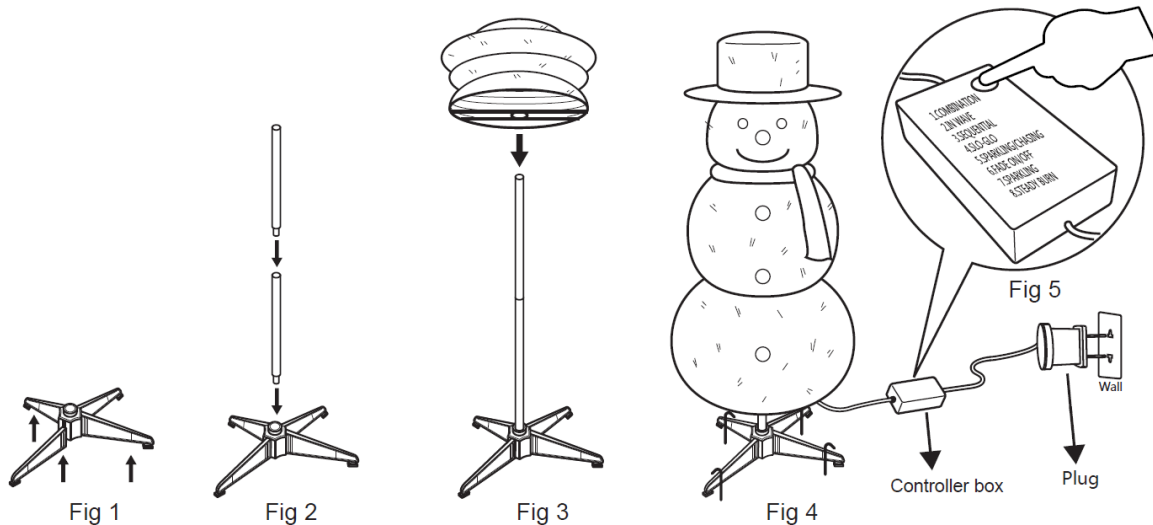

NOTE: There are eight different light settings:


1. COMBINATION
2. WAVES
3. SEQUENTIAL
4. SLO GLO
5. CHASING/FLASH
6. SLOW/FADE
7. TWINKLE/FLASH
8. STEADY ON

Safety Warning

- Position this product on a flat, rigid surface.
- Do not operate this product while in the packaging.
- Unplug this item when not in use.
- Do not connect this device to another snowman or other device. Plug it directly into a wall outlet.
- Do not operate this device in a confined space, or allow it to come into contact with any flammable materials.
- Do not allow any part of this set to come into contact with direct heat or flame.
- The transformer is a sealed unit, do not attempt to open or tamper with it.
- There are no user replaceable parts in this set.
- The flexible supply cable of this light chain is not user replaceable. If the cable becomes damaged, the light chain must be discarded.
- Please keep a free flow of air around the transformer.

Environmental Notice

Please dispose of this product and the packaging in an environmentally friendly manner.

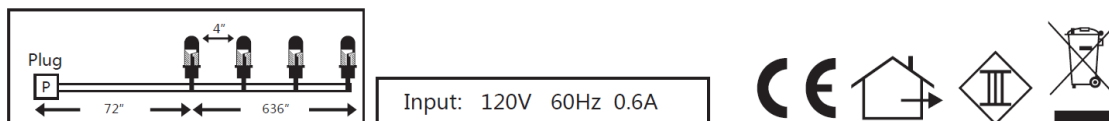

Customer Service

If you have any questions about your Indoor/Outdoor Pop-Up Snowman, please call our customer service department at **1 (877) 714-7444** and select **Option 3**.