

# **SHARPER IMAGE®**

**Ear and Nose Hair Trimmer**

Item No. 203208



Congratulations on your purchase of the Ear and Nose Hair Trimmer. This product is designed for many years of good grooming. Before using, please read the following guide carefully and retain for future reference.

## **SAFETY INSTRUCTIONS**

- Keep out of reach of children.
- Store product away from heat sources.
- Do not use if product becomes damaged.
- No not try to repair the product by yourself. There are no user-serviceable parts.
- Turn power off when not in use.
- Do not place product under blankets or pillows.
- For indoor use only.
- Use this product only for its intended purpose. Any other purpose can be dangerous.

## **BATTERY INSTALLATION**

Turn the product base clockwise to open the battery compartment. Then insert 1 AA battery (not included) respecting the polarity. To close the compartment, turn the base counterclockwise.

## **OPERATING INSTRUCTIONS**

- Remove the blade cover.
- Switch on the product and gently remove the hair in your ears and nose.

*NOTE: Be sure the product is turned on BEFORE it makes contact with ear or nose hair.*

## **MAINTENANCE AND CARE**

- Before cleaning the product, switch it off.
- Clean the unit with a damp cloth, and never use detergents or abrasive liquids.
- Take off the cutting head and remove hairs with the included brush.
- Rinse the head with water.
- Dry the head carefully and then add one or two drops of oil on blades.
- Never dip the product in water.
- If the product will not be used for a long period of time, remove the battery to prevent possible leakage.

*WARNING: Never allow water to come into the product. When you rinse the head, please point the blade downward. Do not switch it on until it has dried completely.*

## **ENVIRONMENTAL PROTECTION**

- Dispose of this product and packaging in accordance with local recycling regulations.
- Be sure to remove the battery first for proper disposal/recycling.

## **CUSTOMER SERVICE**

If you require any additional assistance with your device, please call 1 (877) 714-7444 and select Option 3.