



Bey-Berk
INTERNATIONAL



WATCH WINDER

OPERATING INSTRUCTIONS

1. Positioning the Watch

- Do not insert or extract watches while unit is rotating.
- Remove the holding cushion and tighten the watch around it.
- Insert cushion with watch into winder housing and make sure cushion and watch are laying flat and secure in the compartment (see image above).

2. Power & Start-Up

- This unit operates with both AC and DC power sources. DC power source (2 “C” cell alkaline batteries – not included) is primarily used as back-up in case of AC power failure.
- Plug in AC adaptor to back of unit. Power switch is located next to the AC plug.
- When unit is not in use, turn power switch to the off (bottom **O**) position. When the power switch is in the on (top **I**) position, the winder is ready to use.
- This unit comes with a pre-programmed selectable single or dual rotation setting.
- When the selector switch (located inside lid) is in the **O** position, the winder is off.
- When the selector switch is in the - position, the winder will rotate clockwise for 20 minutes and rest for 40 minutes, then it repeats the cycle.
- When the selector switch is in the = position, the winder will rotate counter-clockwise for 15 seconds and then reverse direction to clockwise for 15 seconds. This sequence will repeat for 20 minutes, rest for 40 minutes and repeats the cycle.
- The total operation time is 480 minutes (about 4,320 rotations) per day.
- When the winder is in the turning mode, the indicator light is on. When the winder is in the rest mode, the indicator light will flash once per second.

3. Warning

- Do not dispose of batteries in fire, batteries may explode or leak.
- Do not mix new and old batteries and only use alkaline batteries.
- It is advisable to remove batteries if unit will not be in use for a prolonged period.
- Working temperature: 50°-100° F.



Bey-Berk
INTERNATIONAL



WATCH WINDER

OPERATING INSTRUCTIONS

1. Positioning the Watch

- Do not insert or extract watches while unit is rotating.
- Remove the holding cushion and tighten the watch around it.
- Insert cushion with watch into winder housing and make sure cushion and watch are laying flat and secure in the compartment (see image above).

2. Power & Start-Up

- This unit operates with both AC and DC power sources. DC power source (2 “C” cell alkaline batteries – not included) is primarily used as back-up in case of AC power failure.
- Plug in AC adaptor to back of unit. Power switch is located next to the AC plug.
- When unit is not in use, turn power switch to the off (bottom **O**) position. When the power switch is in the on (top **I**) position, the winder is ready to use.
- This unit comes with a pre-programmed selectable single or dual rotation setting.
- When the selector switch (located inside lid) is in the **O** position, the winder is off.
- When the selector switch is in the - position, the winder will rotate clockwise for 20 minutes and rest for 40 minutes, then it repeats the cycle.
- When the selector switch is in the = position, the winder will rotate counter-clockwise for 15 seconds and then reverse direction to clockwise for 15 seconds. This sequence will repeat for 20 minutes, rest for 40 minutes and repeats the cycle.
- The total operation time is 480 minutes (about 4,320 rotations) per day.
- When the winder is in the turning mode, the indicator light is on. When the winder is in the rest mode, the indicator light will flash once per second.

3. Warning

- Do not dispose of batteries in fire, batteries may explode or leak.
- Do not mix new and old batteries and only use alkaline batteries.
- It is advisable to remove batteries if unit will not be in use for a prolonged period.
- Working temperature: 50°-100° F.