

# SHARPER IMAGE®

## PORTABLE VIDEO RECORDER AND CONVERTER


Item No. 203963

Quick Start Guide




1. Prior to first use, please charge this device for 5 hours with the included USB cable and charger. [You may charge this device with AC power or USB.]


A. Via the power supply

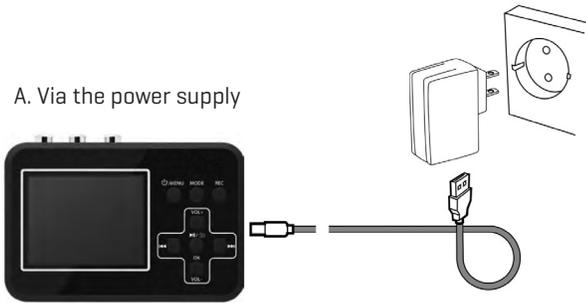


B. Via the computer's USB port

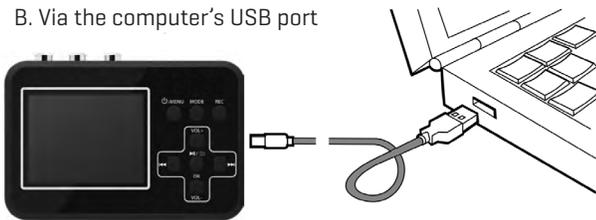

2. Insert the included memory card into the slot.

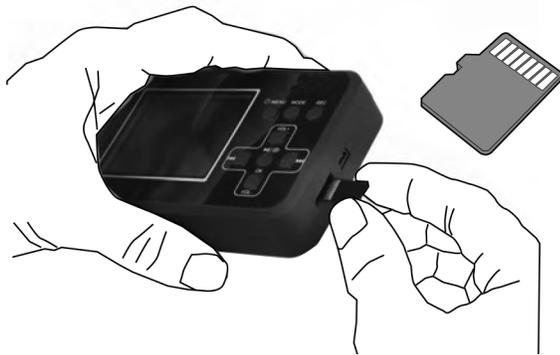


3. Connect your video source [VCR, DVD player, camcorder, etc.] using the included cables.

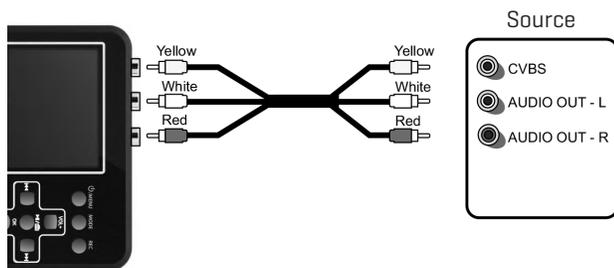

4. Turn ON your video source.

5. Turn ON the Portable Video Recorder and Converter by pressing and holding the On/Off/Menu button for approximately 3 seconds. [The default mode is Video Recording mode.]

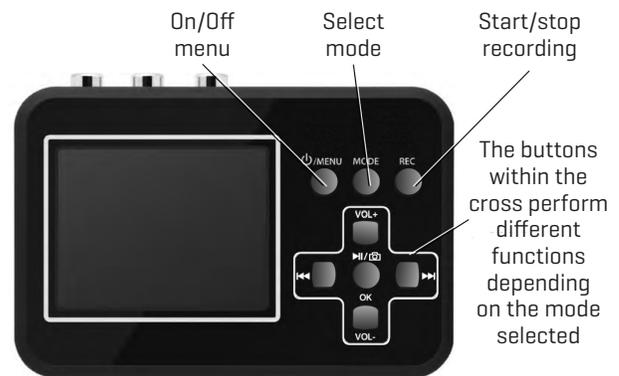

6. Press REC on the Portable Video Recorder and Converter to begin recording. The counter in the upper right hand corner will turn red.
7. Press PLAY on your video source. The video will be visible on the Portable Video Recorder screen.
8. When you are finished converting, press the REC button to stop and save your recording. You now have a digital copy of your video saved on the memory card. Note: The included 4GB card holds approximately 25 minutes of video.
9. To watch your video on the built-in screen, press the MODE button to select Play mode. Press OK to play the video. [If you have multiple files, press the >>> or <<< buttons to scroll through the various files.]

Once your videos are converted to digital, you may watch them on a TV, or transfer them to a computer for editing and storage. Consult your owner's manual for details. With a little bit of practice, you will become proficient at recording and digitizing your home videos. Please be sure to read the full owner's manual to learn about the many advanced features of this device, including time stamp, volume settings and more. Happy Converting!

## SHARPER IMAGE®

The SHARPER IMAGE® name and logo are registered trademarks.  
©Sharper Image. All Rights Reserved.