



# PARTY MIXER

## Frequently Asked Questions

**Q: My Party Mixer won't turn on.**

**A: Check and be sure that the unit's plug is fully inserted into an electrical outlet.**

**Q: My lights won't turn on.**

**A: Lights can be turned on by moving the switch underneath the unit to the "ON" position.**

**Q: How do I connect my Bluetooth enabled device to the Party Mixer?**

**A: Here are some steps to get you started:**

- 1. Be sure that your device has Bluetooth capability.**
- 2. Be sure that your Bluetooth enabled device has Bluetooth turned on. Consult your Bluetooth enabled device's manual for further instruction.**
- 3. Be sure that your Party Mixer is plugged in.**
- 4. Once you have confirmed that your device has Bluetooth, the Bluetooth is turned on, and the Party Mixer is turned on, then follow the steps in your Bluetooth enabled device's manual on how to connect.**

**Q: I have checked all of the above steps, but my device will not pair with the Party Mixer.**

**A: Here are some tips and tricks that should help:**

- 1. The Party Mixer uses Bluetooth version 2.1. Make sure your device can connect with this version of Bluetooth.**
- 2. Once you've double checked that your device has Bluetooth, make sure that Bluetooth is turned on.**

**3. Determine which pairing process your device employs. Different devices can pair differently. Consult your Bluetooth enabled device's manual.**

**4. Be sure that your Bluetooth enabled device is near to the Party Mixer. Bluetooth signal ranges are limited to 33 feet.**

**5. Delete the Party Mixer (LavaPartyMxr) from your device and rediscover it.**

**6. Download the latest update for your device.**

**7. Power your device on and off again.**

**8. Bear in mind that not all wireless devices use Bluetooth.**

**Q: What is the Party Mixer called in my list of devices?**

**A: LavaPartyMxr**

**Q: How do I change the Party Mixer from music with lights to lights only?**

**A: There is a switch on the bottom of the Party Mixer that allows you to make this change.**

**Q: How do I change the bulbs?**

**A: The LED bulbs are non-replaceable.**

**Q: How do I clean my Party Mixer?**

**A: Use a soft, damp cloth –without cleaning products – and gently run it over the exposed portions only.**

**Do not attempt to clean the underside or the inside of the Party Mixer.**