

## Connecting Tablet to the Bluetooth Speakers

- 1) Press and hold the play/pause button until the stand beeps and the blue indicator light begins to rapidly flash. Previously paired devices, will automatically pair in 30 seconds.
- 2) While the blue indicator light is flashing, view the accessible devices available in your tablet or mobile device's Bluetooth settings. The Bluetooth Speaker Stand for Tablets will show as "**CTA PAD-BSS**" and click to connect.
- 3) When successfully connected, the flashing of the blue indicator light will slow down. When disconnected for 5 minutes, it will automatically shut down.

### Using the Bluetooth Speaker Stand for Tablets


- 1) Short press the V+ and V- to adjust the volume. The speakers will beep at their maximum and minimum volume levels. If the sound is too low or too high, try adjusting the volume on your tablet or mobile device.
- 2) When the battery is low, the speakers will beep. When the battery falls below 3V, the Bluetooth Speaker Stand for Tablets will automatically shut down.
- 3) While charging, the red indicator light will turn on. When finished charging, the red indicator light will turn off.
- 4) To shut down, press and hold the play/pause button.

Precaution: The power switch should be switched from battery power to USB Mode when the Bluetooth Speaker Stand for Tablets isn't being used for long periods of time.

6

## Troubleshooting:

If the Bluetooth Speak Stand for Tablets doesn't work properly, please force shutdown by switching power supply to USB Mode and rebooting it again. If the Bluetooth Speaker Stand for Tablets doesn't work properly after 3 tries, please consult your dealer.

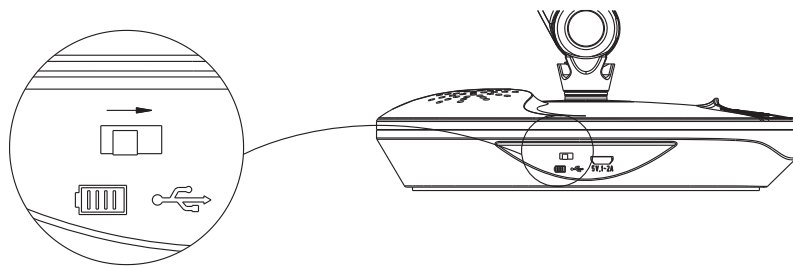

7


# Bluetooth Speaker Stand for Tablets



## INSTRUCTION MANUAL

Thank you for choosing CTA Digital's product. We hope that you will enjoy using it. Please follow the guidelines and instructions as laid out in this instruction manual.

## **PAD-BSS** Installation guide

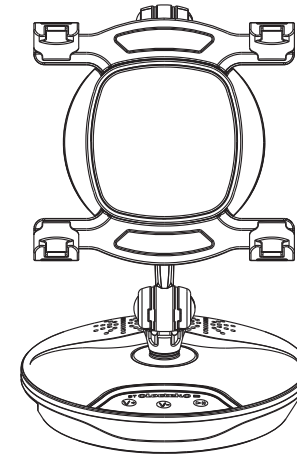

## Safety Information

1. Do not use this product near water or moisture.
2. This product is NOT weatherproof.
3. Clean only with a dry lint-free cloth. Disconnect the power source before cleaning. Do not use any chemicals or cleaners.
4. Do not install or use near any open flame or heat sources, such as radiators, heat registers, stoves, grills, or other devices that produce heat.
5. Do not expose to direct sunlight.
6. Only use accessories specified by the manufacturer.

## Refer to a qualified service personnel for the following concerns:

- (1) The USB cable is damaged.
- (2) The device has been exposed to rain, water or other liquids.
- (3) The device does not properly function after following the instructions in the User Manual.

1


## Remove Tablet from Racer Wheel



2

4

## Installation Guide I. Attach Tablet to Racer wheel

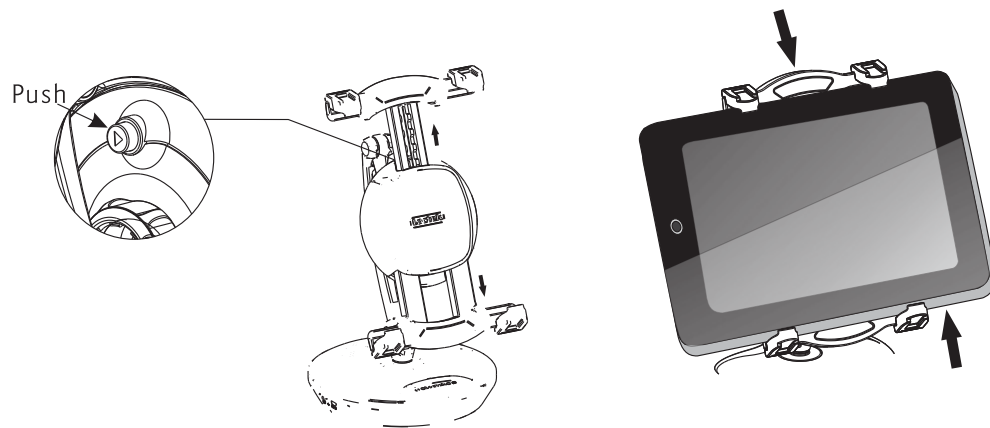


3

Switch to battery mode(DC 3.7V)



The power of speakers can be supplied by standard Tablet USB adaptor(DC 5.0V/1A-2A),  
Switch the Product to USB mode while supplying power through USB adaptors.

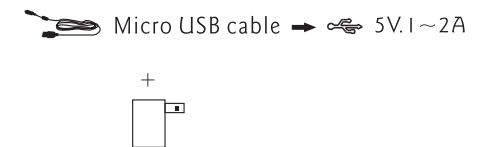

5