

SHARPER IMAGE®

Owner's Manual

Six Sound Soother
Item No. 204863



Thank you for purchasing the Sharper Image Six Sound Soother. Please read this guide carefully and keep for future reference.

Power Sources

Your Sharper Image unit can be powered by an AC Adapter (included) or by 4 AA batteries (not included).

Using AC Power

Connect the supplied AC Adapter to the AC Adapter Jack located on the side of the unit and plug the AC Adapter into a wall outlet. When plugged in, the unit will draw no power from any batteries that you may have installed in the unit's Battery Compartment. If a power outage occurs, the unit will automatically switch over to battery power.

Using Battery Power

To install batteries, open the Battery Compartment located at the back of the unit. Insert 4 "AA" alkaline batteries in the direction marked by the indicators inside the Battery Compartment. Replace the Battery Compartment Door.

How to Use

Follow these steps to use your Six Sound Soother.

1. Install batteries into the Battery Compartment at the bottom of the unit or connect the AC Adapter to the unit.
2. Your Six Sound Soother unit includes a Removable Stand. To install the stand, hold the stand so the arrows point to the front of the unit. Then insert the stand's tabs into the recess holes located on the bottom of the case. Slide the stand in the direction of the arrows until both tabs "snap" into place.
3. Turn the unit on by rotating the On/Off Volume Control to your desired volume. When first turned on, the unit will automatically play its factory sound setting Ocean Surf. To select a different sound, simply press one of the other sound buttons located at the front of the unit.
4. Select the length of time you want the sound to be played by rotating the Timer Control Dial to the desired setting. Four positions are available; Continuous [Cont.] for constant playback; "30" for 30 minutes, "60" for 60 minutes and "90" for 90 minutes. On the "30", "60" and "90" minute timer position, the sound gradually fades away in the last 12 minutes before the unit turns itself off.
5. In addition to the timer feature, the unit may be turned off manually by turning the On/Off Volume Control Dial off or by pressing the programmable Off/Resume button once (described in more detail below).

Note: After turning the unit off with the On/Off Volume Control Dial, wait at least 15 seconds before turning the unit on again. This will allow the unit's computer controlled electronics to reset. If you do not wait at least 15 seconds, you may hear a mixture of sounds coming from the unit.

Using The Programmable Off/Resume Button

The unique programmable Off/Resume button located at the front of the unit allows you to conveniently turn the unit off during sound playback or to repeat your last played sound sequence.

Pressing the programmable Off/Resume button once during sound playback turns the sound off automatically without having to turn the unit off with the On/Off Volume Control. Pressing the programmable Off/Resume button a second time repeats your last played sound at the same volume and timer setting.

For example: If you are listening to the Ocean Surf at half volume on the 60-minute timer position, pressing the programmable Off/Resume button once will turn the unit off. Pressing it again will automatically repeat the entire sequence by automatically playing back the Ocean Surf at half volume for another full 60-minute period.

Placement of Unit

The design of the Six Sound Soother allows the unit to be placed flat on its back, hung on a wall, or placed in an upright position to save table space. To place the unit on its back, remove the stand by simply pulling it away from the base of the unit in the opposite direction of the arrows.

Note: The Removable Stand allows you to conserve luggage space when traveling.

Using Headphones / Speaker Pillow

For listening to sounds in private, your Six Sound Soother includes a Headphone/Speaker Pillow Jack (headphones not included). The Headphone/Speaker Pillow Jack accepts a 1/8" [3.5mm] monaural plug for monaural sound playback.

Built-In Sounds

Sharper Image Six Sound Soother incorporates 6 authentic, digitally recorded sounds of nature recorded by the world's foremost nature recording experts. Choose from Ocean Surf, Stream, Rain, White Noise, Summer Night and Wind.

- 1. Ocean Surf:** The ocean surf provides a calm rhythm that helps you drift off to sleep or creates a relaxing Oceanside environment.
- 2. Stream:** A rippling mountain stream helps you unwind and creates an excellent background sound for daily activities in the home or at the office.
- 3. Rain:** A tranquil rainfall provides a peaceful setting for relaxation and sleep. The shower sound is particularly good at masking higher-toned background noise.
- 4. White Noise:** The steady flow of a cascading waterfall is perfect as a "natural white noise" for masking unwanted background sounds.
- 5. Summer Night:** A gentle chorus of crickets provides a peaceful and restful environment.
- 6. Wind:** Dramatic, but calming, gusts of wind sweep you away to a wilderness retreat.

Operating The Sound Card Feature

You can conveniently add 6 additional sounds to your unit with our unique Six Sound Soother Sound Cards (available separately at SharperImage.com Item No. 200644).

Follow these steps to use the Sound Cards.

1. Insert a Sound Card into the Six Sound Soother Sound Card Slot with the indicator arrow on the Sound Card pointing into the slot and facing the front of your Sharper Image Six Sound Soother.
2. Push the Sound Card down until you feel the Sound Card meet the bottom of the slot –about 1/2" [10mm] of the Sound Card will go into the slot.
3. To play sounds from the Sound Card, press the Sound Card Button next to the Sound Card Slot. The Sound Card Button will pop-up to indicate that sounds will be played back from the Sound Card and sounds from the Sound Card will then play back.
4. Press the Sound Button next to the number that corresponds to the sound number you want to listen to from the Sound Card.
Example: If Ocean Rain is the 5th Sound Card sound, pressing the sound button with a "5" next to it will play the Ocean Rain sound.
5. To deactivate the Sound Card function, press the Sound Card button down. You may then listen to the sounds built into your SixSound Soother in the normal manner.

Caution

- Do not touch the metal contact on the Sound Card. Touching these electrical contacts with statically charged objects, including your fingers, could erase the sounds stored in the Sound Card.
- If you remove the Sound Card from your Six Sound Soother system, store the card inside its carton to protect the card's electrical contacts from dust and debris.
- Do not place excessive pressure on the Sound Cards.
- Do not expose Sound Cards to heat, cold or liquids.

FCC Notice

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: [1] This device may not cause harmful interference; and [2] This device must accept any interference received, including interference that may cause undesired operation.

Customer Service

Sharper Image branded items purchased from SharperImage.com include a 1-year limited replacement warranty. If you require any assistance with your Six Sound Soother, please call 1 (877) 210-3449.

SHARPER IMAGE®

MADE IN CHINA

The Sharper Image® name and logo are registered trademarks. Manufactured and marketed by Camelot SI, LLC under license. ©Sharper Image All Rights Reserved.

Quick Start Guide

Six Sound Soother
Item No. 204863

Step By Step How To Use The Six Sound Soother

Follow these steps to use your Six Sound Soother:


Step 1: Install batteries into the Battery Compartment at the bottom of the unit or connect the AC Adapter to the unit.

Step 2: Turn the unit on by rotating the On/Off Volume Control to your desired volume.

Step 3: To select a different sound, simply press one of the other sound buttons located at the front of the unit.

Step 4: Select the length of time you want the sound to be played by rotating the Timer Control Dial to the desired setting. Four positions are available; Continuous [Cont.], "30" for 30 minutes, "60" for 60 minutes and "90" for 90 minutes.

Step 5: The unit may be turned off manually by turning the On/Off Volume Control Dial off or by pressing the programmable Off/Resume button once.

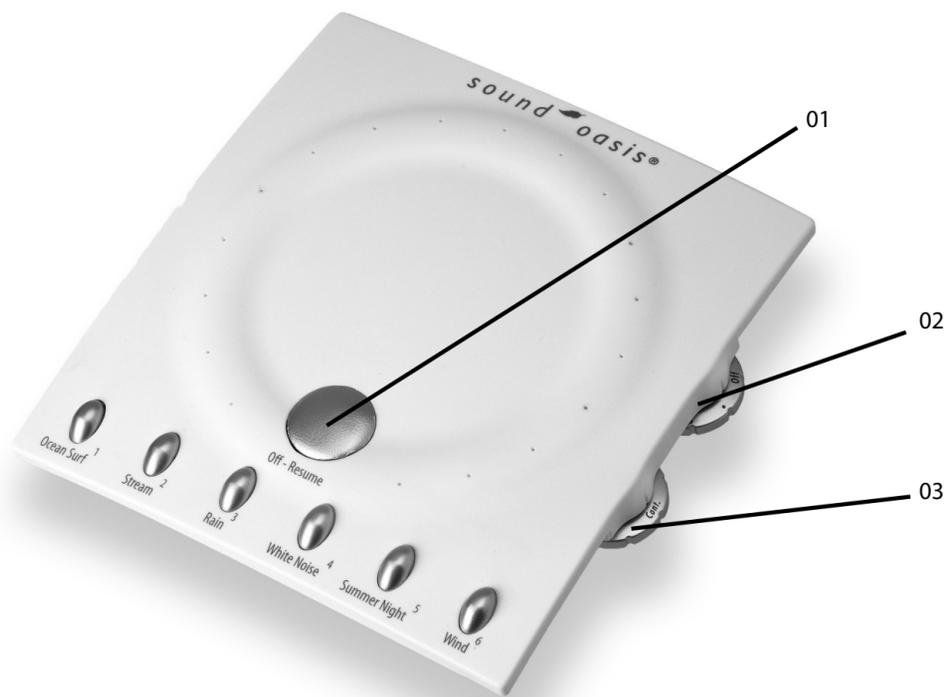


Front of Unit

01 Programmable off/resume

02 Rotary on/off/volume control

03 4 position timer—continuous, 30, 60, and 90 minute settings

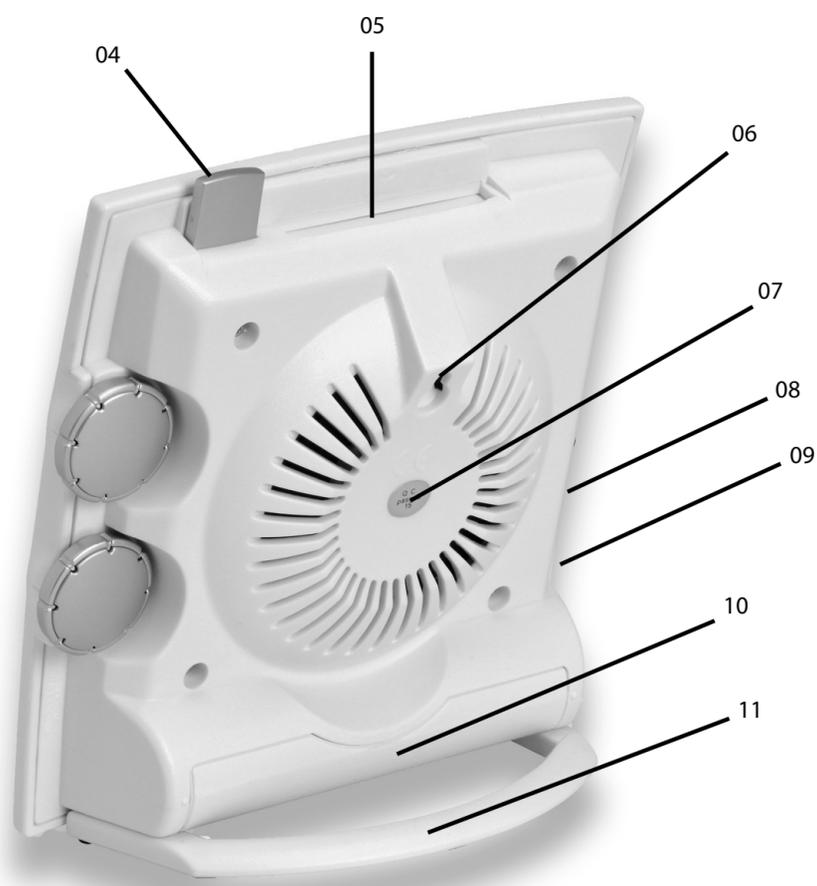

Rear of Unit

04 Sound Card Button

05 Sound Card Slot

06 Integral wall mount hook

07 Omni directional reflective speaker

08 Headphone/Speaker Pillow Jack

09 Adapter jack [adapter included]

10 Battery compartment

11 Removable stand position unit upright or flat