

# SHARPER IMAGE

## POP-UP SNOWMAN

Item No. 204874

### Owner's Manual

Thank you for purchasing the Sharper Image Pop-Up Snowman. Please read this guide carefully and keep it for future reference.

### WARNING

This is an electric product – not a toy! To avoid risk of fire, burns, personal injury and electric shock, it should not be played with or placed where small children can reach it.

- Do not use this product for anything other than its intended use.
- Do not use or attach any additional electric lights or light strings to this decoration.
- This seasonal-use product is not intended for permanent installation or use.
- Do not mount or place this decoration near gas or electric heaters, fireplaces, candles or other similar sources of heat.
- This product is suitable for indoor and outdoor use.
- This light set is constructed with replaceable bulbs. Please refer to the guide on page 2.

### FEATURES

- Indoor and Outdoor use
- 28" diameter
- 60" height
- 6-ft. [2m] power cord length
- Folds flat for storage
- 160 warm white LEDs
- 2 ribbon ornaments
- 3 globe ornaments
- 4 stakes
- Control box with 8 lighting modes:
  - Combination
  - Steady On
  - In Waves
  - Sequential
  - Chasing ["Flash"]
  - Slow Glow
  - Step On
  - Slow Fade



### ASSEMBLY AND OPERATION

1. Carefully remove the metal tubes, plastic base, snowman and feet from the box.
2. Choose a firm, flat surface on which to assemble the snowman.
3. Fit the feet onto the base.
4. Connect the metal tubes.
5. Place the metal tubes into the base.
6. Carefully drape the snowman over the top of the connected metal poles. [If the snowman is to be placed outdoors, you may wish to secure the plastic support feet to the ground with stakes.]
7. Plug the power cord into an AC outlet.
8. Use the attached Control Box to select one of 8 lighting modes.



### MAINTENANCE AND CARE


- Before use or reuse, inspect the product carefully. Discard the product if it has cut, damaged or frayed wire insulation on cords, cracks on the bulb holders or enclosures, loose connections or exposed copper wire.
- When not in use, store product neatly in a cool, dry location that is protected from sunlight.

## IF THE LIGHTS DO NOT WORK

- Ensure the power outlet is working correctly.
- Ensure the plug is connected properly between the product and the transformer socket.

## REPLACING THE BULBS

- Unplug the product from the outlet. Do not unplug by pulling on the cord.
- Pull the faulty bulb and plastic base straight out of the bulb holder.
- Insert a new bulb into the holder.

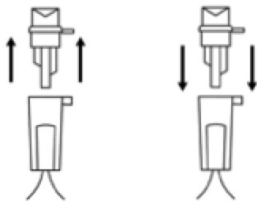

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## CUSTOMER SERVICE

Sharper Image branded items purchased from [SharperImage.com](http://SharperImage.com) include a 1-year limited replacement warranty. If you require any assistance with your **Pop-Up Snowman**, please call 1 (877) 210-3449.

**SHARPER IMAGE**

The SHARPER IMAGE® name and logo are registered trademarks. ©Sharper Image. All Rights Reserved.