

SHARPER IMAGE®

RECHARGEABLE 3-HEAD SHAVER

Item No. 204934

User's Guide



Thank you for purchasing the Sharper Image Rechargeable 3-Head Shaver. This device is designed to give you a clean, close shave at home or away. Please take a moment to read this guide and store it for future reference.

FEATURES

- Compact, cordless and portable
- Shaves in circular and linear motions
- Built-in trimmer for mustache, sideburns, etc.
- Operates up to 40 minutes on a full charge
- Includes cleaning brush and protective cap

SAFETY INFORMATION


- Always turn the Shaver OFF when charging.
- The foil on this Shaver is very delicate. Do not strike it or press it against a hard surface, as this could damage the foil [fig. 1].
- Do not leave the Shaver plugged into an AC outlet for more than 48 hours.
- This device should be used and stored at temperatures between 41°F and 95°F.



- This device is not a toy. Keep it out of reach of children at all times.
- If the power cord appears worn, frayed or damaged, please do not use this item. Contact Sharper Image Customer Service.
- When it is time to dispose of this item, please follow all local regulations concerning the proper disposal of electronics and rechargeable batteries.

CHARGING

1. Plug the charging cord into the Shaver. Then plug the other end into a standard AC outlet [fig. 2-3].

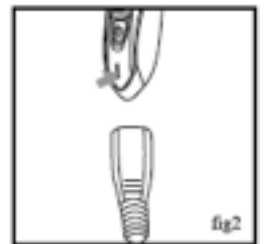


2. Please charge Shaver completely before first use.
NOTE: This could take about 8-10 hours.



3. After charging, be sure to unplug the charging cable.

SHAVING

1. Make sure the Shaver is properly charged.
2. Slide the on/off switch to ON.
3. Place the shaver against your face and move it in a quick motion. Hair on the neck can also be shaved off in this way.
4. Place the protective cap back on the Shaver after each use [fig. 5].

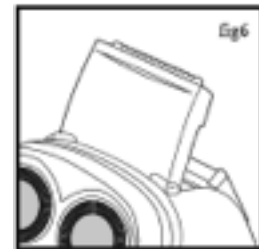

NOTE: You can shave using both a straight motion and a circular motion. For a better shave, stretch the skin on your face with your free hand. Please bear in mind that your skin may need two to four weeks to become fully accustomed to this type of shaving system.



USING THE TRIMMER

1. Open the back cover and pull out the trimmer [fig. 6].
2. Holding the Trimmer blade at a 90° angle, softly the trimmer to your skin and begin trimming hair.
3. After using the Trimmer, push the switch down to retract the Trimmer blade.

WEEKLY MAINTENANCE

1. Turn the power OFF and open the housing.
2. Press the outer-cutter button and take off the outer cutter.
3. Clean the outer cutter, the inner cutter and the body.
4. After cleaning, reassemble the outer cutter and the inner cutter to their original positions and close the housing [fig. 7-10].

IMPORTANT: Do not change the position of the razor foils. Altering the foils will affect the performance of this device.

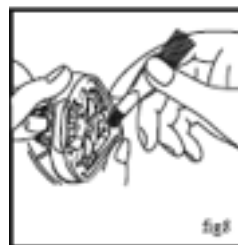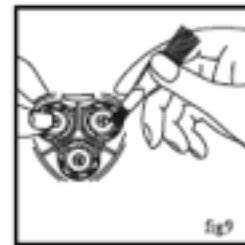

WARRANTY / CUSTOMER SERVICE

Sharper Image branded items purchased from SharperImage.com include a 1-year limited replacement warranty. If you have any questions not covered in this guide, please call Sharper Image Customer Service at 1 (877) 210-3449.

SHARPER IMAGE®

The Sharper Image® name and logo are registered trademarks.
Manufactured and marketed by Camelot SI, LLC under license.
©Sharper Image All Rights Reserved.