

SHARPER IMAGE®

HEATED INSOLES

Item No. 204996

Owner's Guide



Thank you for purchasing Sharper Image Heated Insoles. These high-tech shoe inserts are designed for a long life of warmth and comfort. Please take a moment to read this guide carefully, and store it for future reference.

PACKAGE CONTENTS

- 2 Heated Insoles [with pre-installed rechargeable batteries]
- AC Adapter
- Wireless remote control
- Instruction guide

PRODUCT FEATURES

- Built-in rechargeable 3.7V polymer batteries
- Adjustable temperature: 113°F [low] / 131°F [medium] / 149°F [high]
- Operates up to 7 hours on a full charge [depending on environmental conditions]
- High frequency, dual channel RF radio wireless control
- Battery capacity: 1,900mAh
- Absorbs shock, sweat and odors
- Trim-to-fit toe area

CHARGING INSTRUCTIONS

- Switch both insoles to the OFF position.
- Insert the charging cable.
- Plug the charging cable into an AC outlet. The LED light will turn RED, indicating that the batteries are charging.
- When the batteries are fully charged, the LED light will turn GREEN.

OPERATING INSTRUCTIONS

- Press the H button on the remote. The LED of the remote will flash once. The LED of the insoles will flash for 3 seconds. Then, the insoles will begin to heat on HIGH mode [149°F for up to 4 hours].
- Press the M button on the remote. The LED of the remote will flash once. The LED of the insoles will flash for 3 seconds. Then, the insoles will begin to heat on MEDIUM mode [131°F for up to 5 hours].
- Press the L button on the remote. The LED of the remote will flash once. The LED of the insoles will flash for 3 seconds. Then, the insoles will begin to heat on LOW mode [113°F for up to 7 hours].
- Press the On/Off button on the remote. The LED of the remote will flash once. The LED of the insoles will turn off, indicating power is OFF.
- Carefully place the insoles into your shoes or boots.
- Use the remote to adjust the heat as needed. If you lose or misplace your remote, you may also press the small black button on the heel of each Heated Insole.

SIZE INFORMATION

Note: You may trim the toe end of the Heated Insoles for optimum fit. Please follow the lines on the insoles.

HEATED INSOLES SIZE CHART

[Note: Most women wear Small or Medium. Most men wear Large or X-Large. All sizes are approximate. If you are between sizes, we recommend ordering a larger size and trimming it to fit]

	Women's U.S.	Men's U.S.
Small	5-5 1/2	4
Medium	6 1/2 - 7 1/2	5 - 6
Large	7 1/2 - 9	6 - 7
X-Large	10 - 14	8 - 12

ELECTRICAL SPECIFICATIONS

Voltage: 3.7V
Battery Capacity: 1,900mAh
Working Voltage Range: 3.0V - 4.2V
Charging Voltage: 4.2V
End off voltage: 3.0V
Battery life: 500+ charges
Input: AC/100-240V, 50/60Hz
Output: DC/4.2V 500mA*2
Charging temperature: 32°F to -113°F
Charge mode: CC/CV

STORAGE INSTRUCTIONS

- Always store Heated Insoles with the power turned OFF.
- Store the Heated Insoles in a cool, dry place.
- If you are not going to use the Heated Insoles for a long time, you must still charge the batteries every 2 to 3 months.

SAFETY WARNINGS

- Do not use Heated Insoles for vigorous activity. The crush resistance of the Heated Insoles is 150kg. Do not jump or run while wearing the product.
- Do not expose Heated Insoles to water, fire or other extreme high temperatures.
- Do not puncture the Heated Insoles with sharp objects.
- Do not disassemble the Heated Insoles.

- Do not strike the Heated Insoles.
- Do not use any charger other than the one that came in this package.
- Use this product for its intended use only.
- To avoid the risk of fire, always handle the remote carefully to avoid turning on the Heated Insoles by mistake (especially when traveling).

WARRANTY / CUSTOMER SERVICE

Sharper Image branded items purchased from SharperImage.com include a 1-year limited replacement warranty. If you have any questions not covered in this guide, please call Sharper Image Customer Service at 1 (877) 210-3449.

Caution: The user is cautioned that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: [1] this device may not cause harmful interference, and [2] this device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the

interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

SHARPER IMAGE®

The Sharper Image® name and logo are registered trademarks.

Manufactured and marketed by Camelot SI, LLC under license.

©Sharper Image All Rights Reserved.