

SHARPER IMAGE®

WINDOW SPRAY WIPER

Item No. 206119

User's Guide

Thank you for purchasing the Sharper Image Window Spray Wiper — the handy cleaning tool that helps give your windows a clear, streak-free shine.

Please take a moment to read this guide and store it for future reference.

FEATURES


- 10" sprayer head
- 11" rubber squeegee
- Clear reservoir tank
- Uses water and/or glass cleaner
- 36" extension pole provides maximum reach of 50"
- For indoor and outdoor use
- Removable, washable cleaning pad

PARTS IDENTIFICATION

- A. Sprayer Head
- B. Removable Cleaning Pad
- C. Rubber Squeegee
- D. Reservoir Tank
- E. Reservoir Cap
- F. Sprayer Head Trigger
- G. Extension Pole
- H. Extension Pole Trigger
- I. Foam Support Grip
- J. Hanging Loop

CLEANING EYE-LEVEL WINDOWS

1. Fill the reservoir tank with water or your favorite glass cleaning solution. Be sure that the level is at or above the minimum marker ["MIN"] on the tank.
2. Dampen the cleaning pad in the sink or a filled bucket.
3. Use the trigger on the sprayer head to spray the window with water or glass cleaning solution.
4. Wipe the window with the dampened cleaning pad.
5. Flip the wiper over and squeegee the window, side to side.

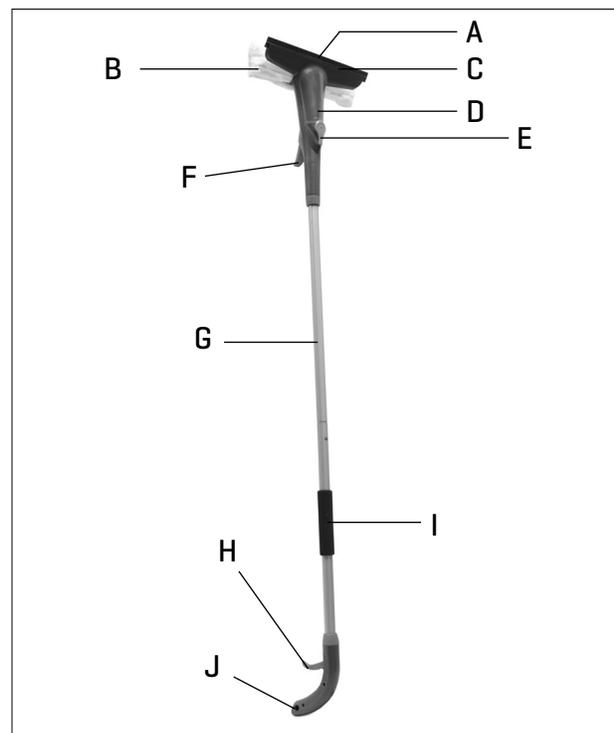

CLEANING EYE-LEVEL WINDOWS (CONT.)

6. Wipe the squeegee between strokes with a clean, soft, dry towel.
7. For best results, dry the window with a clean, dry microfiber cloth [optional].

CLEANING HIGH WINDOWS

1. Fill the reservoir tank with water or your favorite glass cleaning solution. Be sure that the level is at or above the minimum marker ["MIN"] on the tank.
2. Dampen the cleaning pad in the sink or a filled bucket.
3. Snap on the included extension pole.
4. Use the trigger on the extension pole to spray the window with water or glass cleaning solution.
5. Wipe the window with the dampened cleaning pad.
6. Flip the wiper over and squeegee the window, top to bottom.
7. Wipe the squeegee between strokes with a clean, soft, dry towel.

CARE AND MAINTENANCE

1. Empty the reservoir tank when not in use.
2. Wipe off the squeegee with a clean, soft towel.
3. Remove the cleaning pad and wash it under running water. [You may also machine wash if necessary using cold water and gentle cycle.] Hang the cleaning pad to air dry.
4. Replace the cleaning pad when it is fully dry.
5. Be sure to store your Window Spray Wiper so that the squeegee is not touching the floor. We recommend using the hanging loop at the end of the extension pole.

CAUTION

- The Window Spray Wiper is not a toy. Keep out of reach of children at all times.
- Do not spray water or glass cleaning solution at people or pets. This could cause serious injury to the eyes

WARRANTY / CUSTOMER SERVICE

Sharper Image branded items purchased from SharperImage.com include a 1-year limited replacement warranty. For Customer Service, please call 1 [877] 210-3449.

SHARPER IMAGE®

The SHARPER IMAGE® name and logo are registered trademarks.
©Sharper Image. All Rights Reserved.