

# Club Champ

**Putt'n Return/ Putt 'n Hazard**

**model #9511**

Directions for use

1. Unfold 8' x 16" putting green indoors, in warm area or outside in sun to allow for material to flatten out and remove any creases caused by packaging and shipping.
2. Carefully remove the graphics for water and sand trap holes and place them in the appropriate hazard. Center graphics in place and press firmly to apply.
3. Insert the panoramic backdrop into the clips attached to the back of the putting base.
- 4- Insert 2- AA batteries (not included with the unit) into the battery compartment in back of base.
- 5- When putting into cup hole or hazards, the ball will roll into the return mechanism and automatically kick the ball back to user.

NOTE: Occasionally the ball may hang up in the return mechanism. If ball does not return, gently nudge base to dislodge ball so it falls back into the ball return mechanism. To avoid injury, do not look down into the hole while doing this or stick your finger anywhere near the ball return mechanism.

**GOLF GIFTS & GALLERY, INC.**  
**OUR COMMITMENT TO CUSTOMER SATISFACTION**

We go to great effort to ensure quality in our products. All Club Champ products are covered under our 90 day warranty against defects in material and workmanship. Any breakage must be reported within 15 days of receipt. Should you have any questions, please call our customer service department at 1 800-552-4430 or e mail [custserv@golfgiftsgallery.com](mailto:custserv@golfgiftsgallery.com) and we will do our best to correct the problem. This warranty does not apply to normal wear and tear, or to any damage caused by misuse of the product.

Your comments and suggestions are always welcome.

Thank you for buying our products! We hope you enjoy them.