

SHARPER IMAGE®

NOISE CANCELLING BLUETOOTH HEADPHONES

Item No. 206169


Owner's Guide

Thank you for choosing the Sharper Image Noise Cancelling Bluetooth Headphones. Please take a moment to read this guide and store it for future reference.

FEATURES

- Bluetooth 4.1
- Noise cancelling technology
- Pairs easily with all iPhones, iPads, Samsung Galaxies and other Android devices
- Over 20 hours play time
- Built-in microphone for hands-free phone calls
- Includes airline adapter for wired use
- Includes travel pouch

HOW TO CHARGE THE HEADPHONE BATTERY

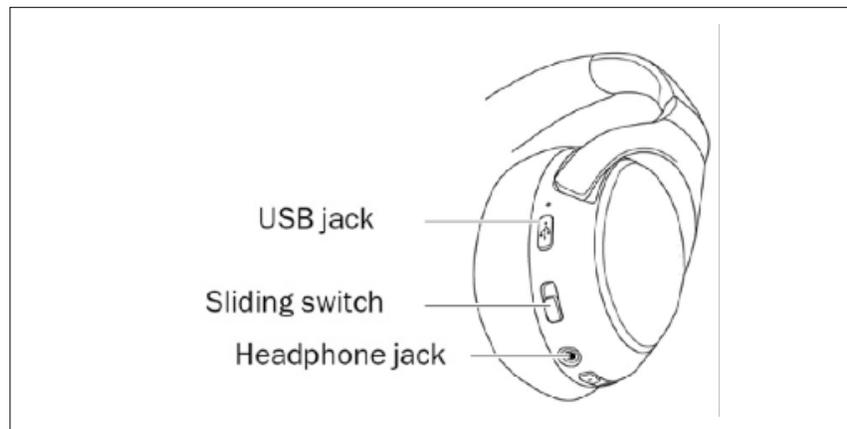


1. Open the rubber plug on the USB port.
2. Connect the USB port of your headphones with the USB port of your computer, USB charger or etc. Use a suitable USB charging cable for this (type A plug to a type micro B plug). The LED will pulse in white during the charging process. The brightness of the LED indicates the charge status. The brighter the LED, the higher the charge status. Once the battery is fully charged, the LED will illuminate continuously in white.
3. Take the USB charging cable out of the USB port of the headphones and put the rubber plug back in place. The LED will go out.

HOW TO CHARGE THE HEADPHONE BATTERY (CONT'D)

NOTE: LED will flash in white and a signal tone will sound during low battery level in Bluetooth mode. Before using the headphones, you must fully charge the battery and connect the headset to your Bluetooth device. Charge time is 2.5 hours.

BLUETOOTH PAIRING

Bluetooth mode only works if no cable has been connected. As soon as you connect the headphones to a USB charger to charge or operate the headphones via a connector cord, Bluetooth mode will automatically be deactivated. You can connect compatible devices such as most smartphones with your headphones via Bluetooth. The audio output of your smartphone is then emitted via Bluetooth.

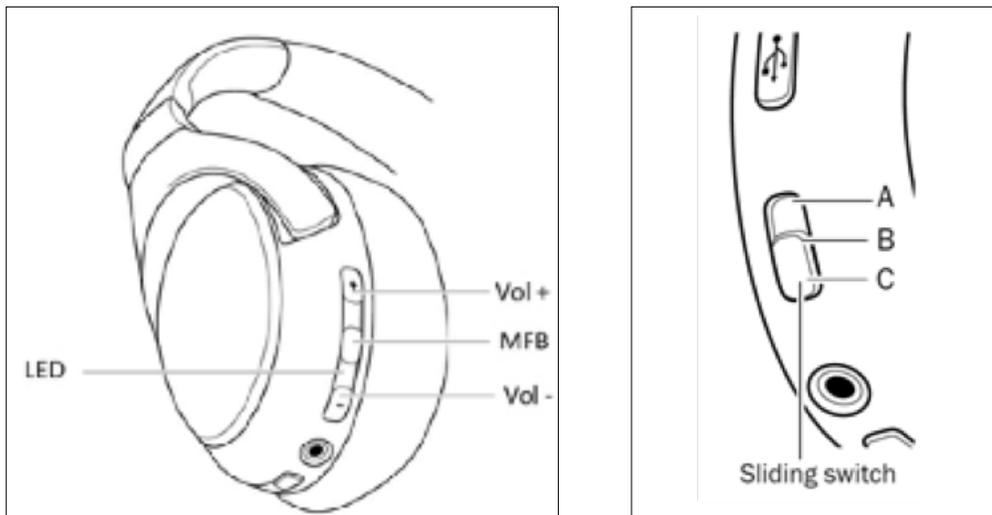

1. Set the sliding switch to position B or C. The headphones will then be in pairing mode. The LED will blink blue.
2. If the LED doesn't blink blue, hold the MFB button down for 2 seconds. Pairing mode will now be reactivated and the LED will blink blue.
3. Turn on the Bluetooth function on your device [e.g. smartphone].
4. Your smartphone will search for Bluetooth devices, and "SI Audio" should appear in the detected devices list.
5. Select "SI Audio" from the list. If your device requires the entry of a PIN code, enter the PIN code "0000" set by factory default. A signal tone will sound if the headphones and your Bluetooth device are connected.
6. To terminate the Bluetooth® connection, switch off the Bluetooth function on your device.

HOW TO RECONNECT HEADPHONES

If your headphones have been previously connected with your smartphone, enabling the Bluetooth function on your smartphone is all you have to do to connect the two devices.

HOW TO RESET HEADPHONES

To reset the Bluetooth pairing settings, move the sliding switch to position B or C. Hold down the MFB and Vol - simultaneously for approximately 4 seconds. The LED will blink twice in blue and the Bluetooth pairing settings will have been reset.

HEADPHONES CONTROL WHILE CONNECTED WITH SMARTPHONES

Headphones function	Control List
Accept incoming call	Press MFB once
Reject incoming call	Press and hold the MFB for 2 seconds
End the current call	Press MFB once
Mute the current call	Press both Vol + & Vol - once
Hold the current call and accept incoming call	Press the MFB once during the incoming call
Voice dialing	Press and hold the MFB for 2 seconds when smart phone is standby
Redial last number	Press both Vol + & Vol - for 3 seconds
Adjust volume up	Press Vol + button
Adjust volume down	Press Vol - button
Play or pause music	Press the MFB Once
Go to the next track	Press & hold the Vol + button for 2 seconds
Go to the previous track	Press & hold the Vol - button for 2 seconds

ACTIVE NOISE CANCELLATION FUNCTION CONTROL

Moving the sliding switch on your headphones activates the following functions:

- Position A: Bluetooth and ANC are disabled.
- Position B: Bluetooth is enabled [LED is illuminated in blue].
- Position C: Bluetooth and ANC are enabled [LED briefly blinks blue twice].

NOTE: If you connected the headphones via a cable, you can activate the ANC function by moving the sliding switch to position C.

SPECIFICATIONS

Dimensions:	180*165*80mm
Ear-cup housing dimensions	54*74*50mm
Slider arm dimensions	58*73*15mm
Headband dimensions	156*102*21mm
Headphone weight	around 254.3g
Speaker type	Φ40mm, 32 ° Neodymium Driver

SPECIFICATIONS

Rated input Power	20 mW
Max. input Power	30 mW
Max. power	200 mW
Frequency response	20Hz to 20kHz
Sensitivity	88± 3dB [IEC-318 coupler at 1kHz1Mw, ANC ON] / 85± 3dB [IEC-318 coupler at 1kHz1Mw, ANC OFF]
L/R Channel imbalance	≤3dB at 1KHZ
ANC performance	>-18dB
Bluetooth specification	V4.1 with Apt-X codec
Bluetooth solution	CSR8645
Bluetooth interface	HSP, HFP, A2DP, AVRCP
Charger input voltage	5V
Battery	Li-ion Polymer, 610mAh, 3.7V
Play time	≥20hrs[While BT & ANC are working at middle volume]
Time to fully charge	2.5hrs

WARRANTY/CUSTOMER SERVICE

Sharper Image branded items purchased from SharperImage.com include a 1-year limited replacement warranty. For Customer Service, please call 1 (877) 210-3449.

SHARPER IMAGE®

If you have any questions not covered in this Product Manual, please call
Sharper Image Customer Service at 1 (877) 210-3449.