

MAXX DRYXL



MaxxDryXL™ Shoe, Boot & Glove Dryer - MX00201



Contents: 1 MaxxDryXL™ Shoe, Boot & Glove Dryer, 2 Extra Long Drying Tubes and 2 Boot Anvils.

INSTRUCTION MANUAL

**BEFORE RETURNING THIS PRODUCT
FOR ANY REASON PLEASE CALL
1-888-330-9452**

**IF YOU SHOULD HAVE A QUESTION OR EXPERIENCE
A PROBLEM WITH YOUR MaxxDry™ PRODUCT
CALL 1-888-330-9452**

Before you call, please have the following information available: Product MODEL number which is located below the UPC code on the outside of the product box and the store receipt with purchase date. In most cases, a MaxxDry™ representative can resolve the problem over the phone or via email and if not, can direct you to an authorized service center. If you have suggestions or comments, please send them via email to: info@maxxdry.com. Your feedback is vital to MaxxDry™.

SAVE THIS MANUAL FOR FUTURE REFERENCE

GENERAL SAFETY RULES

WARNING! READ AND UNDERSTAND ALL INSTRUCTIONS.

Failure to follow all instructions listed may result in electric shock, fire and/or serious personal injury.

SAVE THESE INSTRUCTIONS

AREA OF USE:

- Keep surrounding area clean and well lit. Cluttered areas invite accidents.
- Do NOT operate in explosive atmospheres, such as in the presence of flammable liquids, gases or dust.

ELECTRICAL SAFETY:

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do NOT modify the plug in any way.

- Do NOT override the timer switch.
- Do NOT operate in standing water.
- Do NOT overload with garments.
- Do NOT cut-off or restrict air circulation.
- Do NOT expose MaxxDryXL™ to rain or snow.
- Use of attachments not recommended or sold by MaxxDry™ may result in a risk of fire, electric shock, or injury to persons.
- To reduce risk of damage to electric plug and cord, pull by plug rather than cord when disconnecting unit.
- Make sure cord is positioned so that it will not be stepped on, tripped over or otherwise subjected to damage or stress.
- An extension cord should not be used unless absolutely necessary. Use of improper extension cord could result in a risk of fire, electric shock or electrocution.
- Two-wire cords can be used with 2-wire or 3-wire extension cords. Only round jacketed extension cords should be used and we recommend that they be listed by Underwriters Laboratories (U.L.). If the extension cord is to be used outside, it must be suitable for outdoor use. Any cord marked for outdoor use can also be used for indoor use. The letters “W” or “WA” on the cord jacket indicate that the cord is suitable for outdoor use.
- An extension cord must have adequate wire size (AWG or American Wire Gauge) for safety and to prevent loss of power and overheating. The smaller the gauge number of the wire, the greater the capacity of the cable; that is, 16 gauge has more capacity than 18 gauge. When using more than 1 extension to make up the total length, be sure each extension contains at least the minimum wire size.

ANNOUNCEMENT:

- The MaxxDryXL™ generates a gentle breeze, a light wind that evenly dries garments so as not to harm. It is not a hair dryer and is not designed to force a powerful current of air through garments.
- The MaxxDryXL™ only heats to a gentle temperature. It is not designed to generate high heat as this would damage footwear.

MaxxDry.com

OPERATING INSTRUCTIONS:

1. Plug the MaxxDryXL™ into any standard 120 Volt 60 Hz electrical outlet.
2. Install the 2 extension tubes with anvils provided when drying boots up to 16" tall. MaxxDryXL™ dries boots and gloves together or 2 pair of boots and other types of shoes simultaneously by utilizing the two 14" extension tubes supplied in the box. Remove the 14" extension tubes and anvils if you wish to dry athletic shoes or low back boots only or gloves, children's shoes or mittens-drying up to 4 garments simultaneously.
3. Carefully slide footwear onto drying tubes or drying nozzles being careful not to restrict air flow at the bottom or block air flow into the blower assembly.
4. Select the heat or no heat setting by pressing the rocker switch at the bottom of the motor housing.
5. Turn timer knob clockwise to the 180 minute mark to initially activate the timer switch (please note as this is very important), then turn knob counter-clockwise back to desired drying time.

HELPFUL TIPS:

1. The MaxxDryXL™ creates a gentle breeze to dry garments gently it is not a hair dryer and does not create a forceful wind.
2. When placing gloves, mittens or children's boots and shoes onto the drying tubes or drying nozzles, be sure not to pinch air circulation.
3. Footwear should be dried after every use to help prevent bacteria and fungus growth, the primary cause of odor.
4. Smaller footwear and garments will dry quicker than larger items.
5. Your energy efficient MaxxDryXL™ heats to a gentle temperature of around 105° Fahrenheit and uses "Forced Air" technology quietly and quickly dries wet garments, but it does not generate a forceful air stream that might possibly damage.
6. At first you may suspect the unit is not operating properly. We recommend you place the back of your hand near the drying nozzles so you will better feel the gently warmed air stream and to experience the heat, place footwear and garments onto the drying nozzles for a period of 30 minutes then touch inside the garment to feel the gentle heat.
7. Remove extensions to dry Ski Boots.

OPERATION TIME:

- Timer must turn past 1 hour to activate. For drying time less than 1 hour, turn timer knob clockwise past 1 hour mark and counter clockwise back to desired time.
- 1 to 3 hours, but please avoid over-drying.
- Drying time varies depending upon extent of moisture as well as temperature and humidity.
- We recommend a minimum of 1 hour every time your shoes or boots are used.
- While in operation, the unit although relatively quiet, produces minimal noise. This is a normal condition and does not indicate a problem.

MAINTENANCE:

Use only mild soap and a damp cloth to clean the MaxxDryXL™. Never let any liquid get inside the motor. Never immerse any part of the motor into liquid.

IMPORTANT:

To assure product SAFETY and RELIABILITY, repairs and maintenance (other than those listed in this manual) should be performed by authorized service centers or other qualified service organizations, always using identical replacement parts.

LUBRICATION:

MaxxDry™ products are properly lubricated at the factory and are ready for use.

ACCESSORIES:

Recommended accessories for use with your MaxxDryXL™ are available from MaxxDry.com. If you need assistance regarding accessories, please call: 1-888-330-9452 or email: info@maxxdry.com.

 **CAUTION: The use of any accessory or attachment not recommended may be hazardous and may void warranty.**

SERVICE INFORMATION:

MaxxDry™ Service Center is staffed with trained personnel to provide customers with efficient and reliable product service. Whether you need technical advice, repair, or genuine factory replacement parts, contact: Eric Ferguson/Electric Innovations at the MaxxDry™ Service Center at: electricinnovations@roadrunner.com.

FULL ONE (1) YEAR USE WARRANTY:

MaxxDry™ (U.S.) warrants this product for One (1) Year against any defects in material or workmanship. The defective product will be replaced or repaired at no charge in either of two ways.

The first, which will result in exchanges only, is to return the product to the retailer from whom it was purchased (provided the store is a participating retailer). Returns should be made within the time period of the retailer's policy for exchanges (usually 30 days after the sale). Proof of purchase may be required. Please check with the retailer for their specific return policy regarding returns.

The second option is to take or send the product (prepaid) to a MaxxDry™ authorized service center for repair or replacement at our discretion. Proof of purchase, store name and date of purchase may be required.

This warranty does not apply to accessories. This warranty gives you specific legal rights and you may have other rights which vary from state to state. Should you have any questions, contact the service center. This product is not intended for commercial use.

THE FOLLOWING WILL NOT BE COVERED UNDER WARRANTY:

- Any modification to MaxxDryXL™
- Product has been misused or improperly cared for
- Products over One (1) Year from date of original purchase
- Warranty request without original receipt
- Repairs done by anyone other than MaxxDry™ or a MaxxDry™ authorized repair facility

In consideration of the above promises by MaxxDry™, the buyer agrees to and accepts the following conditions:

1. That this warranty is in lieu of all other warranties, expressed or implied.
2. That all warranties OF MERCHANTABILITY OR OF FITNESS FOR A PARTICULAR PURPOSE ARE HEREBY EXCLUDED OR WAIVED.
3. That the buyer's sole remedy shall be to obtain replacement of the product free of charge from MaxxDry™ provided any and all warranty defects fall within the warranty period and meets all warranty provisions.
4. That this remedy is in lieu of all other remedies or claims for damages, consequential or otherwise, which the buyer may have against MaxxDry™.