

# SHARPER IMAGE®


## Glow-in-the-Dark Dart Blaster

Item No. 206334


User's Guide

Thank you for purchasing the Sharper Image Glow-in-the-Dark Dart Blaster. This unique toy features a built-in light that charges up the included glow in the dark darts. See your darts fire through the darkness for exciting nighttime action!


### DART BLASTER OVERVIEW:

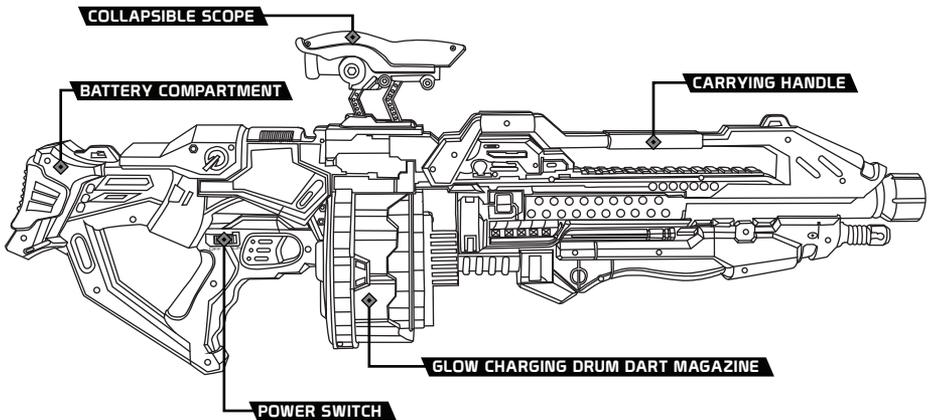

## LOADING DART BLASTER

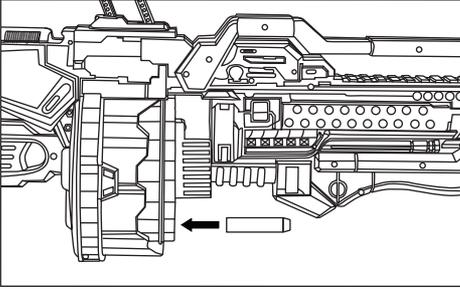


Load darts into the drum magazine.

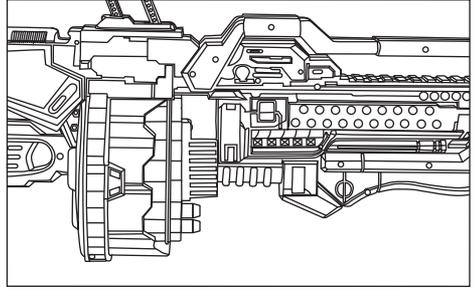


Make sure to completely push darts into tubes.

## OPERATING DART BLASTER

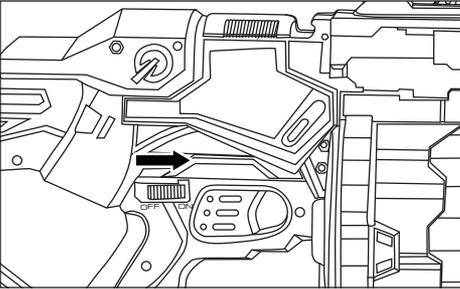


Switch power button to ON position.

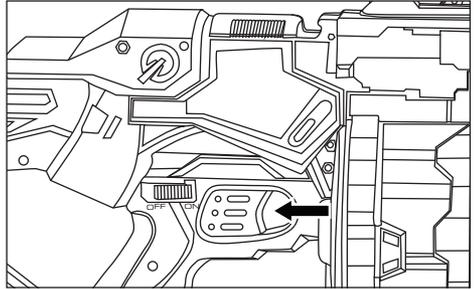


Squeeze trigger to fire a single dart, each trigger pull will fire another dart.

## ADJUSTING TACTICAL SCOPE

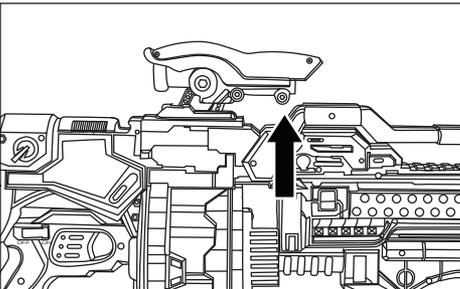


Pull scope up to the desired height.

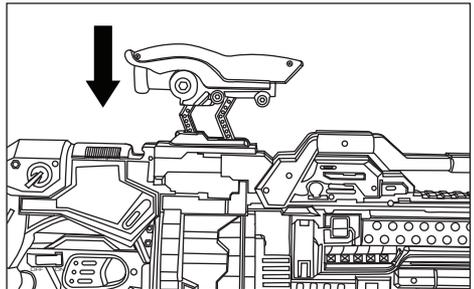


Push down scope to the desired height.


# CHARGING BATTERY

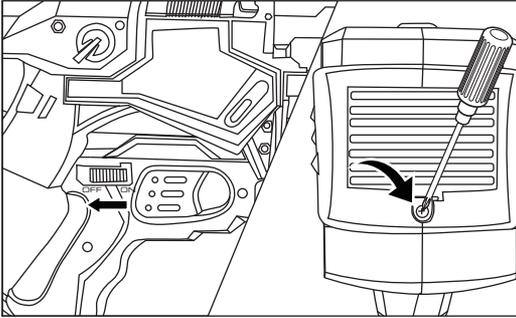

1. Switch off the blaster and remove the screw on the battery cover. Remove the cover completely.

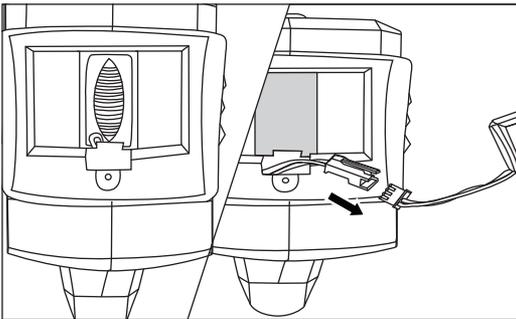

2. Remove the battery from the battery bay and disconnect the battery cable from the blaster's power port.

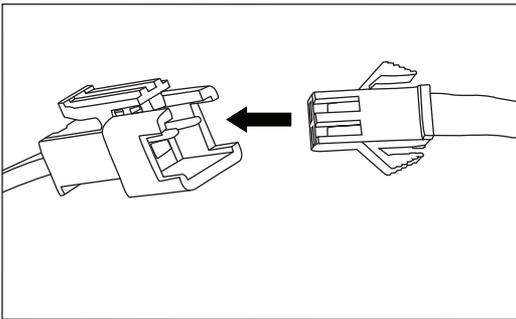

3. Plug the supplied USB charger into a powered USB port. Connect the battery cable to the USB charger for approximately 60-120 minutes. Disconnect once charged, do not leave charging overnight.

## BATTERY PACK SPECIFICATIONS

Battery Type	Battery Specification	Charge Time
Ni-Cd Battery	4.8v AA700mAh	60 - 120 Minutes

### CAUTION WHILE CHARGING:

Do not charge with batteries still installed. Do not charge battery unsupervised. Do not immediately charge after use. Do not overcharge battery. Ideal charge time is 60 - 120 minutes. Overcharging can cause a catastrophic failure. Always charge on dry and ventilated areas away from any heat source or flammable materials. Always use the original charger provided. Promptly change and replace old or defective batteries.

# TROUBLESHOOTING DART BLASTER

PROBLEM	CAUSE	SOLUTION
Blaster does not turn on/respond.	Blaster battery pack is drained.	Recharge blaster battery pack.
Blaster does not fire.	Blaster is not powered ON.	Turn power switch to ON position.
	Blaster battery pack is drained.	Recharge blaster battery pack.
	Blaster has dart obstruction.	Turn off and check dart chamber and remove any obstructions.
Blaster trigger not working.	Power is OFF.	Turn power switch to ON position.
	Blaster battery pack is drained.	Recharge blaster battery pack.
Darts are firing inconsistently.	Darts are damaged.	Replace the damaged darts.
	Blaster battery pack is drained.	Recharge blaster battery pack.
	Blaster has dart obstruction.	Turn off and check dart chamber and remove any obstructions.

## IMPORTANT TIP:

This Glow-in-the-Dark Dart Blaster package includes a long plastic tube. Do not discard! This tube can be used to dislodge jammed darts in the event of a misfire.

## WARRANTY/CUSTOMER SERVICE:

Sharper Image branded items purchased from SharperImage.com include a 1-year limited replacement warranty. For Customer Service, please call +1 (877) 210-3449.

SPECIFICATIONS,  
COLORS AND CONTENT  
MAY VARY FROM ILLUSTRATIONS

MADE IN CHINA

# SHARPER IMAGE®

The SHARPER IMAGE® name and logo are registered trademarks.  
©Sharper Image. All Rights Reserved.

