

# SHARPER IMAGE®

## MEN'S HEATED PUFFER JACKET

Item No. 206595

### User Guide

## HOW TO TURN ON




To turn the jacket on, hold down the heat button for 3 seconds until light comes on.


## CHANGING THE HEAT SETTINGS




To change the temperature, press the heat button to cycle through the desired heat settings.

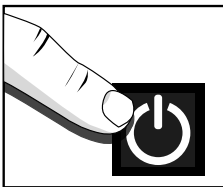

Turn ON by holding down for 3 seconds

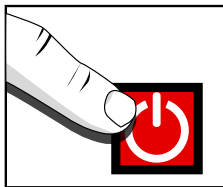

Press again to change heat settings

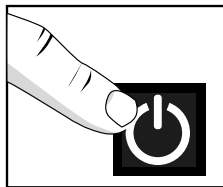


Turn OFF by holding down 3 seconds


## 3 HEAT SETTINGS



Blue [Low]

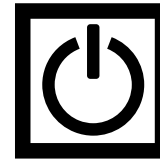


White [Medium]

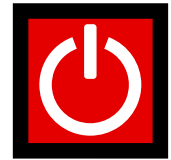

Red [High]

## CONNECTING THE JACKET

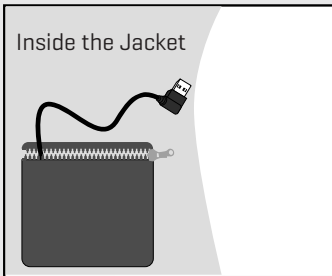


Built-In USB Connector

Connect the built-in jacket USB connector (located inside the battery pocket) to your power bank. Then unplug the jacket from the power bank when not in use.

### Estimated Power Duration Based on 10,000 mAh

Low Setting	13 Hours
Medium Setting	8 Hours
High Setting	4 Hours

## MACHINE WASHABLE

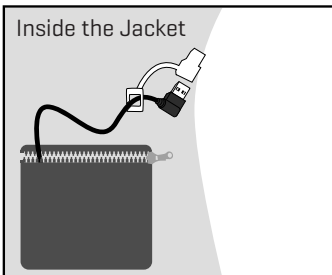

USB Protector

Disconnect the power bank from the jacket. Cover the USB connector in the jacket with the built-in protector before washing.

Sharper Image branded items purchased from SharperImage.com include a 1-year limited replacement warranty. For Customer Service, please call +1 (877) 210-3449.

1. Plug Micro USB cord into the computer's USB port or USB wall charger
2. Plug USB power bank into Micro USB port
3. All 4 lights will stay lit when fully charged



USB Output  
Charging Input  
Power Indicator  
Power ON/OFF