



KINGDOM CARES[®]
Warm Mist Facial Steamer
INSTRUCTION MANUAL

If you have any questions or suggestions,
send your requests by E-mail to:
sales@prosperacorp.com



Model:KC-1332

GREETING

IMPORTANT SAFETY INSTRUCTION

Please follow the USAGE for using the product. Please do not take the device for other uses which are not indicated on the instruction manual. Basic safety precautions should be taken when use electric appliances as following:

WARNING

1. Do not use this product near a full bath, sink, or any vessel containing water.
2. Do not use or store the appliance in bathroom or in the rooms with high humidity, otherwise, it may result in electric shock or fire.
3. Do not use the appliance while taking a bath or shower
4. Keep the appliance away from water and liquid or humidity to avoid electric shock.
5. Do not use the appliance or unplug by wet hands. Only when your hands are dry can you use it, or it may lead to electric shock or short circuit of power supply.
6. The following persons should not use this appliance.
(1) Women who are pregnant or currently in a menstrual period (because it may cause (2) skin problems due to hormone imbalance.)
(3) Persons who have allergies, skin diseases, atopic dermatitis, or sensitive skin.
(4) Persons who have skin problems, such as dermatitis, severe sunburns, etc.
(5) Persons with skin injuries, eczema, swelling, etc.

TABLE OF CONTENTS

1. IMPORTANT SAFETY INSTRUCTIONS
2. ABOUT YOUR PRODUCT
3. OPERATING INSTRUCTIONS
4. MAINTENANCE INSTRUCTIONS
5. TROUBLESHOOTING
6. SPECIFICATIONS
7. WARRANTY
8. OFFICIAL REGISTER AND NEWS INFORMATION

- (6) People who are recovering after operations.
7. Immediately stop using if you are experiencing any pain or abnormalities on your skin or throughout your body. Stop using the appliance if skin troubles occur while using the steam.
8. Please unplug the plug in the following condition:
- (1) Unplug after use, otherwise, it may cause personal injury or accident.
 - (2) Unplug the plug while filling with water or cleaning the appliance.
 - (3) Unplug the plug while the appliance are not being used for avoiding fire or accident.
 - (4) Unplug the plug if the appliance is working in an abnormal way.
9. Do not use the appliance under the following conditions.
- (1) When the plug is loose in the power outlet.
 - (2) When the power cord or the plug is damaged or getting hot.
 - (3) When the power cord is damaged, modified, dragged or twisted.
 - (4) When the appliance is broken or working in an abnormal way.
10. Do not damage, modify, drag, twist, or pull out the power cord by force.
11. Do not wrap the power cord around the appliance to avoid deformation of cord, which may cause failure of the appliance.
12. Do not place anything heavy on the cord and do not pinch the cord.
13. Don't touch any metal on the plug when

plugging in the plug, otherwise, it may cause accident.

14. Do not let pins or dirt get attached to the end of the appliance plug.

15. Do not immerse the appliance in water or directly add water under water faucet. Use a water supply tool to supply water for the appliance and make sure that the appliance or the power switch do not get wet when filling the water tank.

16. Do not use the appliance near flammable substances (alcohol, thinner, benzene, enamel remover, aerosol sprays, etc.), otherwise, it may result in explosion or fire.

17. Do not drop or hit the appliance. If this appliance sustains damage from being dropped or hit, please do not continue to use it.

18. Do not insert metal objects such as pins, wires, or any other foreign objects in the steam outlet and do not block the steam outlet, otherwise, it may result in electric shock and damage to the appliance.

19. Do not attempt to modify, disassemble, or repair the appliance or the power cord by yourself. Contact the service center for repairs.

CAUTION

1. Periodically clean to avoid dust accumulate on the plug.

2. Always ensure the appliance is operated on an electric power source which matched the rated voltage indicated on the appliance.

3. Ensure that the plug are plugged in completely,

otherwise, it may result in fire, electric shock, burns or scalding.

4. Use only distilled water or purified water, or it may result in equipment malfunction, or in serious cases, burns or scalding. Adding milk or essential oil may shorten the service life of the appliance.

5. Keep your face and hands at least 25 cm (9.8") from the nozzle.

6. Do not tilt, shake, or move the appliance during use or within 10 minutes after use. Doing so may cause water to spill out, or a large volume of steam to be emitted from the steam outlet, which may cause injuries and dangers.

7. Steam continues to be emitted (for about 1 minute) after the power has been cut off. Stay away from the steam outlet at least 25 cm (9.8").

8. Use the appliance on a flat surface. Not for handheld use.

9. Please turn off the power, unplug the plug if the product need to be moved. Please move horizontally.

10. Do not touch or look into the steam outlet during use.

11. Do not spray eyes directly.

12. Except when cleaning, do not shake the main unit when it contains water.

13. Please do not drain or add water through the steam outlet.

14. This appliance is not intended for use by persons (including children) with reduced physical, heat sensory or mental capabilities, or lacked of electrical appliance using experience and

knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance. Keep the appliance and the attached products such as packing materials and plastic bag away from infants and children to avoid injuries and accidents.

15. After use, the appliance should be cleaned to avoid the accumulation of grease and other residues.

16. Do not unplug by dragging or pulling the power cord. Do not removing the appliance by dragging or pulling the power cord.

17. This steamer is for basic home use, not intended for medicinal purposes.

ABOUT YOUR PRODUCT

Product Introduction

KINGDOMCARES Warm Mist Ionic Facial Steamer, portable face steamer humidifier works for beauty facial treatment. Facial sauna spa quality system skin kit with automatic shut-off timer setting, nano ionic hot mist face sprayer is designed for skin moisturizing. The nanocare face steamer can provide you professional salon sauna spa at home, working for aromatherapy microdermabrasion, pores deep cleansing, blackheads whitehead acne removal. Multifunctional ozone steamer help skin hydrate and rejuvenate to youthful complexion.

Effect and Characteristic

1. High Quality Heating Element with Ultrasonic Vaporizer Produces Nano Steam with Negatively Charged Ionic Particles: The hot mist facial steamer takes advanced PTC ceramic heating element to vaporize water, producing visibly strong steam instantly through high frequency ultrasonic vibration. You can easily have a delicate beauty SPA at home. Tiny nano ionic steam penetrate skin and supplement moisture effectively, improving skin nutritional absorbency, relieve sinuses. Skin feel refreshed and maintain a beautiful natural-looking.

2. Multifunctional New Type Steamer: 3-in-1 steamer is not only good for skin care, but also it can humidify room and warm towels for ultimate refreshment. A larger 100ml water tank allows for 15-18 minutes of working time with a completely silent operation, long running time. One press button operation, easy and convenient for your beauty routine. High-tech ozone function is provided to sterilize. A UV lamp sterilizes steam so that it can reach your skin with purest most effective condition.


3. Skin Cleansing, Quick Moisture Replenishment and Absorption Improving: Nano ionic water particles are up to 10x more effective for penetrating skin. A tepid and gentle temperature unclog pores to remove skin dirt and promote blood circulation. Followup your steaming session with blemish extractor kit to remove blackheads and blemishes can achieve the best skin cleansing effect. It can improve cell vitality and nutritional-

absorption to help skin restore to a smooth, delicate skin condition.

4. High-end Design, Smart Shut-off Features: Facial steamer shuts off automatically if there is no water in the water supply tank, preventing any injury. It is in stylish, compact and sleek design. It can be used on normal, oily, dry, combination and sensitive skin types, helping skin recover to a tender younger and healthier condition.

OPERATING INSTRUCTIONS

Name of parts

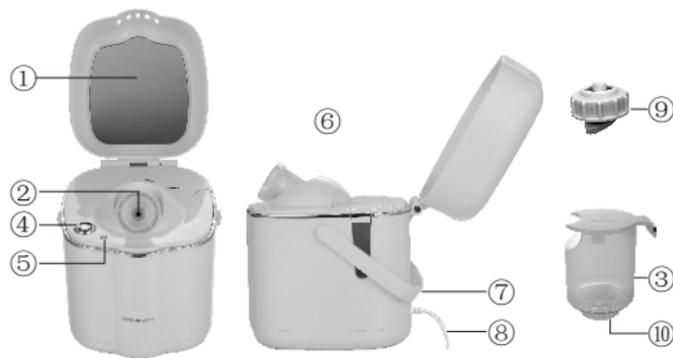

① Make-up Mirror

② Steam Outlet

③ Water Supply Tank

④ Power Switch

⑤ Indicating Light

⑥ Cover

⑦ Handle

⑧ Power Cord

⑨ Water Supply Cap

⑩ Water Inlet

How to use

When the appliance is used for the first time, some water may remain around the water supply tank. This is residual water used for inspection in the factory and doesn't cause any sanitation problems.

(1)Preparation before use

- 1.Place the main unit on a flat surface. Place the appliance on a flat, level and solid surface during use, such as a desk, etc. When the appliance is working, do not hold it in your hand. Do not lie down to steam. If the appliance is not standing straight, the water supply tank cannot supply water to the main unit and there is no steam released.
- 2.Open the cover and remove the water supply tank from the main unit. Unscrew and open the water supply cap.
- 3.Fill the water supply tank with purified water and screw the water supply cap. Please use a container to fill for the water supply tank. Do not fill the water supply tank under water faucet directly or fill water from the steam outlet. After filling water for the water supply tank, do not press the water supply cap, or it may cause water leak from the tank and result in electric shock or fire.
- 4.Wipe away any water on the surface of the water supply tank.
- 5.Put the water supply tank toward the main unit until it completely fits into the main unit. Water is supplied to the main unit and water in the tank decreases when the tank is attached to the main

unit. Please don't remove or separate the water supply tank and the main unit during use, or it may cause water leak from the tank and result in electric shock or fire.

Notice

- (1)Before using the steamer for the very first time, please let it run with a full tank of water, and add a few drops of lemonade to the water to dispel peculiar smell.
- (2) Since the service life of the appliance may be shorten depending on water quality, distilled water or purified water is recommended. Do not mix the water with any other substance, such as lotion, aromatic oil, milk etc. Doing so may cause burns, malfunctions, or shorten the life of the main unit.The following types of water cannot be used due to its high mineral content.
 - a.Tap water
 - b.Mineral water
 - c.Geothermal water
 - d.Acidulated water
 - e.Groundwater
 - f.Ionized alkaline water

(2)How to use the steamer

- 1.Plug in the plug into the power outlet properly to connect the appliance with power supplies.
- 2.Press the power switch for once, the indicating light is in blue.
- 3.The steam is released after about 15 seconds. After 20 seconds the steam will achieve to a normal degree. A UV lamp in the steam outlet will be on to

sterilize steam so that it can reach your skin with purest most effective condition.

4. Adjust the steaming angle for your convenience. The steam is in high temperature, to avoid burning, keep your face at least 25 cm (9.8") away from the steam outlet.

5. A full tank of water can be run for about 18-20 minutes. It should be used once a day, 10 min steaming time for once, a maximum of 2 times for one day. 2~3 times for normal skin type and once for sensitive skin type for a week.


6. Press the power switch again to turn off the steamer after 10 minutes spraying.

(3)After Use

1. Unplug the plug from the power outlet. Do not tilt, shake, or transport the main unit within 10 minutes after use. Place the steamer to cool down for at least 10 minutes.

2. Take out the water supply tank and unscrew the cap. Wipe away any water on it.

3. Discard the leftover water from the install part for the water tank(as shown on the diagram).When disposing of the water, hold the main unit so that your hands are not burned by the hot water. Failure to do so may result in burns.

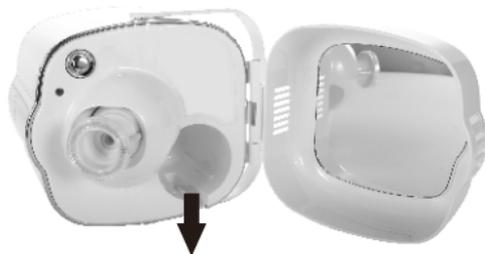

4. Wipe away any water on the surface of the main unit.

(1)Kindly remind

1. An automatic power-off system is set to prevent water from running out of for avoiding the dry burning accident and ensuring safety.

2. After using, please discharge leftover water of the water supply tank and the main unit.

3. Excessive use is detrimental to the skin. Basic skin care and moisturizing with lotion are required after using the steam. Not performing skin care after using the steam may cause the moisture in your skin to evaporate easily, drying out your skin.

4. When the remaining water is at a low level, the steam is released in a discontinuous way. This is not a malfunction.

5. If there is no water in the water supply tank, no steam will emit from the steam outlet. Please turn off the appliance.

6. You may hear a slight whizzing. This is normal. A little water may be sprayed out when the appliance starts emitting steam. This is not a malfunction.

7. Please don't remove or separate the water supply tank and the main unit during use, or it may cause water leak from the tank and result in electric shock.

MAINTENANCE INSTRUCTIONS

1. After use, the steamer should be cleaned to avoid the accumulation of grease and other residues.

Cleaning:

(1) Remove the water supply tank from the main unit.

(2) Use a container to fill the water supply tank with water and screw the water cap.

(3) Attach the water supply tank to the main unit. Hold the water supply tank and the main unit with both hands, shake the appliance horizontally 3 to 4 times with gentle force without tilting.

(4) Remove the water supply tank from the main unit. Discard the water in the main unit and the water supply tank.

(5) Return the appliance to a flat position. Use a dry cloth to wipe away the water on the surface of the water supply tank and the main unit.

2. Periodically clean to avoid dust accumulation on the plug. Use a dry cloth to wipe away dust on the power cord once a month.

3. Dispose any water in the water supply tank and main unit when not using the main unit for extended

periods of time (several weeks or more). Store the main unit only when it is completely dry.

4. Please do not use the cleansers which are corrosive or has the substance of volatile diluent.

5. Don't use the sharp objects or the cleansers which are corrosive or has the substance of volatile diluent to cleanse the device.

TROUBLESHOOTING

PROBLEM	CAUSES	SOLUTIONS
No steam released	Water is at a low level	Refill the water supply tank
	Filling with mixed liquid	Fill with distilled water or purified water
	Atomizer plate is dirtied	Clean the atomizer plate with a little vinegar
	The appliance was damaged during the transportation	Contact us for after-sale service
	Fail to connect the appliance with power	Plug in the plug into the power outlet properly, or change

	supplies	another power outlet, or contact us for after-sale service
Steam released in a low level	The appliance was damaged during the transportation	Contact us for after-sale service.
	The Air Intake is blocked	Contact us for after-sale service
	The appliance was immersed by water, which causes the automatic protect of internal circuit.	Contact us for after-sale service
Fail to turn on the appliance	The appliance was damaged during the transportation.	Contact us for after-sale service
	The appliance was immersed by water, which causes the automatic protect of internal circuit.	Contact us for after-sale service
Please turn off the power, unplug the plug if you still can 't solve the problem and contact us for after-sale service.		

SPECIFICATION

Specification

Product Name: Warm Mist Facial Steamer
 Model Number: KC-1332
 Rated Power: 280W
 Rated Frequency: 60Hz
 Rated Voltage: AC 110-120V

Packing

Net Weight: 2.38lbs
 Gross Weight: 3.35lbs
 Packing Detail: Facial Steamer
 Instruction Manual

WARRANTY

THIS WARRANTY IS VALID ONLY IN THE PRODUCT PURCHASED COUNTRY.

Please operate this product according to the instructions provided. For a product failure which is not damaged by the user within warranty period, our company will cover the costs of repairing the product; After the warranty period, we will charge certain fee for repairing the product according to the damage extent. This limited warranty lasts for 90 days from the date of original purchase of this product.

**If you have a claim during the KINGDOM CARES
warranty period**

(1) Please send your request by e-mail,
sales@prosperacorp.com

**Customers shall NOT have any claim with this
warranty for repairs or adjustment expenses if:**

- (1)The problem is caused by improper, rough or careless treatment;
- (2)The problem is caused by a fire or other natural calamity;
- (3)The problem is caused by improper repair or adjustment;
- (4)The proof of purchase is not presented when requesting service;
- (5)The warranty period has expired.