

SHARPER IMAGE®

ILLUMINATING ELECTRIC SALT AND PEPPER MILL SET

Item No. 206901

User Guide



Thank you for choosing the Sharper Image Illuminating Electric Salt and Pepper Mill Set. Please take a moment to read this guide and store it for future reference.

LOADING BATTERIES

Step 1:


The batteries load into a chamber located on the top of the mill. There are arrows located on the backside of the mill that indicate the locked and unlocked positions. To open the battery compartment, hold the mill body [B] and turn the top of the mill [A] counterclockwise until the top arrow aligns with the bottom right-hand arrow. Remove the top of the mill.

Step 2:

The battery charges are clearly marked on the top and bottom of each battery slot. Insert 6 AAA batteries. Insert the batteries into the corresponding slots, correctly matching the charge symbols.

Step 3:

Replace the top of the mill [A], aligning the arrows on the right-hand side. Holding the mill body [B], turn the top of the mill clockwise. The top arrow will shift to the left indicating that the mill has locked.

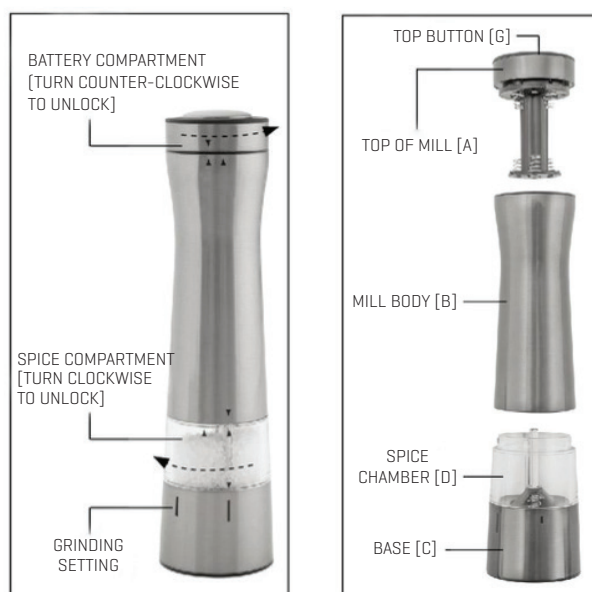

FILLING YOUR MILLS

Step 1:

The spice chamber can be filled with a variety of spices: Sea salt, peppercorns, red pepper flakes, coarse sugar, etc. There are arrows located on the backside of the mill that indicate the locked and unlocked positions. To open, hold the spice chamber [D] and turn the mill body [B] clockwise until the top arrow aligns with the bottom left-hand arrow. Remove the body from the chamber.

Step 2:

Fill the spice chamber [D] with your desired spice. Fill to about 80% [right below the arrow markings]. [See figure 1]

Step 3:

Reposition the mill body [B] onto the spice chamber [D] aligning the arrows on the left-hand side. Make sure the contact points [E] on the mill body fit snugly over the contact surface [F] of the chamber. [See figure 2]

Step 4:

Hold the spice chamber [D] and turn the mill body [B] counterclockwise. The top arrow will shift right, indicating that the mill is locked.

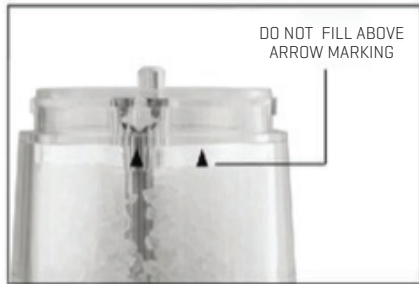


FIGURE 1



FIGURE 2



FIGURE 3

INSTRUCTIONS

Step 1:

The mill features six [6] adjustable grinding settings. Each setting is denoted by a line on the base [C]. The size of the line directly corresponds with the grind size.

Coarse grind: Long line

Fine grind: Short line

Step 2:

To adjust the grind, turn the base [C] and align the arrow on the spice chamber [D] with your desired grind setting. [See figure 3] **The base is not designed to turn 360°. Forcing the base in the wrong direction can cause the grinder to jam.**

Step 3: Push the top button [G] to activate the mill.

CLEANING

- To clean your mill, wipe with a damp cloth or sponge.
- Do not use harsh cleaners or abrasive cleaning pads as this may damage the finish.
- Do not submerge the mill in water or let the battery compartment come into contact with water.

TIPS & WARNINGS

- In the event that spices become stuck in the grinder, turn to the coarse setting and push the top button [G] until they release.
- If the mill is not working properly, check the batteries. **DO NOT** mix old and new batteries.
- **DO NOT** mix alkaline, standard [carbon-zinc], or rechargeable [ni-cad, ni-mh, etc.] batteries.
- **DO NOT** drop or strike the mill against hard surfaces. This can cause the mill to malfunction.

WARRANTY / CUSTOMER SERVICE

Sharper Image branded items purchased from SharperImage.com include a 1-year limited replacement warranty. If you have any questions not covered in this guide, please call our Customer Service department at 1 (877) 210-3449. Customer Service agents are available Monday through Friday, 9:00 a.m. to 6:00 p.m. ET.

SHARPER IMAGE®

The SHARPER IMAGE® name and logo are registered trademarks.

©Sharper Image. All Rights Reserved.