

SHARPER IMAGE®

RECHARGEABLE WINE OPENER WITH BUILT-IN INFRARED THERMOMETER

Item No. 206906

User Guide



INTRODUCTION

Thank you for purchasing the Rechargeable Wine Opener with Built-In Infrared Thermometer. Please take a moment to read this guide and store it for future reference.

NOTE: When using electrical appliances, basic safety precautions should always be followed.


INSTRUCTIONS

1. Do not operate electric wine opener with a damaged cord or plug, after the appliance malfunctions, or if it is dropped or damaged in any manner. Return appliance to the nearest Authorized Service Center for examination, repair or electrical or mechanical adjustment.
2. To protect against risk of electrical shock, do not put the electric wine opener in water or any other liquid. This may cause personal injury and/or damage to the product.
3. To protect against fire, do not operate the unit in the presence of explosive and/or flammable fumes.
4. Do not use the electric wine opener for anything other than its intended use.
5. This product is intended for domestic household use only.
6. When using or recharging the electric wine opener, keep your workspace clean and free of potential hazards.
7. For indoor use only. Do not expose the electric wine opener or charging unit to rain or other extreme conditions.
8. Never force the electric wine opener onto a bottle or attempt to speed up the mechanism. The electric wine opener will work best when it is operated at its natural speed.
9. Do not touch or adjust the electric wine opener's mechanism or the corkscrew spiral. Only hold the electric wine opener by its plastic housing.
10. Do not attempt to open bottles if the switch is not working correctly.
11. Do not attempt to disassemble the electric wine opener or the recharging unit. It has no serviceable parts.
12. Only recharge the electric wine opener using the recharging unit and power cord supplied.
13. Never remove the plug from the socket by pulling the power cord.

CAUTION: Corkscrew is sharp. Keep hands and utensils out of the container while operating to prevent the possibility of severe personal injury and/or damage to the product or property.

It is normal for the screen to glimmer when the battery capacity is too low. Please recharge your wine opener soon.

RECHARGEABLE WINE OPENER WITH BUILT-IN INFRARED THERMOMETER:

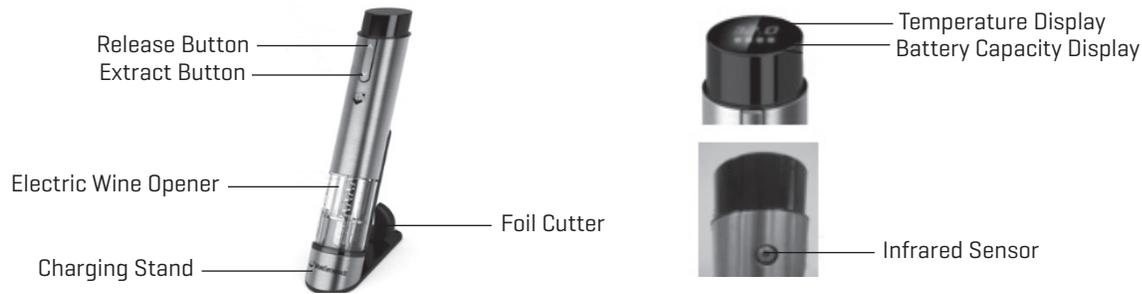

We recommend that you charge your electric wine opener for at least 12 hours before using it for the first time.

Note: The temperature display will be on when connected to the power source and will remain off for about 6 seconds in order to save electricity. It will be activated only if the button is pressed.

RECHARGING YOUR ELECTRIC WINE OPENER

1. Connect the “Jack” of the adapter to the charging base (Fig. 1) and the plug to a compatible power outlet. Place the electric wine opener into the recharging unit to ensure that it is firmly in position and that it is fully engaged.
2. Battery Capacity indication lights will be on when charging. Battery Capacity will flash.
3. When flashing has stopped, Electric Wine Opener is fully charged. Maximum charging time is 12 hours. (Fig. 2)
4. Take out foil cutter to remove the seal on wine bottle. (Fig. 3)
5. Place the Electric Wine Opener on wine bottle, keeping the wine opener aligned with the wine bottle. One of your hands firmly holds the wine opener while the other firmly holds the wine bottle; otherwise the cork will not come out easily. (Fig. 4)
6. Depress the Pull Button. The corkscrew spiral will turn in a clockwise direction entering the cork. Next, gradually remove it from the bottle. When the electric wine opener mechanism automatically stops, the cork has been fully removed from the bottle. (Fig. 4)
7. Lift the electric wine opener away from the bottle. To remove the cork, please depress the Release Button. The spiral will turn counter-clockwise and release the cork. (Fig. 5)
8. When the open and release procedure is finished, battery capacity and room temperature will remain on for 20 seconds, then turn off for sleeping status.



FIG 1



FIG 2



FIG 3



FIG 4



FIG 5

9. If the wine opener is applied continuously, you will see a dimming of the light pane. When the batteries are at very low capacity, the last pane may glimmer. Please stop using electric wine opener and charge it, otherwise, the cork may block the wine opener.
10. Always return the electric wine opener to the recharging unit when finished. This will protect the mechanism while it is not in use.

WINE TEMPERATURE MEASURING

NOTE: In order to have an exact measurement, please remove any liquid on the bottle surface with a dry fabric before measurement, making sure that the infrared sensor keeps close. Liquid and dust greatly affect the precision of the measurement. Keep the infrared sensor clean and free of liquid. If there is dust on the lens of the infrared sensor, please remove it with a soft fabric. Tolerance of temperature is 1-2°C.

1. Available range for environment temperature: -10°C ---- +50°C
2. Available range for wine temperature: -9.9°C ---- +35°C
3. The appliance shows the room temperature when recharging.
4. When measuring, aim the hole of the infrared sensor at the back part of the wine bottle [or other drink]. The closer to the bottle, the more accurate the measurement is. Press the release or extract button for 2 to 3 seconds so that the appliance displays the temperature on top, which will turn off automatically after 10 seconds. In order to have an exact temperature, repeat the above actions three times to make an average temperature.
5. The infrared sensor can measure not only wine and other drinks, but also any other objects. If the object's temperature is higher than 50°C, please keep the infrared sensor away from the object to avoid damaging the device.

NOTE: If the temperature shows “-EE”, that means the temperature of the object is lower than the range. If the temperature shows “EEE”, that means temperature of the object is higher than the range.

WARRANTY AND CUSTOMER SERVICE

Sharper Image branded items purchased from SharperImage.com include a 1-year limited replacement warranty. If you have any questions not covered in this guide, please call our Customer Service department at 1 (877) 210-3449. Customer Service agents are available Monday through Friday, 9:00 a.m. to 6:00 p.m. ET.

SHARPER IMAGE®

The SHARPER IMAGE® name and logo are registered trademarks.

©Sharper Image. All Rights Reserved.