

Getting started with your Airlighter



Using the included cable, charge the Airlighter by plugging it into any standard USB charger (e.g. a smart phone charger or computer). Contact us if you do not have a USB charger.



The RED light indicates that you have a connection and are charging. It turns GREEN when fully charged. A full charge takes about 4 hours.



You need to fill up the Airlighter with butane gas to power flame mode. Turn your Airlighter so that the inlet valve is facing up.



Align the refill canister's nozzle with the Refill Valve of the Airlighter and push firmly downwards for about 5-10 seconds until fuel starts spitting out from the Refill Valve. The spitting indicates that your tank is full.

Wait 5 minutes before lighting to ensure any residual butane has vented away.

Note: only refuel with quality butane gas. Bison Airlighter Chef Grade Fuel burns cleanly and guarantees against clogging the Airlighter. It is available at your local retailer or our website.

Lighting your Fire



Prepare your fire as you would normally. Speed up the lighting of campfires or fireplaces by using crumpled up paper at the base of the firewood.



While sliding the Child Safety Lock to the right, push the Main Control Switch forward to ignite the flame. Repeat if it does not immediately light.



Touch the blue flame directly to your wood or coal until it is ignited. Try not to touch the metal tip to the wood or coals.



Pull the Main Control Switch back to initiate the fan. Aim the airflow at the ignited spot to spread the heat until your fire is strong. For a faster experience, hold the tip of the barrel so that it is almost touching the coal.

Lighting Tip:

Get your grill ready to cook on by continuing on fan mode for 5 minutes or until your grill reaches the desired cooking temperature.



Les instructions françaises sont accessibles sur www.airlighter.com

Special Features



In flame or fan mode you can push the Continuous Button and release the Main Control Switch to free your hands. Stop continuous mode by pushing the Main Control Switch again until the Continuous Button releases.



Search for wood or light your way with the flashlight.



Press the Handle Release Button on the top to choose from three handle positions.



The storage hook on the underneath doubles as a convenient bottle-opener!

LEARN MORE ABOUT YOUR AIRLIGHTER AT:
www.airlighter.com

Safety Precautions

- Never refill near a fire or heat source.
- Never hang from a grill. Don't leave near a heat source.
- Always keep out of reach of children.
- Never point at a person. The flame can be difficult to see in daylight.
- Do not fan your coals with food on the grill or you risk blowing ash onto your food.



Did You Know?

- Airlighter costs just \$.01 to light a fire. This is about 100 times cheaper per fire than standard lighter fluid.
- You have about 30 minutes of blow time when fully charged. An Airlighter can start a fire in as little as 45 seconds of blowing. That's 40 rapid fire lights, on the go!



3 Reasons to Visit our Website

1. See videos for tips on how to use the Airlighter.
2. Make the most of your Airlighter with the latest authorized accessories.
3. Double your warranty for free by registering within 60 days of your purchase.



www.airlighter.com

YOUR
AIRLIGHTER
EXPERIENCE
STARTS HERE...