 


SHARPER IMAGE®

TIKI TORCH OUTDOOR BLUETOOTH SPEAKERS (SET OF 2)

Item No. 207128

User Guide

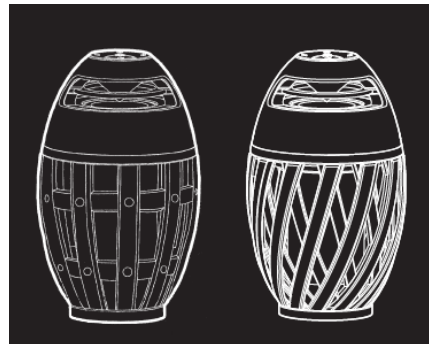 


Thank you for purchasing the Sharper Image Tiki Torch Outdoor Bluetooth Speakers [Set of 2]. Please take a moment to read this guide and store it for future reference.

FEATURES


- Ambient lighting
- Set of 2 speakers
- Bluetooth-enabled speakers
- Includes a MicroUSB cable

LIGHT MODE

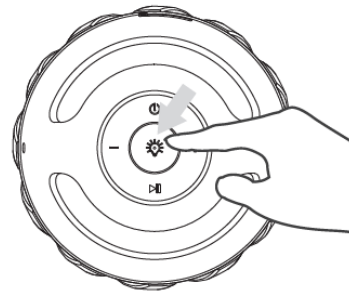

- Press the light mode button once to turn on and once again to turn off

 
BLUETOOTH SPEAKER MODE

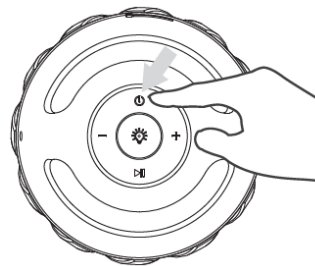

- Press the ON/OFF button for 2 seconds to turn the Bluetooth speaker function ON/OFF
- After pressing the button for 2 seconds, the speaker will go into search mode. A white indicator light will flash when the speaker has successfully connected
- Press the + button [next song/V+Key] to skip to the next song
- Long press the + button to increase volume
- Press + - together to cancel Bluetooth pairing
- Press the -/V-Key to listen to the last song. Press the - button to decrease the volume
- Press the Play/Pause button to play or pause music

HOW TO CHARGE

 - Insert the MicroUSB cable into the Tiki Torch Bluetooth Speaker
- The indicator light will illuminate red when charging
- When the Tiki Torch Bluetooth Speaker is fully charged the indicator light will turn off

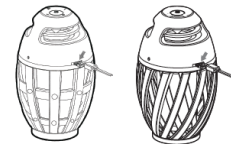

WARNINGS

- Only charge the Tiki Torch Bluetooth Speaker in temperatures ranging from 0°-104° F
- Do not use the device while charging
- Pull the MicroUSB cable out after it is fully charged
- Don't charge the device in areas with high humidity
- Do not let the product come into contact with benzene, diluent or other chemicals
- Do not use this product close to magnetic or electric fields
- Avoid direct lighting and heating appliances while in use
- Do not repair, disassemble or transform yourself. Contact customer service for assistance

SPECIFICATIONS

Bluetooth version	V4.2	Distortion rate	≤10%
Bluetooth name	Flame Speaker	SNR	> 75dB
Bluetooth transmission distance	≥10M	Power Supply	5V 1A
Output power	5W	Bulid-in high efficiency lithium battery	7.4V 1500mA
Horn parameters	φ52MM 4Ω5W		

WARRANTY / CUSTOMER SERVICE

Sharper Image branded items purchased from SharperImage.com include a 1-year limited replacement warranty. If you have any questions not covered in this guide, please call our Customer Service department at 1 (877) 210-3449. Customer Service agents are available Monday through Friday, 9:00 a.m. to 6:00 p.m. ET.

SHARPER IMAGE®

The SHARPER IMAGE® name and logo are registered trademarks.
©Sharper Image. All Rights Reserved.