



SILKSOUND



FC CE USER GUIDE

Congratulations on your purchase of the Paww SILKSOUND! Please read the instructions and warnings carefully before use to ensure safe and satisfactory enjoyment of this product.

www.mypaww.com

Important Safety Information

- Always use the headphones at an appropriate volume. Prolonged exposure to loud sounds may damage your ears.
- Do not turn up the volume so high that you cannot hear sounds around you.
- Use caution or temporarily discontinue use in potentially hazardous situations.
- Do not use the headphones while riding a bicycle, or operating a motor vehicle. The use of headphones may create a traffic hazard and is illegal in many areas.
- Exposing these headphones to open fire can be dangerous, as they contain a lithium ion battery.
- Do not disassemble the headphones, unless qualified to do so.
- Place out of reach of small children, as the packaging contains small parts.

(1)

Warning

These headphones have a built-in rechargeable battery. To avoid any damage, do not attempt to remove the battery from the headphones.

The battery (battery pack or combination) should not be exposed to excess heat.

Improper charging of the battery could lead to the battery exploding.

If using a wall charger to charge your headphones, please ensure that it is a 5V/1A wall charger. Higher voltage chargers could risk damage.

Please turn off the headphones before charging

WARRANTY


The Paww SilkSound headphones ship with a 1-year warranty. If you do encounter any issues during this time, you can initiate a warranty claim by contacting us via email on support@mypaww.com or through the Contact Us page on our website (<https://www.mypaww.com/pages/contact-us>).

CONTENTS

- PAWW SilkSound Headphone System
- Custom Designed Case
- 3.5MM Headphone Cable
- USB Charging Cable
- User Guide

(2)

PRODUCT OVERVIEW

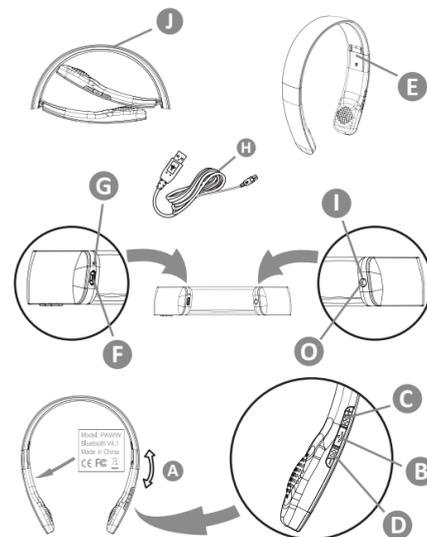

(3)

- A. Adjustable Headband.
- B. Multi-Function Button -MFB (power on/off, pairing, play/pause, answer/end calls/reject call/last number redial).
- C. Volume + (Next).
- D. Volume - (Previous).
- E. LED indicator
- F. Micro USB Charging port.
- G. Microphone.
- H. USB charging cable.
- I. 3.5 MM Audio in.
- J. Fold for storage

CHARGING THE BATTERY



– To charge your SilkSound headphones, plug the included micro-USB cable into the SilkSound headphones (refer to F in the diagram above), and the other end to either a 5V/0.5A wall charger or your computer's USB port. When the battery is extremely low, the LED will flash red continuously, and a full charge can take up to 2.5 hours. The LED will turn off once the product is fully charged.

(4)

CHARGING LI-POLYMER BATTERY SAFELY

- ❖ The headphones have a non-removable lithium-polymer battery.
- ❖ Do not try to remove the battery. Do not dispose of the headphone in a fire, the battery may explode.
- ❖ Dispose of the headphone in accordance with the applicable laws and regulations in your area for the disposal of lithium-polymer batteries.
- ❖ Non-compliance with the conditions of use of the lithium-polymer battery may cause a fire, explosion or chemical burn.
- ❖ Do not allow battery leakage to come into contact with eyes or skin. In case of contact, flush eyes or skin with plenty of water and seek medical advice.
- ❖ Do not expose the lithium-polymer battery to a temperature higher than 60°C (140°F).
- ❖ Do not disassemble, crush, short-circuit or incinerate your battery as it may cause fire, injury, burns, or other hazards.
- ❖ Before first use, please recharge your headphones.

Powering the Headphones On/Off

1. Long press MFB for 3 seconds. The LED will flash blue once the earphone prompts "Power on".
2. Long press MFB for 3 seconds, the LED will flash red once the earphone prompts "Power off".

(5)

Pairing with Bluetooth Devices



1. Please keep your headphones and Bluetooth devices as close to each other.
2. With the headphones off, press and hold the MFB for approximately 5 seconds or until the LED flashes blue once and you hear the prompt "power on", followed by "pairing".
3. At this point, the LED will flash blue and red.
4. Navigate to the Bluetooth settings in your source device, scan for new devices and search for SilkSound.
5. Select SilkSound and wait for the pairing process to complete. Some older devices may ask for a code. If so, please enter 0000.

Pairing with Multiple Devices

1. Pair the SilkSound headphones to your first device using the steps above.
2. Once successfully paired, turn off the Bluetooth function on your source device, and turn off the headphones completely (instructions above).
3. Follow the same procedure as above to connect the second source device.
4. Once connected, re-enable the Bluetooth function on the first source device and connect to SilkSound again.

(6)

Note :

1. The headphones will automatically connect to the last connected source device. If you have multiple devices stored on the headphones and you would like to connect the headphones to a previously connected device, please open the Bluetooth function on the device that you would like to connect the headphones to and select SilkSound from the list of available Bluetooth devices to reconnect.
2. If it takes longer than 3-minutes to complete the pairing process, the headphones will turn off automatically.

Invoking a Digital Assistant

If connected to an Apple or Android device, you can invoke Siri or Google Now by simply pressing the '+' button twice.

Answering a Call

If the headphones are connected to a smartphone, and you're receiving a call on the phone, a voice prompt will read out the number that is calling you. Short press the MFB to answer the call.

Ending a Call

Short press the MFB button to hang up a call.

Rejecting a call

Double press the MFB to reject an incoming call.

(7)

Last number redial

When not on a call, double press the MFB to redial the last number.

Call Transfer

Double press the '-' button to transfer an incoming call between your phone and the headphones.

Hang up the phone call and answer other incoming call

If you are already on a call, but would like to answer another incoming call, double press the MFB button to hang up on the current caller, and answer the new call.

Battery prompt

Each time you turn on your SilkSound headphones, a prompt will announce the battery level.

Play/Pause

While listening to music, short press MFB to pause music. Press it again back to resume play.

To change songs, short press the '+' or '-' buttons.

To increase or decrease volume, long press the '+' or '-' buttons.

(8)

Restore Factory Settings

With the headphones switched off and connected to a charger, press and hold the MFB button until the LED flashes blue and red three times.

SPECIFICATIONS

Bluetooth Version: V4.1
 Support: HSP, HFP, A2DP, AVRCP
 Transmitting Power: Class 2
 Working Distance Range: ≤ 10m
 Frequency Range: 2.402GHz-2.480GHz
 Talk Time : > 10 Hours
 Play Time : > 8 Hours
 Standby Time : > 140 Hours
 Charge Time : < 2.5 Hours

(9)