



Rousa

Vibrating Rose Quartz Roller

User Guide

Roll with the vibrational power of rose quartz! Our Vibrating Rose Quartz Facial Roller massages and de-puffs using cool-locking, rechargeable USB technology. Target your under eyes, cheekbones, and jawline with over 13,000 soothing vibrations per minute to amplify circulation, reduce puffiness and create a temporary visible lift.

 
Includes

- Vibrating Rose Quartz Roller
- USB Charging Cord
- User Guide




Instructions

1. Press the power button three times to power on.
2. Press and hold the power button to change modes.
3. Select your mode and use the diagram below to follow our recommended sequence.

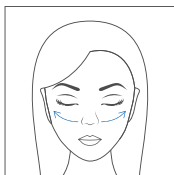

CHEEKS

 Gently roll outwards from the nose.

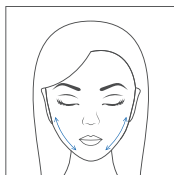


JAW

Gently roll upwards along the jaw line.



FOREHEAD

 Gently roll from middle of forehead out towards temples.

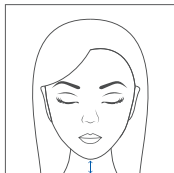

NECK

Gently roll upwards towards the jaw line.

MODES

- **Low Mode (one light)**
Vibrates 5,000 times/minute
- **Medium Mode (two lights)**
Vibrates 9,000 times/minute
- **High Mode (three lights)**
Vibrates 13,000 times/minute

CHARGING

- When the power button light is green, the power is greater than 30%.
- When the power button light is red, the power is less than 30%.
- Use the provided USB charging cord and plug it into the device to charge.

Upkeep

CLEANING

- To clean the head of the device, use a dry tissue, soft cloth or towel.
- If a stain is particularly hard to remove, try using a damp cloth.

STORAGE

- Turn off the wand before storing.
- Disconnect the adapter before storing.
- Store the wand and accessories in a cool, dry place.
- The roller head can also be detached from the wand to store and cool in a skincare fridge.

One-Year Warranty

Visit vanityplanet.com/warranty
to register your product and
activate your warranty.

This Vanity Planet product is warranted to be free of manufacturer's defects in materials or workmanship for one year from the date of purchase. Damage or wear resulting from an accident, misuse, abuse, commercial use, or unauthorized adjustment and/or repair are not covered under this warranty.

Should this product require warranty service (or replacement at our discretion), please contact client services. Proof of purchase is required. Products returned without prior authorization from Vanity Planet will not be accepted and the sender will not receive a refund or replacement.

vanityplanet.com
info@vanityplanet.com
1.888.870.2132

There are no express warranties except as listed above. This warranty gives you specific legal rights and you may have other rights which vary from state to state.

Please do not return this product to the retailer. Contact us directly for warranty service.

VID