



## LED Wired Bow and Ribbon

THIS PRODUCT IS NOT A TOY. FOR DECORATIVE

### A. OPERATION

1. Open the battery cover and insert 3AA batteries (not included) into the battery compartment.
2. Make sure to align "+" and "-" as marked inside the battery compartment.
3. Close the battery cover and turn the switch to the "ON" or "TIMER" position and the lights will come on. OFF is in the center position.
4. When you turn the switch to "TIMER" the unit will light for 6 hours and then automatically shut off. The unit will restart 18 hours later.
5. Wire allows for ribbon and bow to be shaped as desired, even after storage.
6. Wire on bow twists to attach to wreath; wire on battery box attaches to back of wreath out of view.

### B. TROUBLE SHOOTING

Problem	Likely Cause	Solution
No Light	Batteries not inserted correctly	Make sure to align the "+" and "-" as marked inside the battery compartment.
	"TIMER" is on	Unit will restart at the end of the 18-hours cycle. To start immediately, move the switch to "OFF" and then to "ON" or "TIMER".
	Batteries exhausted	Change to new batteries.

### C. CARE INSTRUCTIONS

1. Before using or reusing, inspect product carefully. Discard any products that have cracks in enclosure or exposed wire.
2. When storing the product, carefully remove Batteries from the current location to avoid any undue strain or stress on the conductors, connections, and wires.
3. When not in use, store neatly in a cool, dry location protected from sunlight and heat.
4. If necessary, clean product by wiping with a soft, dry cloth. Do not use any corrosive cleanser or chemical solution on this item.
5. Do not mix old and new batteries.
6. Do not mix alkaline, standard(carbon-zinc), or rechargeable (Ni-Cd, Ni-MH, etc.) batteries.
7. Batteries not included.

### D.SAFETY WARNINGS AND INSTRUCTIONS

**WARNING:** THIS IS NOT A TOY! THIS PRODUCT CONTAINS SMALL PARTS WHICH COULD CAUSE CHOKING IF SWALLOWED.

TO PREVENT FIRE OR SHOCK HAZARD, DO NOT REMOVE COVER. NO USER SERVICEABLE PARTS INSIDE. IF SERVICING IS NEEDED, SEND TO QUALIFIED SERVICE PERSONNEL.

PLEASE ADHERE TO THE FOLLOWING:

1. Read Instructions - All safety and operating instructions should be read before the appliance is operated. Please adhere to the instructions and warnings for your safety.
2. Heat - The appliance should be situated away from heat sources such as radiators, hairdryers, heat

- registers, stoves or other appliances that produce heat.
3. Damage Requiring Service - Have a qualified service personnel service this appliance when:
- A. Objects have fallen or liquid has spilled into the appliance.
  - B. All troubleshooting techniques have been tried and the appliance will not work or has stopped working.
  - C. The appliance has been dropped or the enclosure damaged.

**Federal Communications Commission Code, Part 15 :**

NOTES: This equipment has been tested and found to comply with the limits for a Class B digital device pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If the equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to correct the interference by one or more of the following measures:

- (a) reorient or relocate the receiving antenna.
- (b) increase the separation between the equipment and the receiver.
- (c) connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- (d) consult the dealer or an experienced radio/TV technician for help.

**Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.**

**E. DISPOSAL AND RECYCLING:**

Waste electrical products should not be disposed of with household waste. Please recycle at appropriate recycling facilities. Check with your local authority or retailer for recycling advice. This applies to the battery also.

Model # Varies on Size and Color  
F21-XXX-SD

MADE IN CHINA

**Omega Bright Designs**  
1645 Todd Farm Dr.  
Elgin, IL 60123