


Meridian massage brush

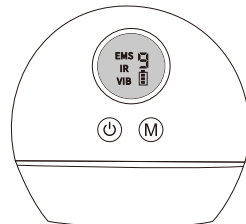

Instruction Manual

Thank you for purchasing this product! In order to use this product correctly, please be sure to read this manual before use; in order to read the manual at any time when you need it, please keep this manual properly.

About this manual:

The product pictures and related product feature introductions shown in this manual, as well as the explanations of some terms, are for reference only. The actual product shall prevail when the user uses it, and the data quoted are from the company's laboratory.

1. Safety precautions

Be sure to read the safety precautions before use.

Please use this product correctly according to the contents and recommendations of the manual.

	Incorrect operation can lead to personal injury related content
	Incorrect operation will cause personal safety or property damage related content

Danger

---Please use the charging cable delivered with this product or the charging cable that meets the product specifications, and correctly connect the charger plug to the household socket to avoid malfunction, fire or fire due to heat.

---Because this product has a built-in rechargeable battery, do not put this product into fire or use it in a high-temperature, high-heat environment, which may cause malfunction, fire, or fire due to heat.

---If the product is abnormally hot or deformed, damaged or has a peculiar smell, do not use it again to avoid the risk of electric shock and fire.

Notice

---This product is a personal massage product and cannot replace medicines or medical devices.

---This product is not suitable for people with physical, sensory or mental problems or lack of experience and common sense (including children), unless a guardian supervises and guides the use of the product, and can take responsibility for the safety of users.

---To supervise children to ensure that they do not play with this appliance.

---Put packaging materials (such as plastic bags) out of the reach of children.

---If the machine is damaged or the product function is abnormal, in order to avoid danger, it must be repaired by professionals from the manufacturer, its maintenance department or similar departments.

---This product is not waterproof, so prevent water from splashing on the surface of the product when using it. Please do not use this product while bathing.

---When cleaning and maintenance, please turn off the machine and do it in the off state.

---Do not store or use this product in a bathroom or other damp room.

Do not place this product near heat sources and inflammable places, it is prone to failure and danger, and it is easy to cause deformation, discoloration or damage.

If you feel any abnormality of this appliance during use, please stop using it immediately and contact the factory after sales.


If you experience physical abnormalities or pain while using this appliance, discontinue use immediately and consult a healthcare practitioner.

Not recommended for people with dermatitis, skin damage, eczema, swelling, etc.

2. Introduction

Meridian brush is a skin massage care product that combines vibration, color light and micro-current. The product is based on ergonomics and integrates various curve designs. It acts on the human body through high-frequency micro-vibration, and is also used for massage, pushing the body and pressing acupoints, so that the muscles can be massaged comfortably, the skin is stretched, and the skin is elastic and moisturizing.

3. Part name

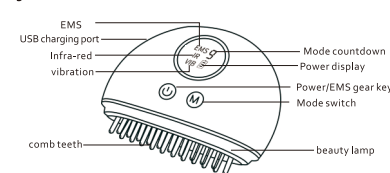

*The product automatically shuts down after 9 minutes in each mode

4. Operation

(1) Key operation

1. Power on/off: long press the power button for 1 second (when the power is on/off, the buzzer will be "beep" for 1 second)

2. Mode switching: short press the M button after booting;

3. EMS gear switching: short press the power button after power on

(2) Functional Mode

Function mode: four modes (boot default mode one)

Mode 1: Beauty light red light + EMS (micro current);

Mode 2: Beauty light purple light + VIB (vibration);

Mode 3: Beauty light blue light + EMS (micro current) + VIB (vibration);

Mode 4: Beauty light red light, blue light flash alternately + EMS (micro current) + VIB (vibration)

[Charge]

Please fully charge the machine before using it for the first time.

When the battery is low,

--Connect the machine to the charging cable and charger, and plug it into a household power outlet;

--During charging, the battery icon on the LED display flashes.

--The battery icon no longer flashes when fully charged.

--The product cannot be turned on when it is charged.

5. Maintenance and maintenance

--Before cleaning, please turn off the machine.

--Protect the appliance from moisture.

--Do not use sharp or corrosive or volatile diluent cleaners, you can use a damp soft cloth or cotton pad to gently wipe.

--Do not rinse the appliance directly with water to avoid damage caused by water entering the machine.

6. Matters needing attention

1. This product is a tool nursing instrument, not a medical device, and has no therapeutic effect. If you need treatment, medication, etc., please consult a professional doctor or relevant person.

--We provide a 1-year warranty for the product, and the warranty period starts from the date of purchase.

--During the warranty period, we will replace the parts or the entire product as the case may be due to defects in the material or the production process.

--To apply for warranty, the product and the proof (purchase invoice) that can prove the date of purchase must be handed over to an authorized repair station or factory for after-sales service.

--The company does not guarantee the following conditions:

--Damage due to improper use, such as: using the wrong power supply, plugging the product into an unsuitable outlet, man-made damage, etc.

--The aging and wear of the product caused by normal use, but it has little effect on the use function of the product.

--Used for other purposes, or improper operation or non-professional maintenance or use of non-company accessories, resulting in product problems

--Consumables, accessories and other consumable accessories.

--Damage caused by force majeure factors (such as lightning, earthquake, fire, flood, etc.).

The after-sale service also does not cover damage caused by the above reasons.

7. Waste treatment

This marking on this product or on the instruction manual or packaging indicates that this product should not be disposed of as general household waste at the end of its useful life. Please consult your local government for recycling according to the classification of waste.



8. Technical parameters and packaging

Product name: Meridian brush

--Dimensions: 90*82*26mm;

--Charging time: about 90 minutes

--Discharge time: about 80 minutes

--Net weight: 78 g;

--Material: ABS+PC+Silicone;

--Charging method: Type-C USB cable, 5V/1A;

--Waterproof grade: IPX0

--Packing list: host *1, USB charging cable *1, manual *1

Note: In view of the consistent policy of continuous improvement of products, the company reserves the right to change product specifications, and the actual product is subject to shipment.

[environmental protection]

This marking on this product or packaging material or accessories indicates that this material is made of recyclable materials. Divide waste into different recycling grades to facilitate recycling of useful materials.

