

Keep the package since it contains important information.



 
Item# 1104

## 25 Piece Set



### 1 Precasso

Use Precasso, your very own art teacher, to learn to draw 50 characters one line at a time!




### 1 Mini Pencil

Take your mini pencil with you to draw on the go!



### 1 Pencil Sharpener

 Sharpen your mini pencil or your colored pencils!

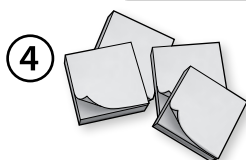


### 4 Drawing Pads

Learn to draw on these 4 Drawing Pads!



### 6 Art Backgrounds


 
Create masterpieces on 6 great background compositions!

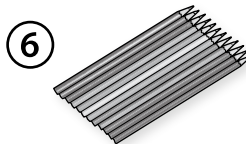

### 12 Colored Pencils

Color your compositions with these 12 colored Pencils!
  
## Screen Supports

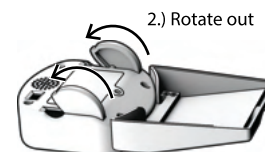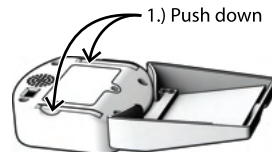

## Battery Replacement

- Locate the battery cover on the bottom of PreCasso™
- Loosen the screw in the battery cover with a Phillips screwdriver and remove the cover
- Insert 3 "AAA" LR03 1.5V alkaline batteries
- Do not mix old and new batteries
- Do not mix alkaline, standard (carbon-zinc) or rechargeable (nickle-cadmium) batteries
- Replace the battery cover and tighten the screw with a Phillips screwdriver

## Manual Draw Mode

- Locate the switch on the bottom of PreCasso, and move it to "On".
- After the welcome screen ends, press the left or right arrow buttons to scroll through 50 drawing choices, each having different levels of difficulty.
- Press the center button to select the drawing you want to learn to draw. Get your pencil ready to copy what you see on the display as it appears.

When you select a drawing, PreCasso will draw the first line.



Copy that line onto your paper.

Then you can then press the right arrow button to watch PreCasso draw the next line.



Copy that line onto your paper.

After you finish the last line in a drawing, the next button pressed will trigger a fun animation.



If desired you may press the left arrow button anytime to erase lines.

Then press any button to return to the drawing selection menu.

## Auto Draw Mode

- When you select a drawing to learn, the first line will be drawn automatically. To continue in Auto-Draw Mode press the center button. Auto-Draw will start at the slowest speed.
- If you can easily keep up with the slow speed, you can press the right arrow button to start the faster Auto-Draw speed. Press the right arrow button again to return to the slower Auto-Draw speed.
- You can pause Auto-Draw Mode anytime by pressing the left arrow button. Press the left arrow button again to resume drawing.
- While in Auto-Draw mode press the center button to skip to the end of the drawing. The next button press will trigger a fun animation. Then press any button to return to the drawing selection menu.

## Safety Information

- Read the user information together with your child before first use.
- Always use PreCasso™ on a flat surface.
- When finished playing with your PreCasso™ be sure to turn it off.
- Not suitable for children under 5 YEARS OF AGE.
- Do not use near water.
- Do not disassemble or tamper with in any way.
- Keep this instruction manual for reference.

Precasso™ is a trademark of Rehco, LLC under license to Top Secret Toys LLC, 1300 West Washington Blvd. Chicago, IL 60607. Precasso™ is manufactured by Top Secret Toys, LLC. TM denotes US Trademarks under license from Rehco LLC. Precasso™ is subject to Patent US 6,572,378 and copyrights under license from Rehco, LLC ©2017 Rehco, LLC Chicago, Illinois 60607, USA. **MADE IN CHINA**

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

