

#733204 | Ages 3+
Adult assembly and installation required
Takes 1 adult to assemble.
7'H x 2' diam. top hoop

Light-Up **Rainbow Canopy** *by HearthSong*

Safety and Assembly Instructions


Includes:

- ▷ 1 Rainbow canopy
- ▷ 1 String of LED lights
- ▷ 1 White canopy topper

Assembly:



1. Remove components from packaging and check that all pieces have arrived in good order.
2. Install 3 AA batteries into the battery pack, which hangs in a pocket from the canopy's lower ring. On/Off switch is located on the outside of the battery pack.
3. Top the canopy with the **white canopy topper**, ensuring the O-ring at the top of the canopy is accessible for hanging.
4. After assembly is complete, hang Rainbow Canopy using our custom **Canopy Stand** (731196, sold separately at HearthSong.com). If hanging from the ceiling, professional installation recommended.

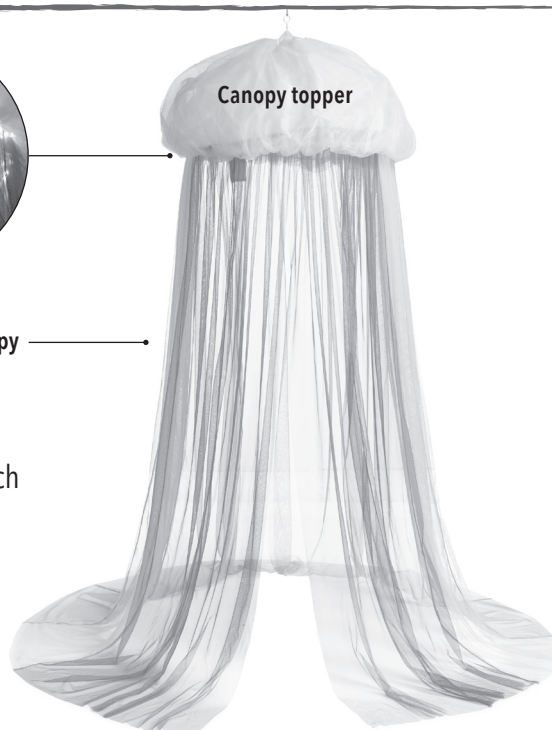

Care: Spot clean only with water and a mild detergent.

Safety:

- ▷ Keep away from direct flame and heat sources.
- ▷ The battery pack is not waterproof and should not be used outdoors.
- ▷ The Canopy has a limited lifespan. Exposure to direct sunlight, damp weather conditions, and cleaning with harsh chemicals will shorten the lifespan; therefore, we recommend using indoors.
- ▷ Your Canopy needs to be checked regularly for wear and tear. This might be evident through distinct changes in the color of the fabric, or in the appearance of the hanging apparatus. Replace any parts that show signs of wear.
- ▷ The product is not suitable for children under 3 years of age. Do not place a baby in the Canopy.

Battery Installation & Disposal:

Takes 3 AA batteries (not included).

IMPORTANT BATTERY INFORMATION

- Battery installation and removal should be performed by an adult.
- Use only batteries recommended in this instruction manual.
- Be careful to install the batteries with the correct polarity, as indicated. Be sure to insert batteries correctly according to (+) and (-) symbol located in the battery compartment.
- Do not mix old and new batteries, remove all batteries when replacing.
- Do not mix alkaline, standard (carbon-zinc), rechargeable (nickel-cadmium), or different types of batteries.
- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the toy before being charged and are only to be charged under adult supervision.
- Only batteries of the same or equivalent type are to be used.
- The supply terminals are not to be short-circuited.
- Always remove weak or dead batteries from the product.
- CAUTION: Do not dispose of battery in fire. Battery may explode or leak.



Battery must be recycled or disposed of properly. Do not short-circuit or dispose of in fire or landfills.

