



## 2X4 CORNHOLE SET WITH INTEGRATED CADDY

### INSTRUCTION MANUAL



PLEASE KEEP THIS INSTRUCTION MANUAL FOR FUTURE REFERENCE

If you have any concerns with your product please visit our website [www.escaladesports.com](http://www.escaladesports.com) for fastest service. Please have a copy of your receipt of purchase. For any technical support or warranty issues please contact Escalade Sports at 1-800-467-1421 or e-mail us at [customerservice@escaladesports.com](mailto:customerservice@escaladesports.com)

## Limited 90-Day Escalade Sports Warranty

All Escalade Sports games have a limited 90-day from date of purchase warranty. This warrants the retail purchaser for any Escalade Sports game purchased to be free from any defect in materials and construction for 90 days from the date of purchase. The only exceptions to the warranty include main frames, tabletops, playing surfaces, batteries or tools. Damaged main frames, tabletops, playing surfaces need to be returned to the store as we are unable to replace these parts. Normal play wear and usage is not covered under the warranty, nor is wear or damage due to improper use of the Escalade Sports game. This will void any and all Escalade Sports warranties.

A PURCHASE RECEIPT (or other proof of purchase date) will be required before any warranty service is initiated. All requests for warranty service can be submitted by email, in writing or by contacting our Customer Service Department at: 1-800-467-1421 or email us at [customerservice@escaladesports.com](mailto:customerservice@escaladesports.com)

**IMPORTANT NOTICE!** Please contact us before returning the product to the store.

## Warnings



Not for use by children without adult supervision. This is not a child's toy. Adult supervision is required for children playing this game. Please read instructions carefully.

Be sure to check out all the exciting games Escalade Sports has to offer. Visit our web site at:

**ESCALADE**  
SPORTS

ESCALADESPORTS.COM



Bag Toss



Net Games



Lawn Games

### Escalade Sports

**Physical Location:**

817 Maxwell Ave.  
Evansville, IN 47711


**Mailing Address: (Correspondence Only)**

PO Box 889  
Evansville, IN 47706

# Parts List

1


Board Assembly

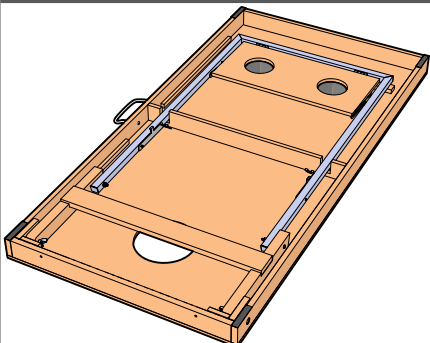

Qty. 2

2


Screw Knob

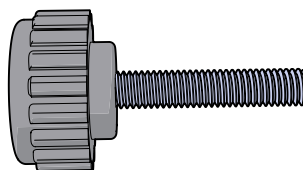

Qty. 4

4


Bean Bag- Blue

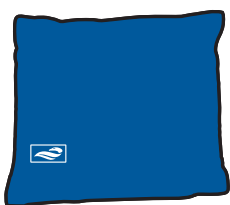

Qty. 4

5


Bean Bag- Red

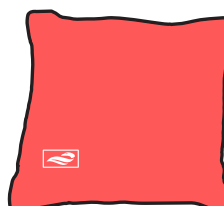

Qty. 4

7


Magnetic Score Indicator

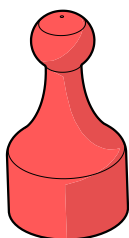

Qty. 2

8


Magnetic Score Indicator

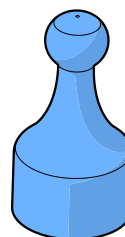

Qty. 2

## Setup Instructions - Separating the Boards

1. The Boards will come attached together with velcro strips. On a dry and clean surface place the Boards (#1) on their sides and separate. See **Figure 1**.

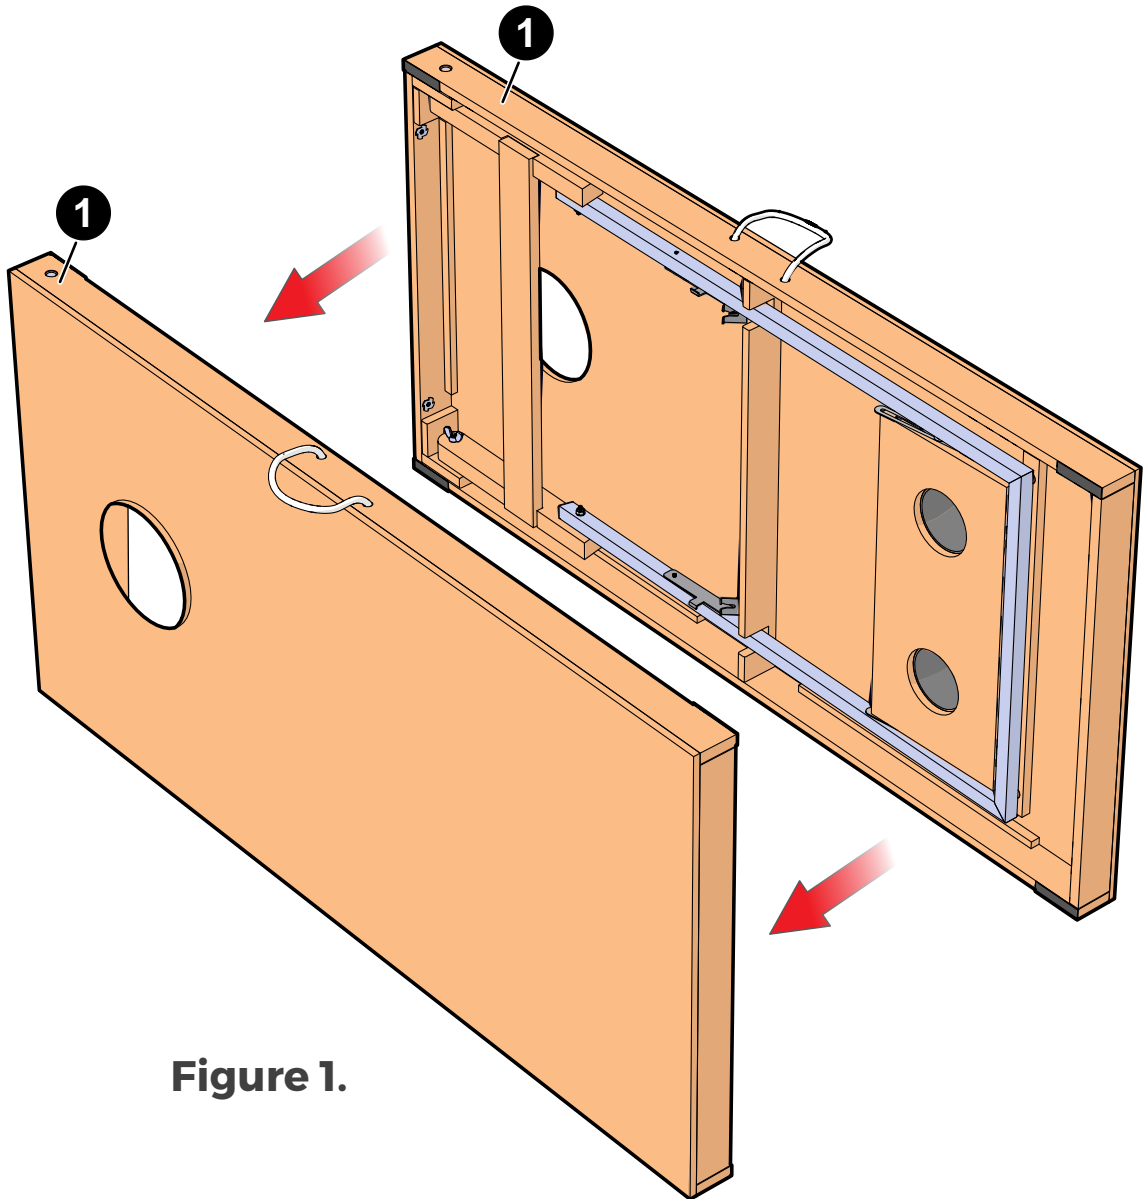


**Figure 1.**



## Setup Instructions - Unfolding Metal U-legs


2. While holding the Board (#1) on its side with one hand, pivot the Metal U-legs out until the wooden legs are fully extended. See **Figure 2**.

**Figure 2.**

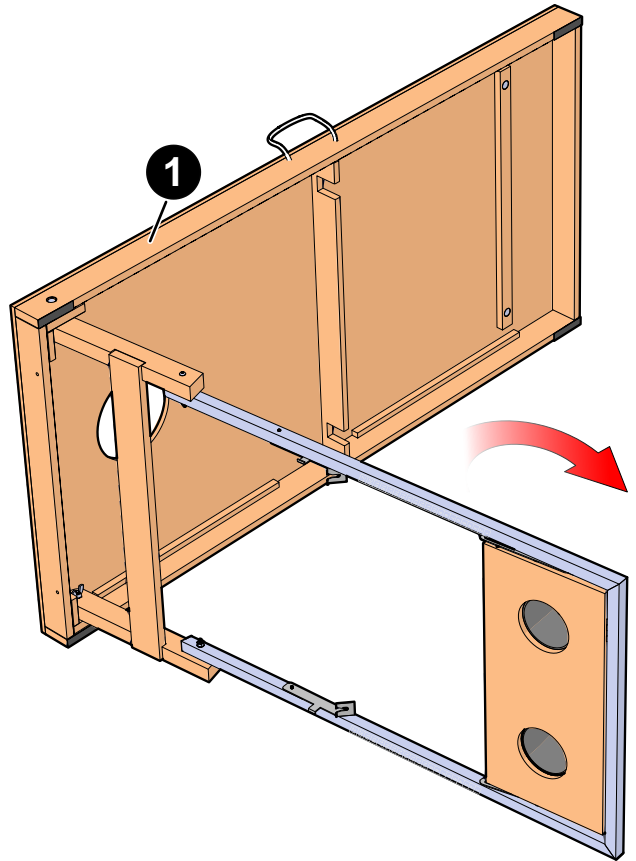


**Figure 3.**

3. Keep on pivoting the Metal U-Leg, until it is in the position shown in **Figure 3**.

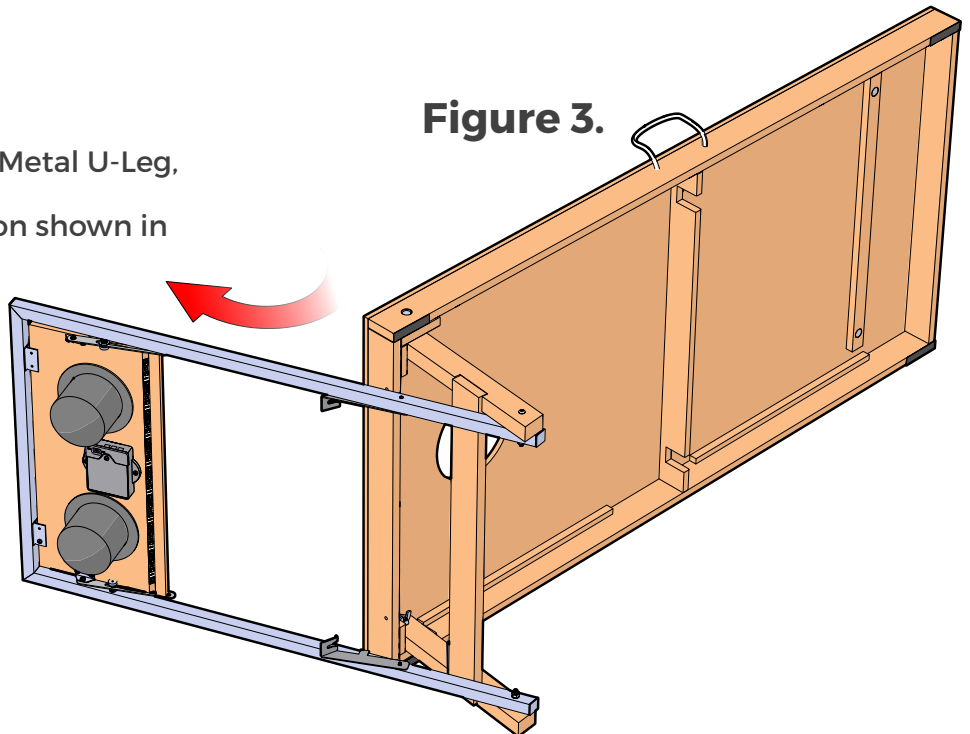


## Setup Instructions - Installing the Screw Knobs

4. Carefully set board on its legs as shown in **Figure 4**.
5. Insert the Screw Knobs into the holes in the end of the board and turn a few times to get them started. See **Detail A**.
6. Pivot Metal U-Leg and Hinges towards the back of the Board until they reach the Knobs. Rotate the hinges until they slide onto the screw section of the knobs. See **Detail B**.

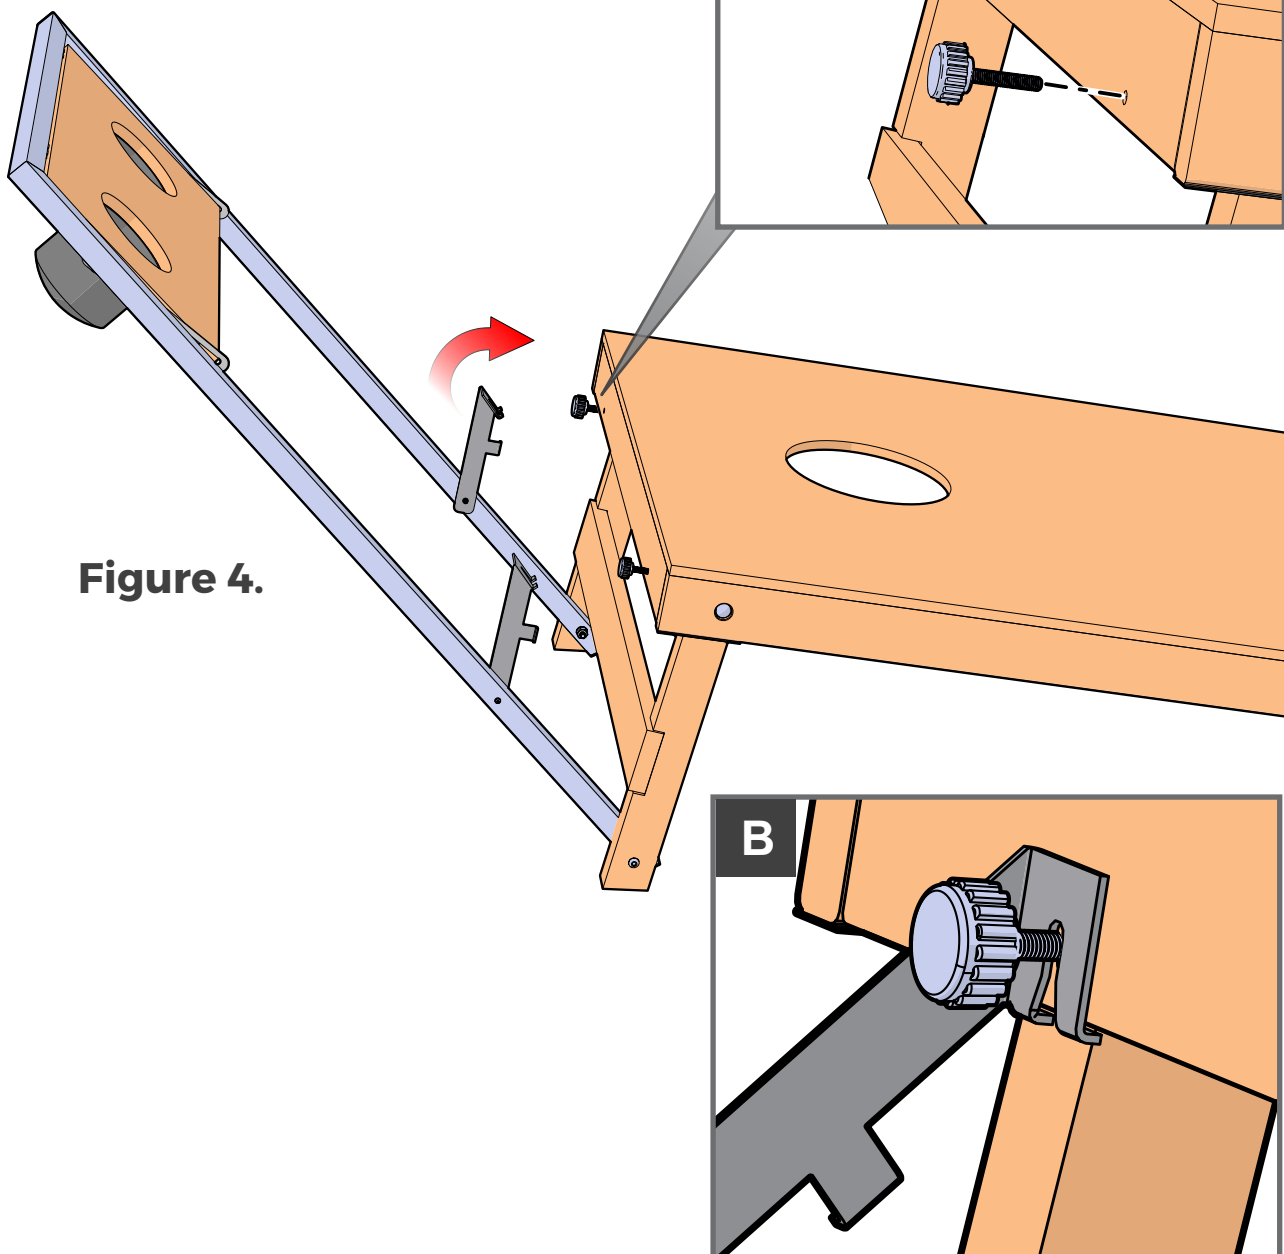

## Setup Instructions - Installing Hinges


7. Tighten knobs until the Hinges are secure. Ensure knobs are completely tight. See **Figure 5 & Detail A**.

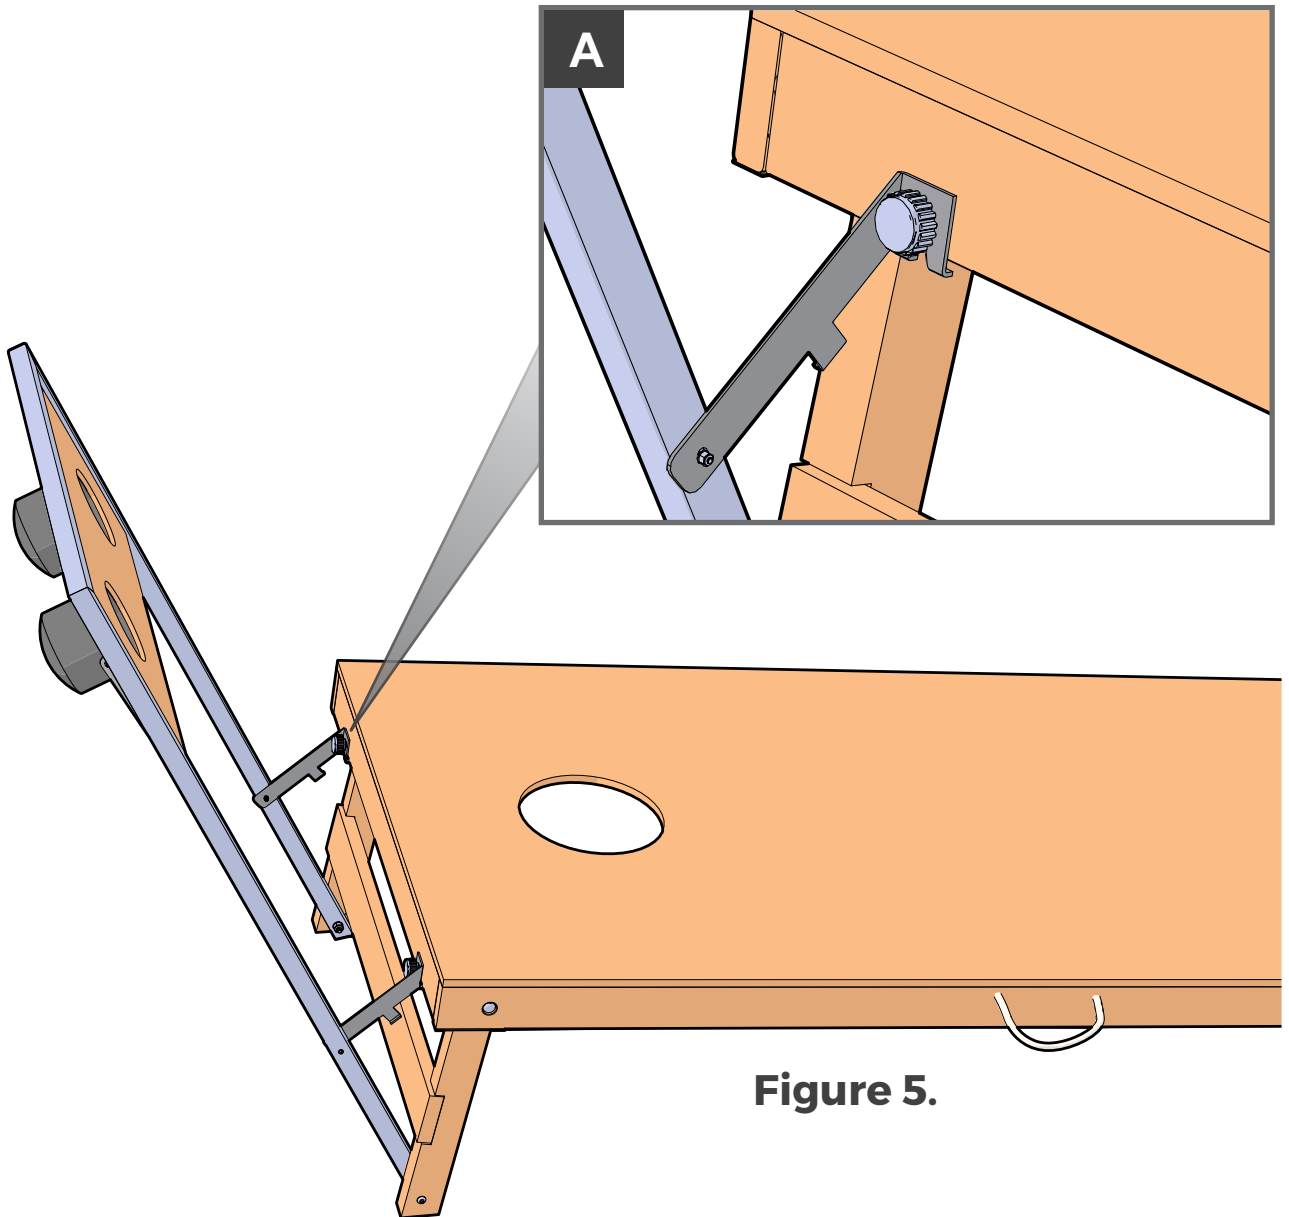

**Figure 5.**

## Setup Instructions - Installing the Batteries

8. Install the batteries in the battery compartment while the tray is folded. See **Figure 6**.
9. Remove the phillips screw and take cover off. Then insert four **AA** batteries into the battery compartment. See **Detail A & Detail B**.

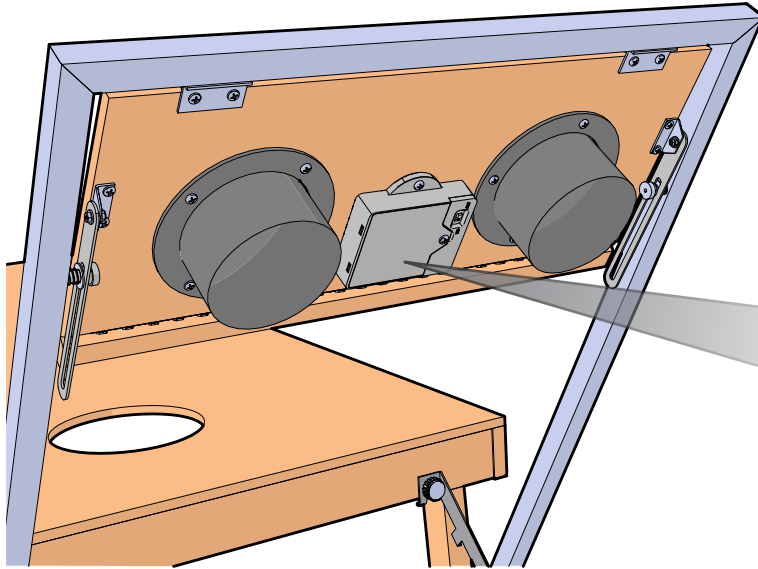




**Figure 6.**

10. Put the cover back on and secure it with the screw. Then slide the switch to the **ON** position. See **Detail C**.

**NOTE:** Install batteries, with polarity (+/-) as shown inside the battery compartment.

**NOTE:** To preserve battery life always turn switch **OFF** when not in use.


**NOTE:** Do not leave batteries in the battery compartment when storing the Board for an extended period of time.

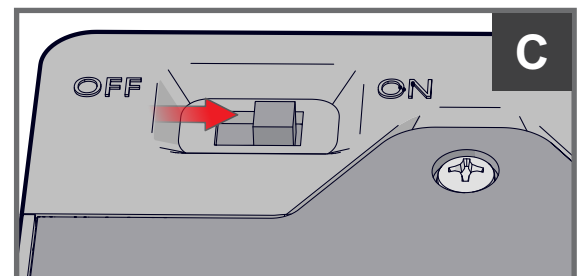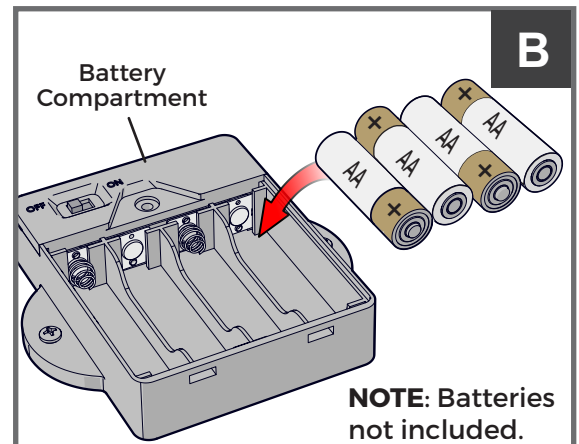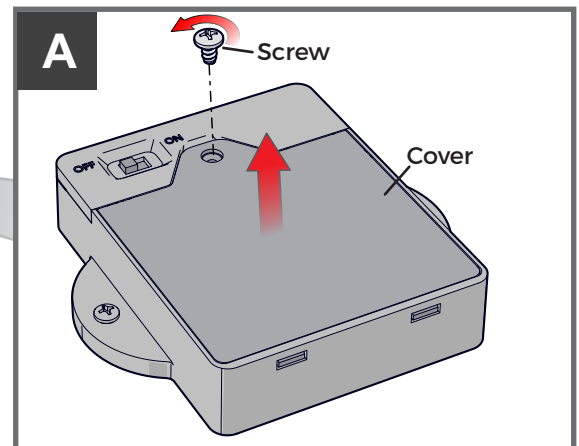

## Setup Instructions - Opening Tray


11. While holding on to the metal U-Leg, pivot the tray up until you hear that it locks in place. See **Figure 7** & **Detail A**.

Congratulations you are now ready to play!

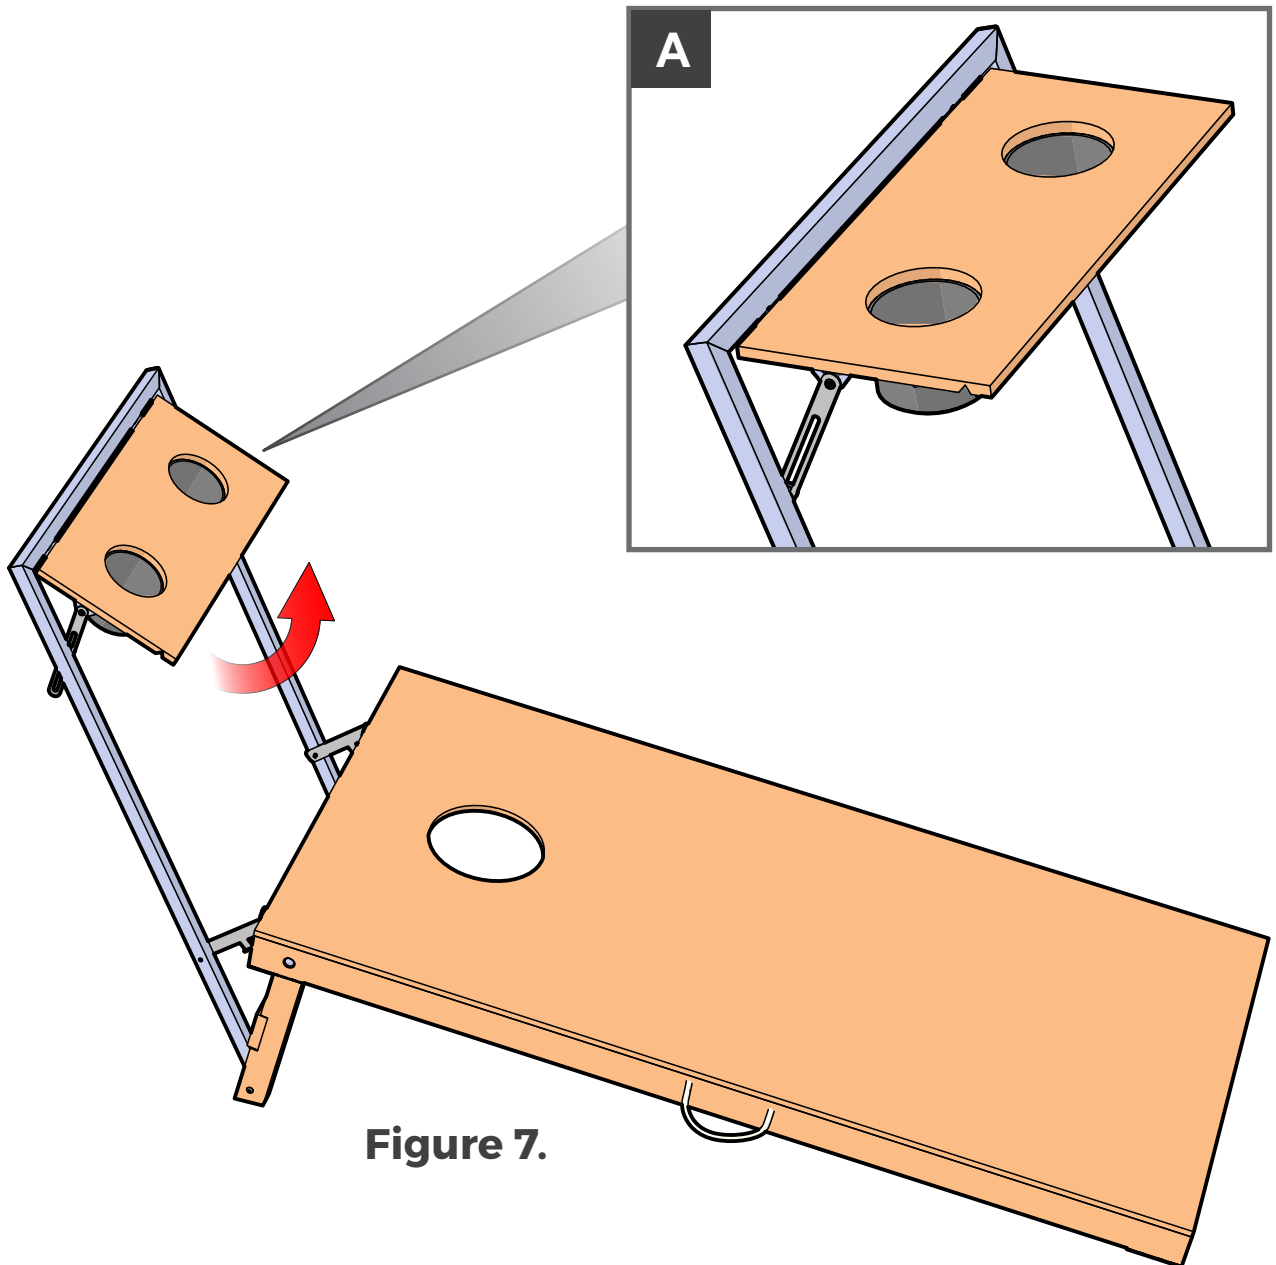

**Figure 7.**

# Playing Instructions

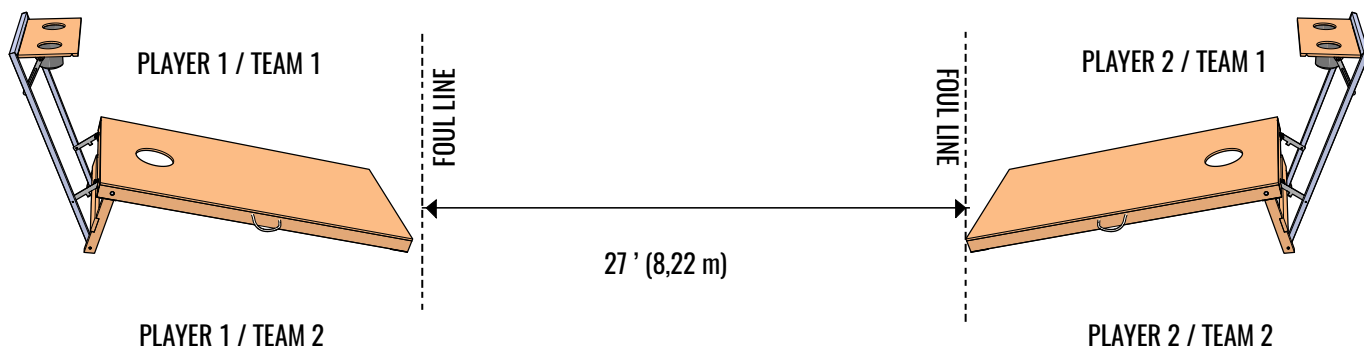

## **GAME SETUP:**


1. Playing Area – Select an open area that provides approximately 27 ft. (approx. 11 paces apart) between the two foul lines (front of the Bean Bag Boards). Allow children to set the distance with their own stride. The width of the court depends on the skill level of the players.
2. Play is between two players or teams. One member from each team will stand next to each board.

## **RULES OF THE GAME:**

- Object of the Game – First Player/Team to reach 21 points wins!
- Game Play - For the first round, decide Player 1 and/or Team 1 by tossing a coin, or some other suitable method. For following rounds, the team scoring the highest points in the previous round is the first to toss in the next round.
- Each round consists of one person (either Player 1 or Player 1/Team 1) tossing bean bags. Play continues alternating Player/Team until each player has tossed their bags.
- Bean bags may be tossed in any way the player chooses, as long as they are tossed individually.
- Players must not step across the foul line (front edge of the Bean Bag Board) during a throw, or that throw does not count.
- Point Values (based on difficulty level) are as follows:
  - A bag thrown through the hole earns 3 points. A bag that lands on the board earns 1 point. Subtract the low score from the high score for each round of play. For example: Team A has 1 bag in the hole and 2 bags on the board, for a score of 5 points. Team B has two bags on the board, for a score of 2 points. Team A (5 points) – Team B (2 points) = Team A (3 points). Team A receives 3 points for that round of play.
- No Score - Bean bags bounce off the ground do not count in scoring. Bags on or touching hinges do not count.
- To Win – There are alternatives for declaring a winner: 1) the winning team must lead by at least two points) requiring an exact score to win. If a round's score would put a team over 21, that round's score is not used.
- Hint: You can knock your opponent's Bean Bags off the board.

## Game play - Keeping Score

1. Use the Magnetic Score Indicators to keep score by attaching on the score numbers on the Metal U-Leg. See **Figure 1**.


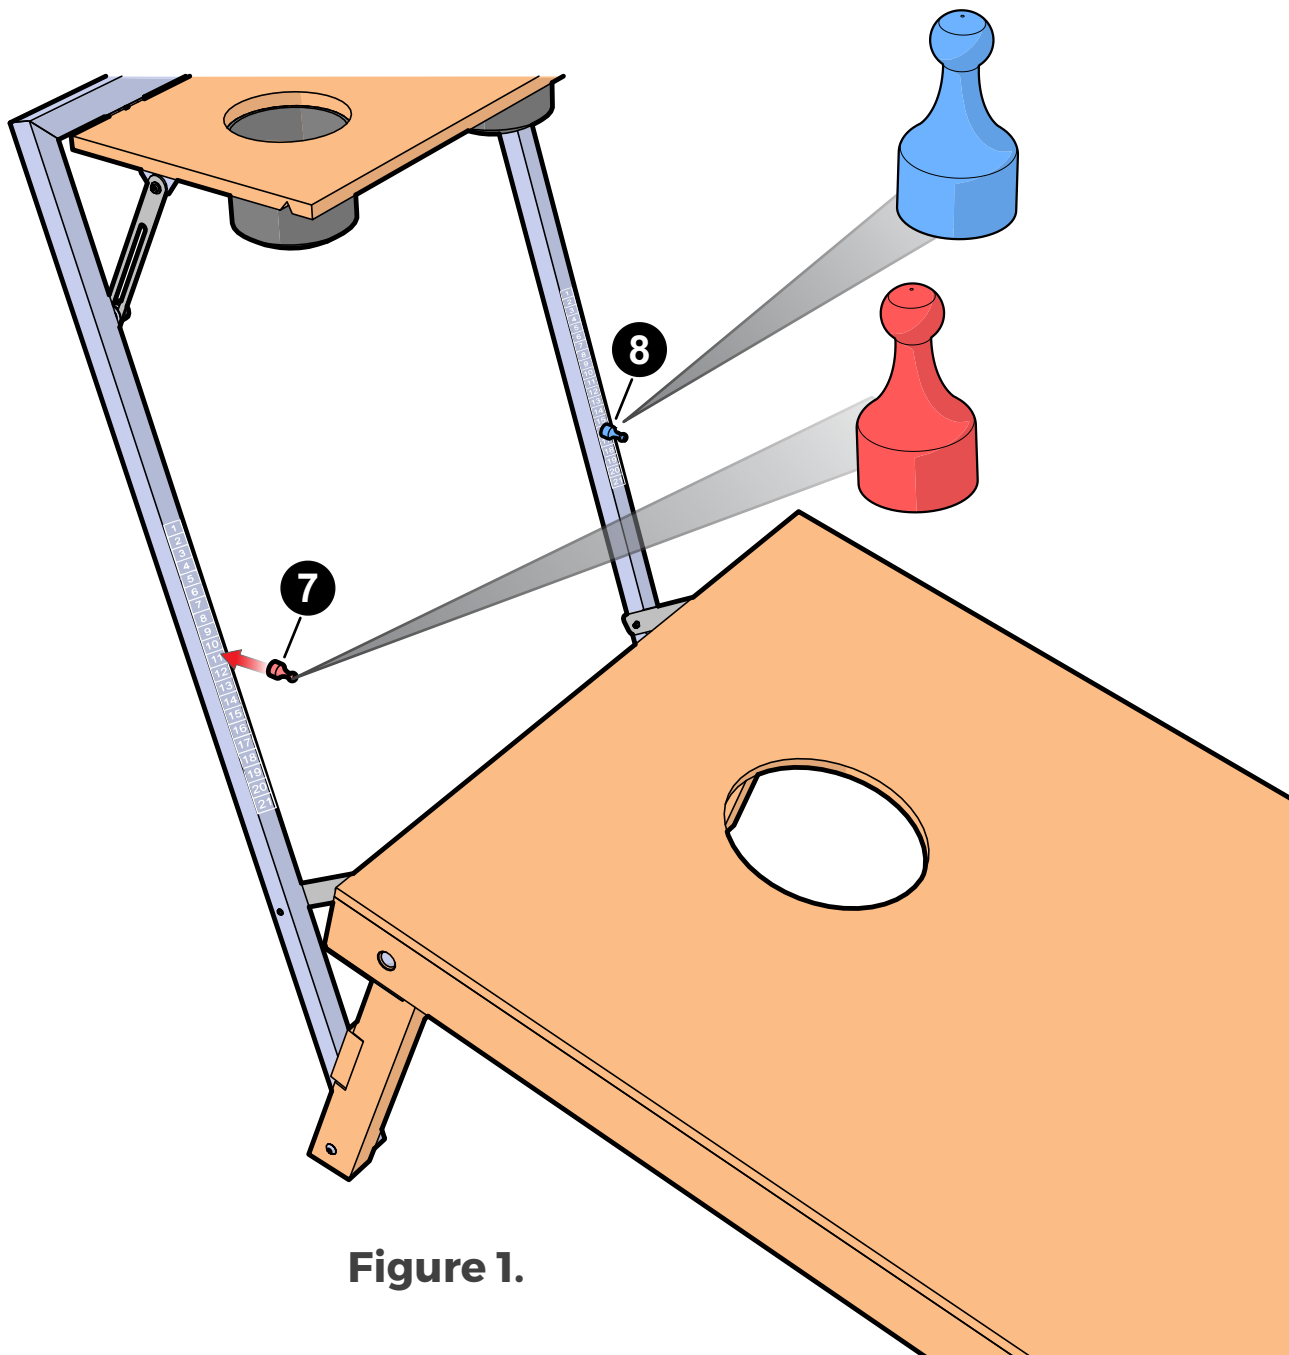


**Figure 1.**




## Storage Instructions - Folding the Tray

1. To release tray press on the spring loaded slotted hinge to release the tray and let the tray slowly slide down until you hear it lock. See **Detail A** & **Detail B**.

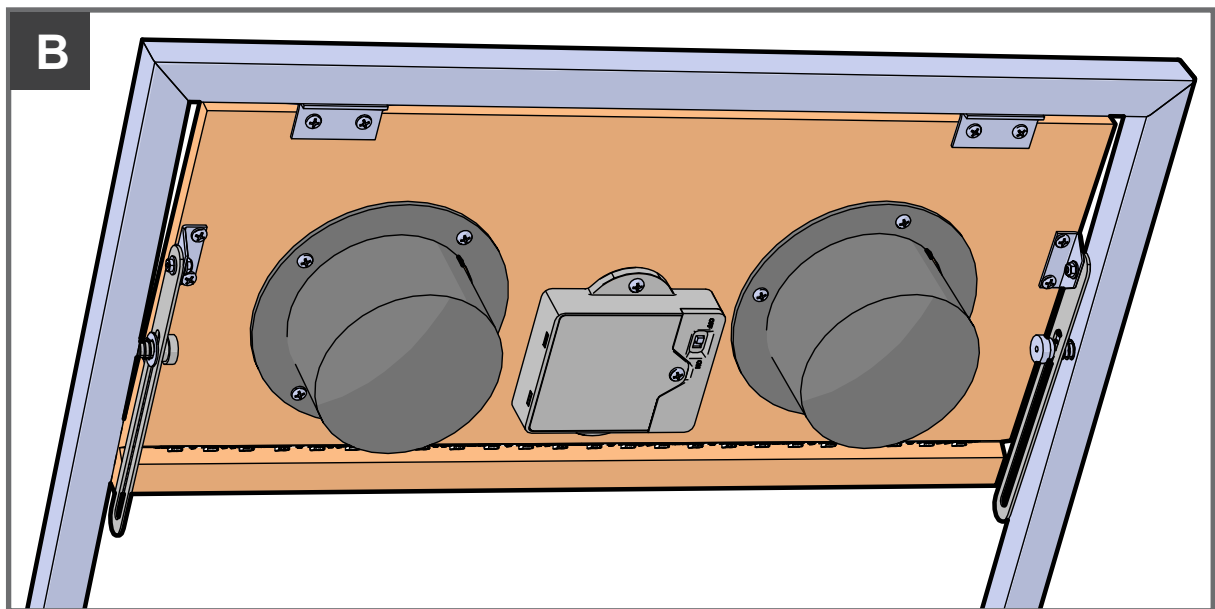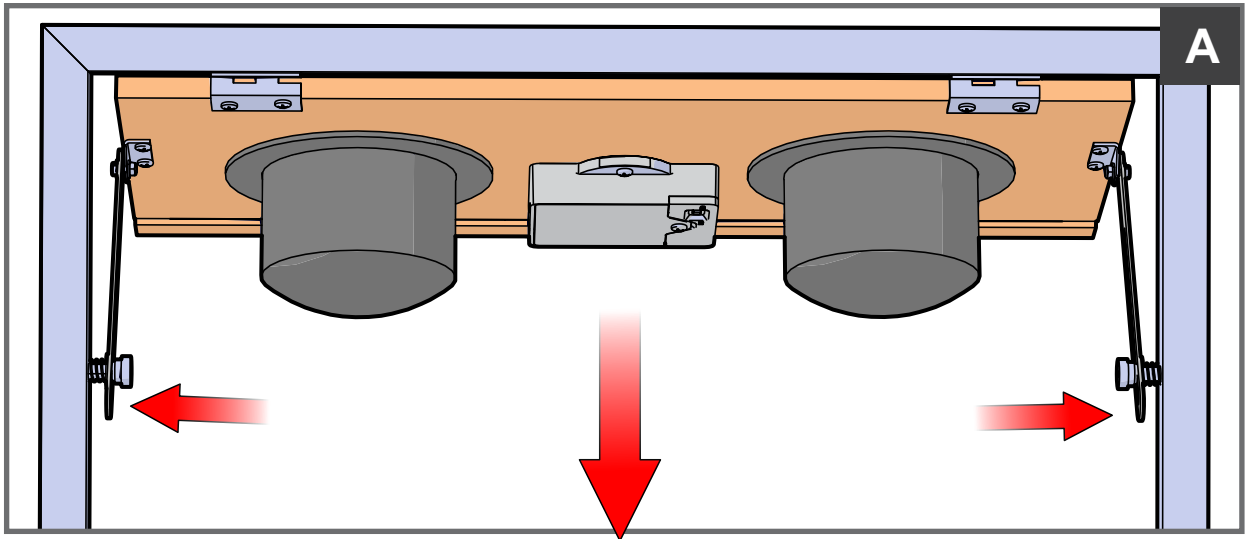


## Storage Instructions - Detaching the Hinges

2. Loosen the knobs about three quarters of the way and detach the Hinges. See **Figure 1**.

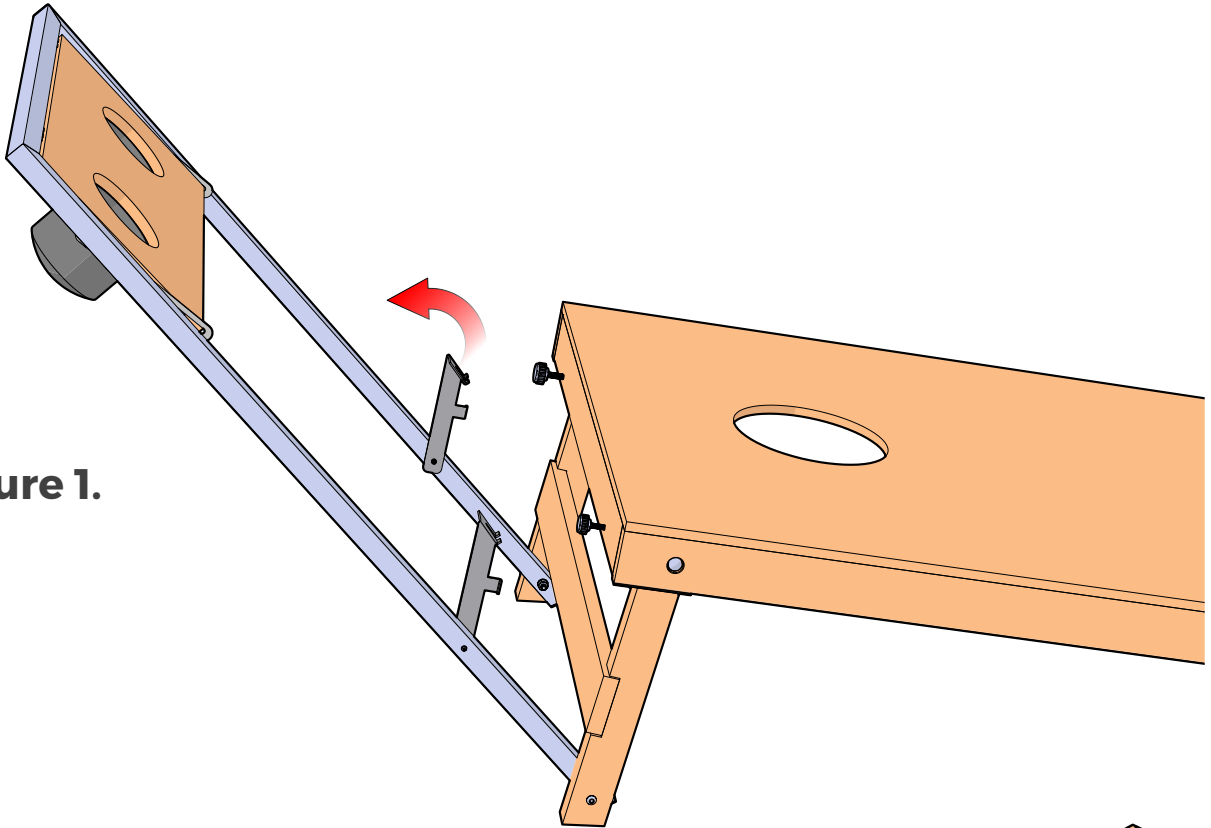

**Figure 1.**

3. Carefully turn the board on its side and start folding the Metal U-legs towards the underside of the board. See **Figure 2**.

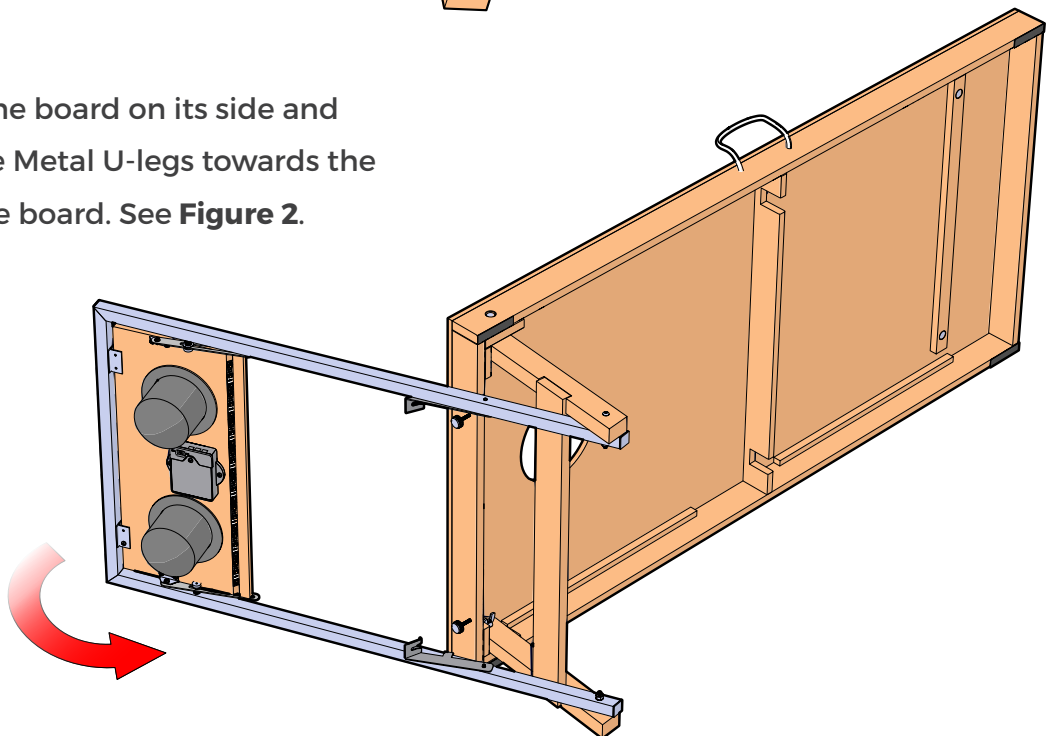


**Figure 2.**

## Storage Instructions - Folding Metal U-legs

4. Keep on folding the metal U-Legs until they are flush with the underside of the board. See **Figure 3** & **Detail A**.

**NOTE:** You will hear when the metal U-Legs make contact with the magnets on the underside of the board.

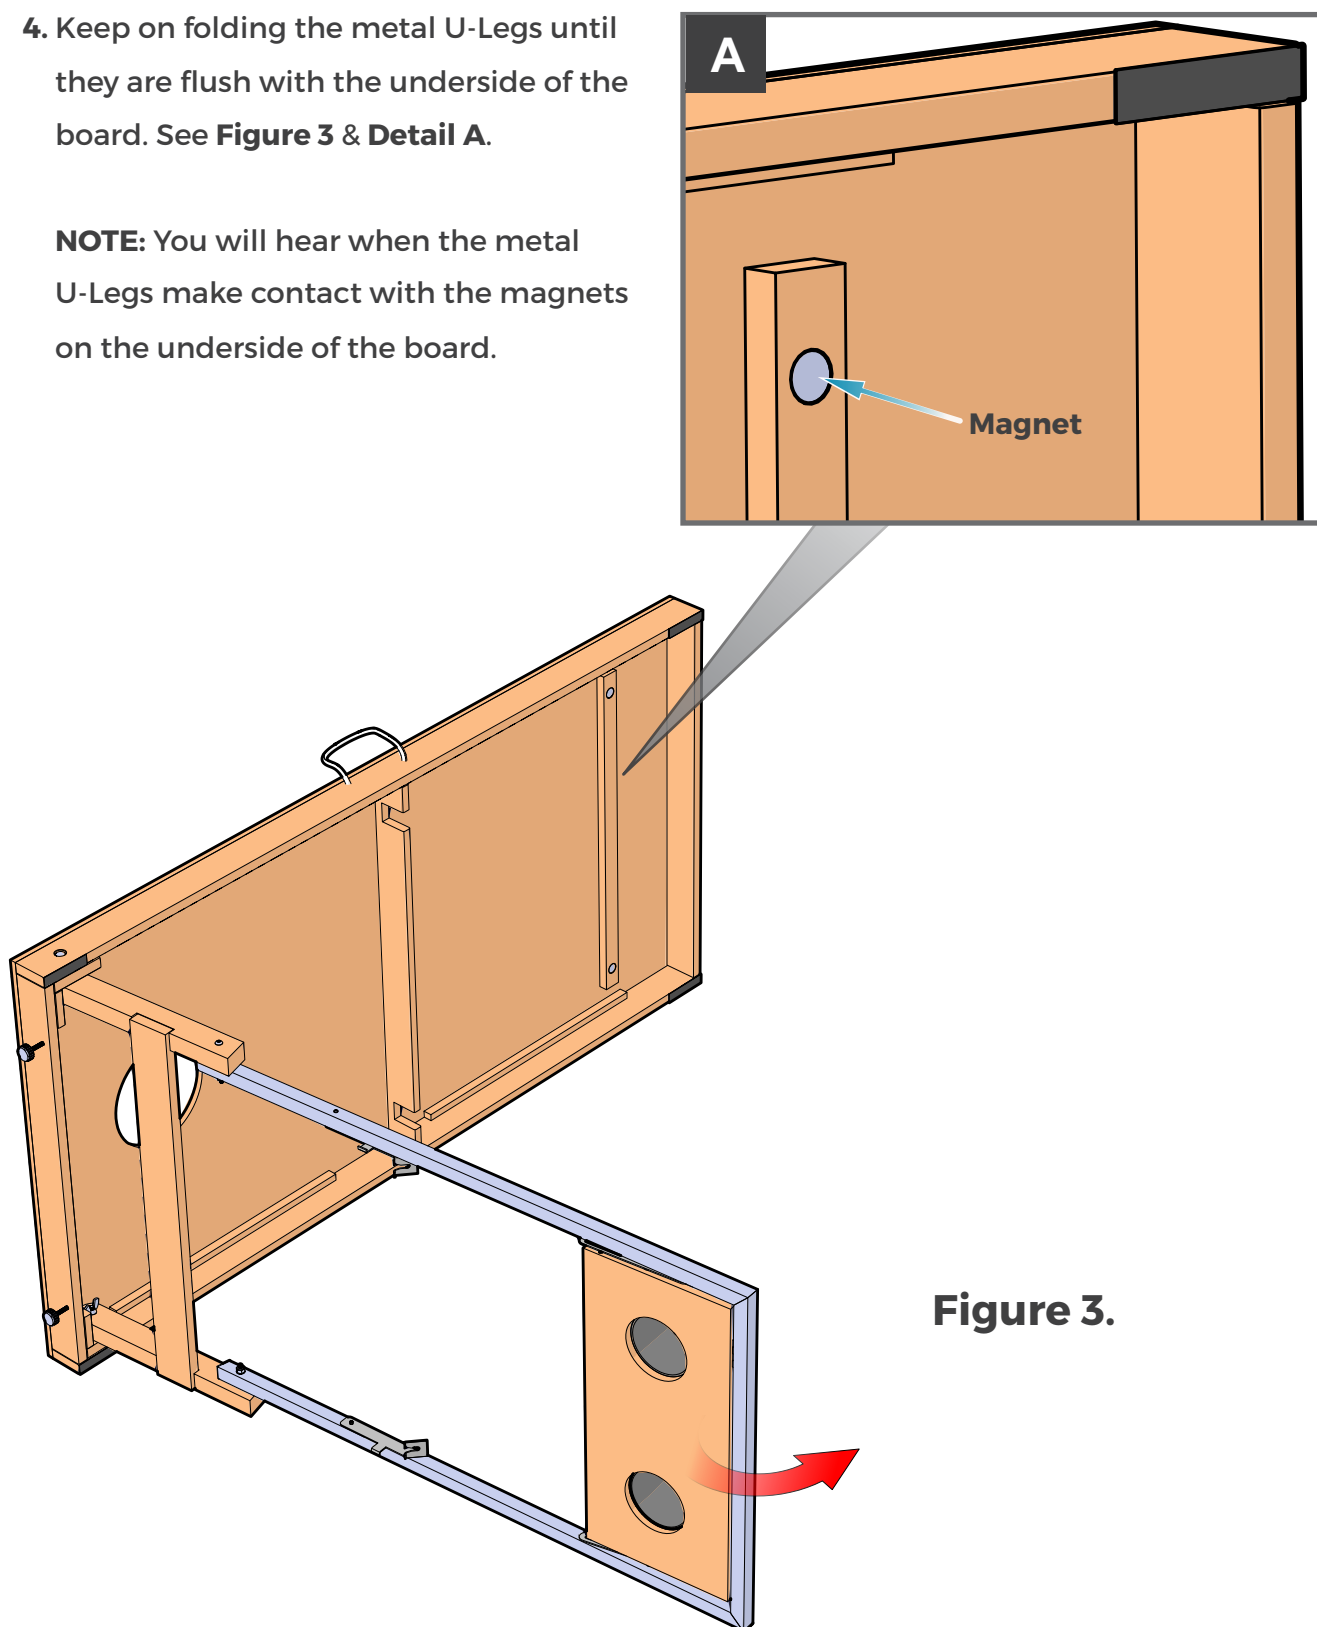


**Figure 3.**

## Storage Instructions - Storing Accessories

5. Magnetic Score Indicators (**#7,#8**) can be stored by placing them on the end of the Metal U-Leg as shown in **Detail A**.

**NOTE:** Make sure magnetic Score Indicators are out of the way so they do not touch when attaching the second board assembly.

6. For convenience the Screw Knobs (**#2**) can be kept screwed in place at the end of the board. Ensure that they are tightened and secure. See **Detail B**.
7. Repeat **steps 1-6** of the Storage Instructions to fold the other Board assembly.
8. Store Bean Bags between the middle crossbeam and the tray as shown in **Figure 4**.

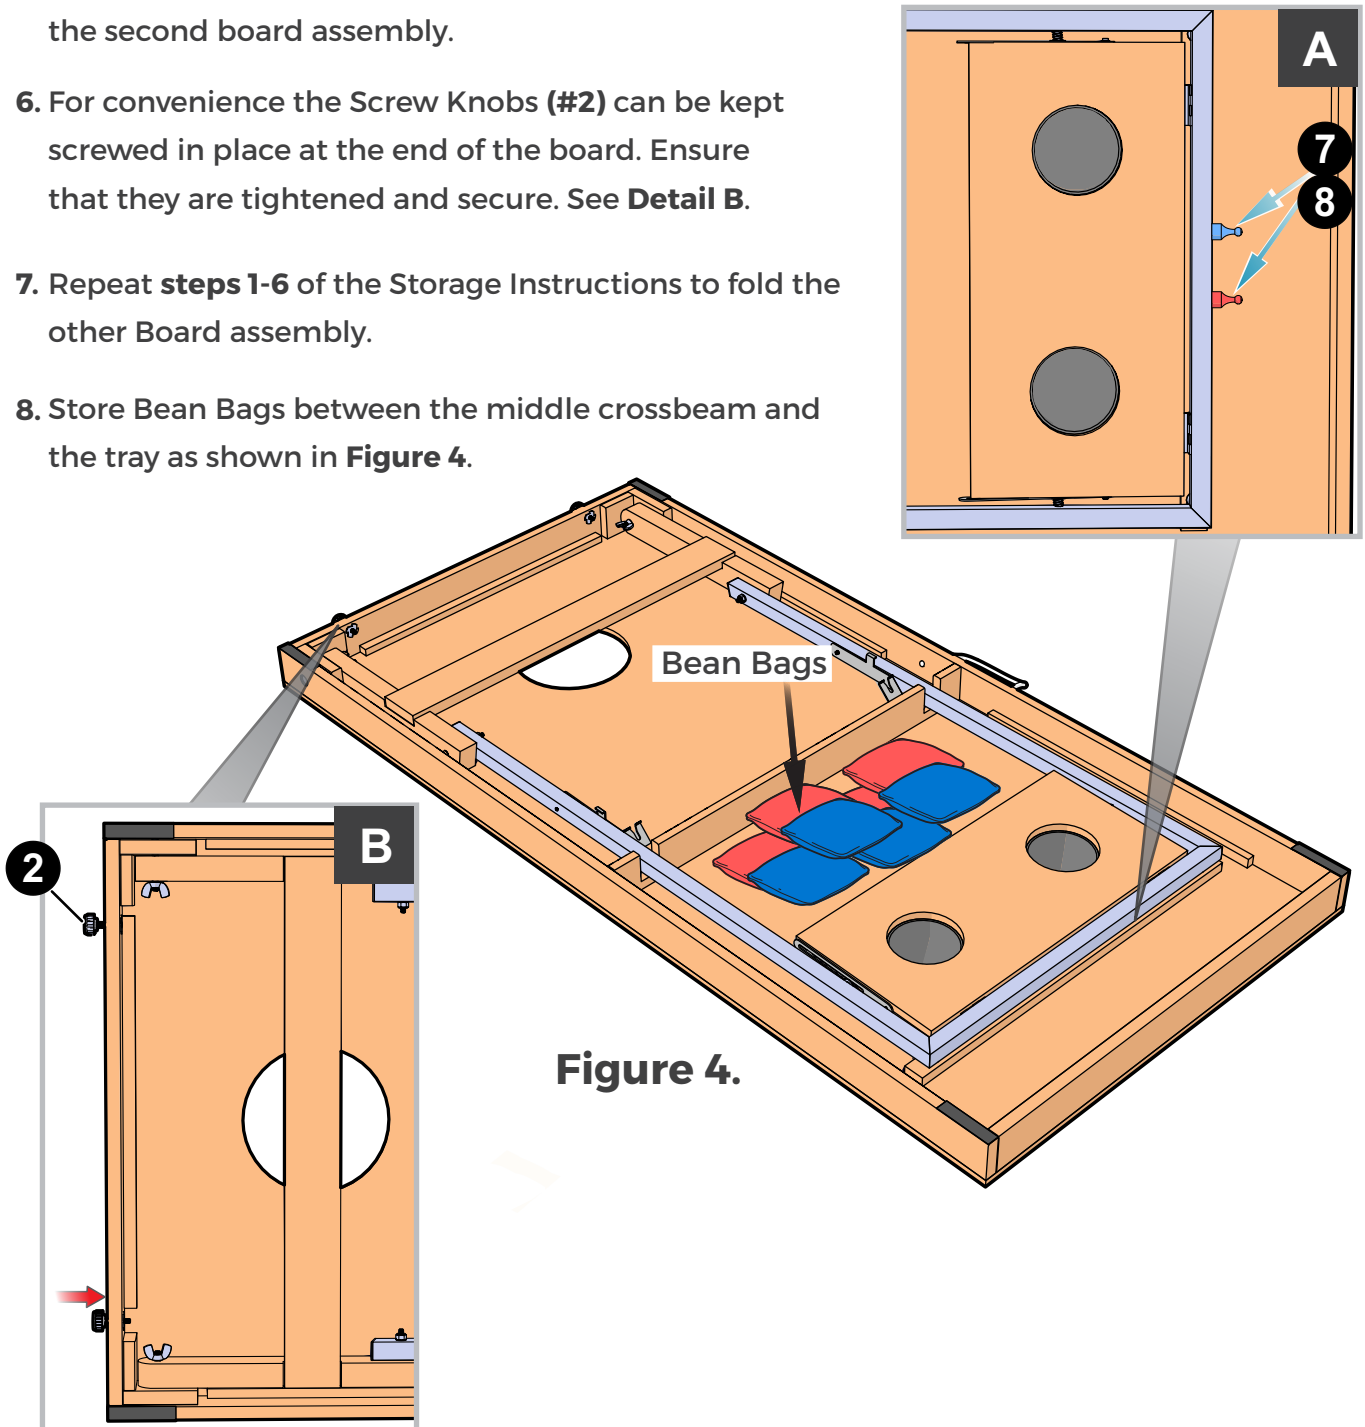


**Figure 4.**

## Storage Instructions - Attaching the Boards

9. Line up and place Boards as shown until the Velcro strips hold the boards together. See **Figure 5** & **Detail A**.

**NOTE:** Game can be played outdoors but must be stored indoors in a dry place.

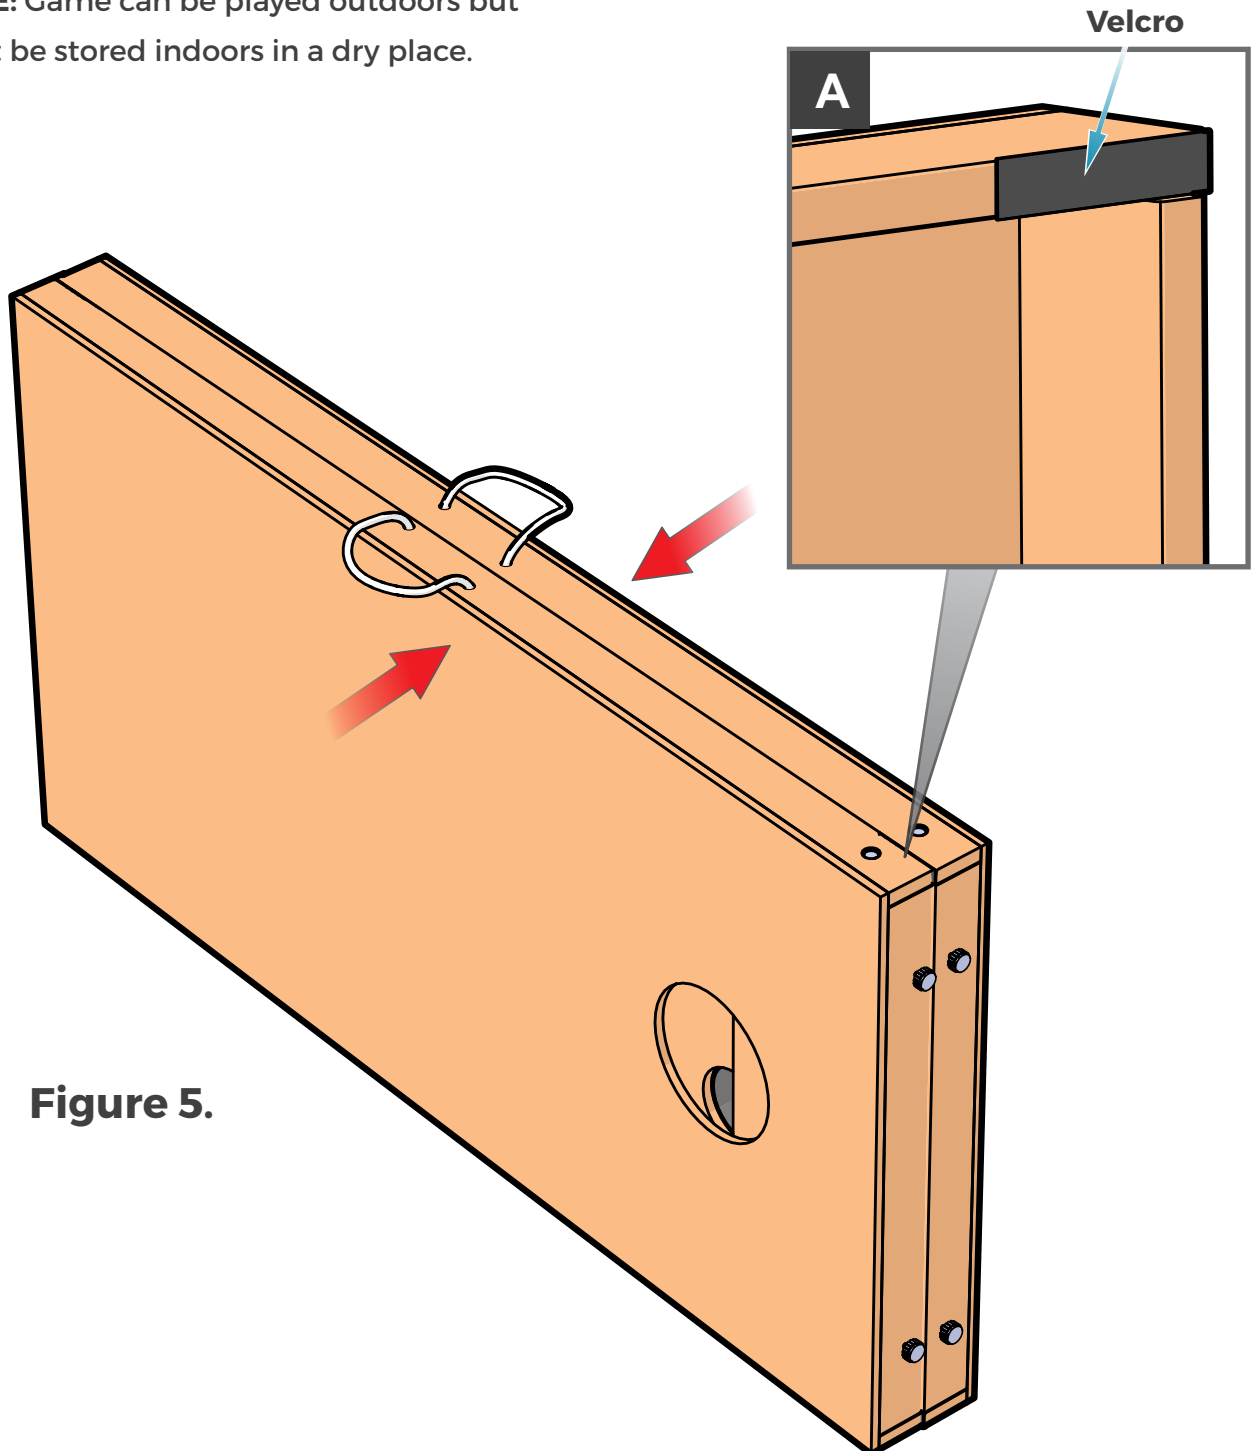

**Figure 5.**