

4: Assembly Diagram of Roof Board / Vegetable Basket



*After distinguishing the front roof board from the rear roof board, insert the plastic into the side wall plastic.



*After installing the roof board, insert the plastic of the vegetable basket into the plastic of the roof seat until the snap point pops up.



5: Assembly Steps of Plate



*Press the detachable convex point of the vegetable basket with the index fingers of the left and right hands, and take out the vegetable basket.



*Press and hold the bumps on the side roof board and take out the front and rear roof. (If it is the roof board on the side of the mop, the mop shall be lowered first to pull out the buckle before taking out the roof board)




*Align the buckles on both sides of the plate with the plastic on the side wall, and clip the two sides into the plastic until the snap point pops up. Then assemble the vegetable basket.



6: Brake Device / Use of Safety Belt / Retraction of Foot Pedal / Lowering of Side Wall / Vehicle Retraction

*Press the brake pipe with your foot to realize the braking state, and hook up the brake pipe to release the brake.

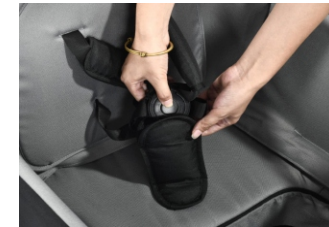


*When a baby sits in the car, be sure to fasten the safety belt to prevent the baby from jumping out of the car and falling and injuring.



*The pedal is equipped with a zipper, which can be pulled up when the pedal is not required.



*Take out the roof board and the plate, and one side of the side wall can be untied for use as a seat (remember not to untie both sides of the wall at the same time).

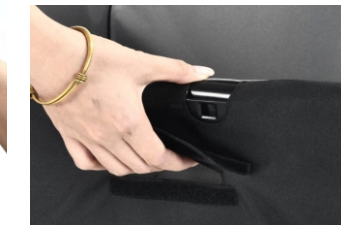

*Press and hold the upper wall closing button, both sides of the side wall are retracted inward, and both ends are retracted inward, so that the trailer can be closed, the mop button can be folded, and the buttons on both sides of the vegetable basket can be adjusted.



3: To Deploy a Trailer



*Open the side wall and clip it into the plastic clips at both ends.



*Move the mop backward to make it parallel to the ground, and pull out the mop.

2: Schematic Diagram of Full Deployment of Trailer



1: Assembly Diagram of Front and Rear Wheels



*Lift the front wheel quick release button, install the front wheel and push it to the bottom.



*Assembly of rear wheel lower seat and wheel



Maintenance

1. Disassembly. Before cleaning the stroller, first remove some cushions, seat covers, sunshades, baffles, etc. on the stroller.
2. Check. After disassembly, you can also check some gap positions of the stroller or whether there is any dirt on the wheels, such as rice or leaves, and clean them out.
3. Cleaning. All the items disassembled in the first step that can be cleaned by hand need to be cleaned manually. It should be noted that the water temperature should not be too high. It would be better to add some neutral detergent for cleaning.
4. Wipe. The entire metal frame of the stroller can be wiped directly with a clean wet cloth. No cleaning agent is required to avoid corroding the metal support.
5. Dry. After washing the items of the seat kit, you can dry them. After drying, it can be assembled. It is necessary to check whether the screws are loosened after assembly. It must be stable.

⚠ WARNING

- Never exceed the maximum person limit on the product
- The product may become unstable if the manufacturer's recommended load is exceeded:
 - Product maximum weight limit: 100 lbs, Rear basket maximum weight limit: 10 lbs
- The product is intended for children in the 6-36 months age group
- During unpacking and assembly, make sure all parts and plastic storage bags are accounted for and kept away from children. All fasteners should be fully tightened
- The seat is not suitable for children under 6 months
- Ensure all locking mechanisms are correctly engaged before use
- Keep your children away from the product when folding and unfolding to avoid injuries
- There are pinch points between the product supports and frame that may injure fingers.
 - Stay clear of pinch points when opening or closing the product or when making adjustments
- Avoid serious injury from falling or sliding out. Always use 5-point harness to secure children
- Never leave children unattended
- Always apply brake when taking children in or out
- Brake must always be engaged when the product is idle to avoid injuries and accidents
- Do not allow children to play unsupervised next to the product
- Do not let your children play with the product
- This product is not a jogger. The product is not suitable for running or skating or any similar activities
- Never leave children in the product while ascending or descending stairs
- Always use caution on uneven surfaces. Contents may become unstable and children could be injured by them
- Do not hang items on the product and place anything on top of the canopy at any time.
- The product may become unstable
- Do not make any alterations or modifications to the product or use products, hardware or parts that have not been supplied by
- Regularly check hardware and parts. Do not use the product if any hardware or parts are damaged or broken

⚠ WARNINGS in this manual can not cover all instances and unforeseen situations that may occur. It must be understood that common sense, general caution and care are factors that can not be incorporated into a user manual. It is important that everyone who uses the wagon understands the warnings. This product must not be operated by children under the age of 12 years.

Contact Wagon customer service for replacement parts or service questions at

- Do not make any alterations or modifications to the product or use products, hardware or parts that have not been supplied by us
- Do not use accessories which are not approved by the manufacturer
- Only use replacement parts supplied and recommended by the manufacturer
- Any violations will void your warranty and may cause instability or structural damage to the product or personal injuries