 


340x100

### FOLDING CLOTHES DRYER

Timed design | Quick drying | 360° cyclic heating

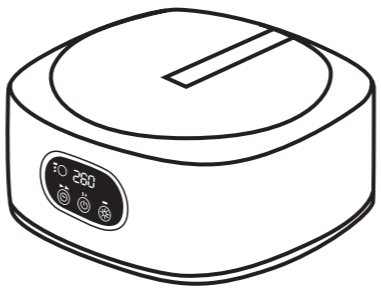

This product is only for use in households or similar places  
To prevent misuse of the product, please read this user manual carefully and keep it properly!

**1. Product Introduction**

1. This product is compact in size and easy to carry. It uses a special folding and opening structure, which can be opened simultaneously.

Drying multiple pieces of clothing, with the characteristics of convenience, speed, and efficiency. Equipped with a detachable hood for easy cleaning.

2. Two levels of hot air drying mode with timed function.

3. The product uses PTC heating element and brushless motor fan.

 
4. Temperature control protection, safe and reliable.

5. Essential for travel and home use, equipped with routine clothing care, multiple items of clothing drying and smoothing functions.


**2. Product parameters**

Product Name	Folding dryer
Product model	MK-901
Rated voltage	AC 100-240V~
Rated frequency	50Hz/60Hz
Rated power	600W

**3. Product Structure Diagram**

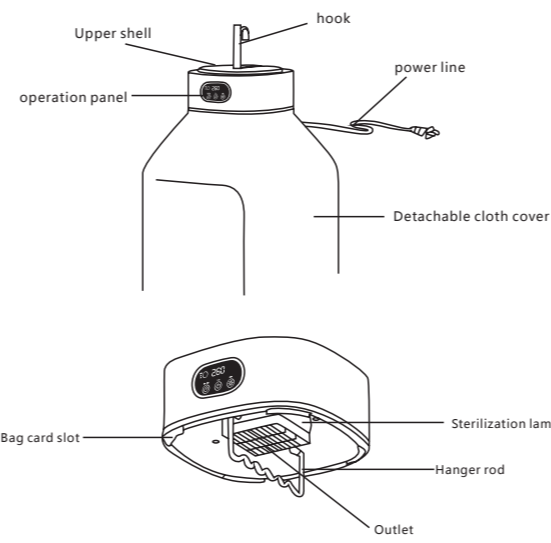

**4. Usage method**

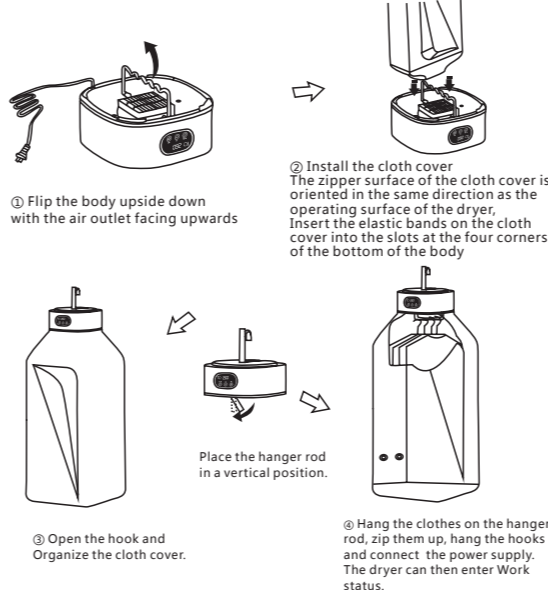 


**5. Operation method**

**standby mode**

When the power is turned on, the product beeps and the display screen shows "OFF" for 10 seconds before turning off, entering standby mode.

**Drying mode**

Lightly touch the "switch" button to cycle through the "soft wind mode, high wind mode, and standby" modes. Press the corresponding gear to display "L01-L02-OFF".

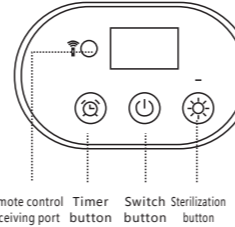


**pay attention to**

After the product enters standby mode, the display screen shows "OFF" and does not without any operation for 20 seconds. Under normal working conditions, the fan will be delayed for 15 seconds before shutting down.

**Timing**

① After the product is turned on, the default timer time is 480 minutes, and the display screen shows "480".

② In the power on state, with each touch of the "Timer" button, the timer count increases by 60 minutes. (The maximum timing is 480 minutes), and the display screen shows the corresponding timer number, repeating this process.



**pay attention to**


The product must be in heating mode to use the timer function. The sterilization lamp will not operate in standby mode when used alone.

**Sterilization lamp function**

Turn on the sterilization lamp.

In the power on state, lightly touch the "sterilization" button for once on that sterilization light.

③ Turn on the sterilization lamp, which defaults to the same drying time. After drying, turn off the sterilization lamp.

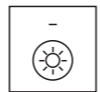

Turn off the sterilization lamp.

When the sterilization lamp is turned on, touch the "sterilization" button again to turn off the sterilization lamp.

**Matters needing attention**

1. The working environment of this product must be kept away from water sources and hanging or placements that are not easy to fall off. The main unit is prohibited from entering water. Before hanging clothes, the power plug of this product must be kept dry. Before connecting the product to the power supply, it is necessary to keep your hands dry before operation to avoid electric shock accidents.

2. Before starting the product, it is necessary to confirm that the air inlet is not covered or unobstructed by foreign objects. If the clothing is a skirt or "net", it is necessary to confirm that the collar part does not obstruct the upper air inlet. The product should not be used in wastelands or environments with high cooling devices to avoid affecting the product's working efficiency or causing overheating protection and shutdown. During the process of sufficient drying, water and air circulation conditions, once the clothes are attached, the power can be turned on and the product enters the working standby state. At this time, you can follow the operating instructions to operate.

3. Dry clothes: new lighter clothing, underwear, socks, t-shirts, shorts, socks, baby clothes, women's underwear, underwear, socks and other clothing. (Prohibit attaching large home textile products).

4. The product should not be exposed to direct sunlight for a long time to avoid accelerated aging of the material and affecting its service life.

5. If the power cord is damaged, it must be replaced with a dedicated cord or a specialized component purchased from the manufacturer or repair department.

6. If the clothes dryer encounters abnormal conditions and cannot work properly, please immediately turn off the dryer and send this equipment repair point for professional inspection and repair. Do not disassemble or repair parts without authorization.

7. Cross functional use is prohibited. This product is designed for quick drying and clothing care functions. All control repairs (heaters, fan motors, switches, and other products) avoid machine malfunctions.

8. Children (under 8 years old), elderly people or patients who have lost their ability to take care of themselves, please use this appliance under adult supervision to prevent accidents.

9. Warning:

① The equipment is only used for drying and washing textiles.

② Do not leave the heater in a closed environment.

③ The heater should not be placed directly under the power socket.

④ Do not use the heater around bathrooms, toilets, or swimming pools.

**Maintenance and repair**

1. Before using this product for the first time or for a long time without using it, or using this dry clothes in humid seasons, the power should be turned on, the heating mode should be turned on, and the machine should be operated for about 10 minutes to dry the machine.

2. When water accidentally enters the main body of the machine, the power should be quickly unplugged, the main body should be gently shaken, and the accumulated water inside the main body should be drained as much as possible. Then, the main body should be placed in a ventilated and dry place for 24 hours to naturally dry the remaining evaporated water.

3. Before using this product, it is necessary to check whether there are any textile fibers, dust, or other blockages in the air outlet, upper and side air inlets of the main unit. If the air inlet of the main unit is blocked, it should be promptly cleaned with a brush or other tools. If the air outlet is blocked.

4. When cleaning the appearance status of the product, please wipe the product clean with a soft and clean cloth. When removing problem stains, be sure to use a mild neutral cleaner.