


## HANDHELD CORDLESS SPOT VACUUM

Item No. 212265

User Guide

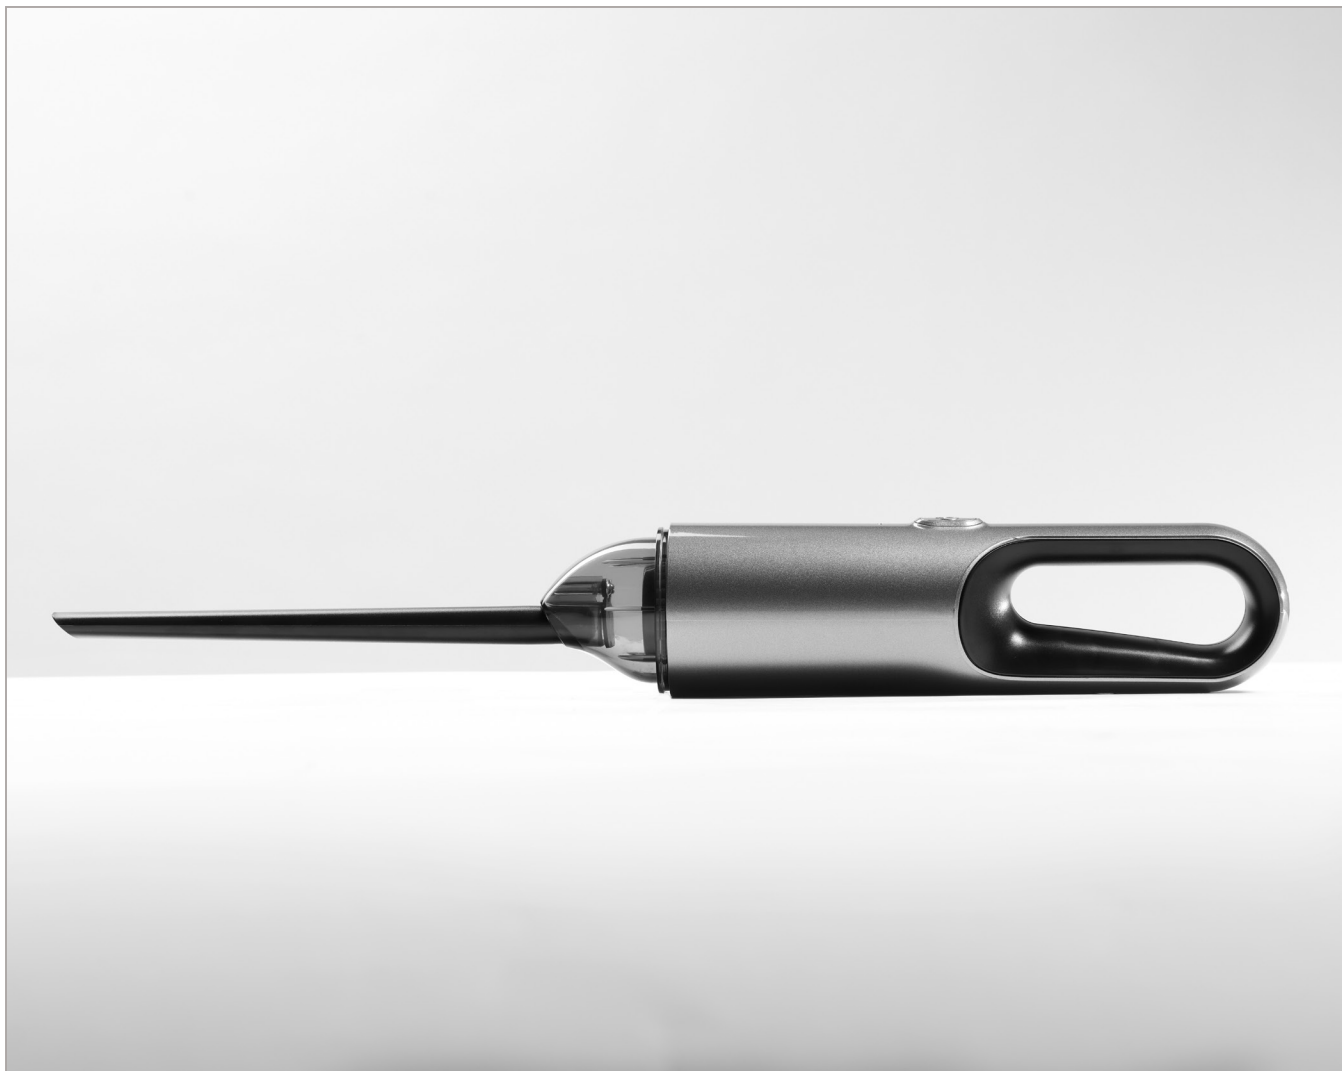


Thank you for purchasing the Handheld Cordless Spot Vacuum. Please take a moment to read this guide and store it for future reference.

## FEATURES

- Portable cordless design
- Features a non-slip handle
- Great for use in vehicles
- Operates on a rechargeable battery
- Includes brush nozzle, gap nozzle, dust-proof cap and USB cable

## IDENTIFICATION OF PARTS

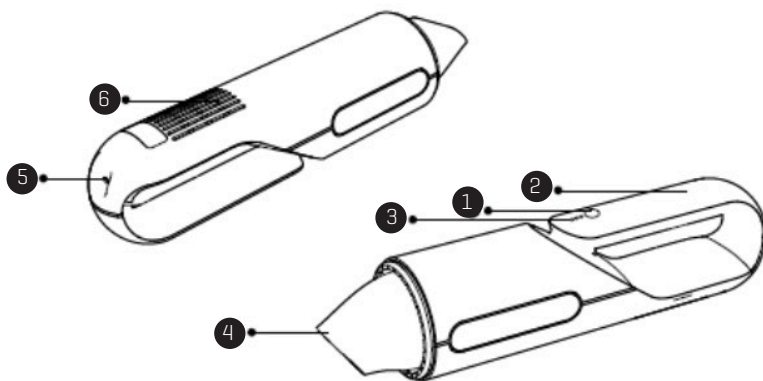

### Accessories:



- |                              |                   |                              |
|------------------------------|-------------------|------------------------------|
| 1 Power Button               | 2 Handle          | 3 Battery / Charge Indicator |
| 4 Nozzle / Dust Bin          | 5 Power Interface | 6 Air Outlet                 |
| 7 Dust - Proof Storage Cover | 8 Brush Nozzle    | 9 Gap Nozzle                 |

## HOW TO USE

- Remove the vacuum cover
- Press the button to turn the vacuum on or off
- Attach brush or suction nozzles as needed
- To empty contents inside, untwist the nozzle/dustbin [#4 pictured above] and dump waste into the trash
- Twist the nozzle back onto the vacuum and resume use
- **NOTE:** Charge vacuum using only the included USB charger. Using other USB chargers may cause damage to the device.

## **WARNINGS**

- Do not use this device close to fire sources
- This device is an electronic and should not come in direct contact with water to avoid damage
- Do not place heavy objects on the device
- Do not use this device in areas with high temperatures and humidity, it will reduce the life span

## **SPECIFICATIONS**

- Dimensions: 2.9" W x 11.9" L
- Material: plastic [fireproof ABC]
- Battery capacity: built-in 2600mAh 7.2V
- Maximum power: 90W
- Charging time: 3.5 hours
- Dust bin capacity holds up to 4.7 oz. of debris
- Suction strength: 0.58 psi [4000PA]

## **WARRANTY/CUSTOMER SERVICE**

This item from SharperImage.com includes a 1-year limited replacement warranty. If you have any questions not covered in this guide, please call our Customer Service department at 1 (877) 210-3449. Customer Service agents are available Monday through Friday, 9:00 a.m. to 6:00 p.m. ET.