


Commercial Work Bench Assembly Instructions

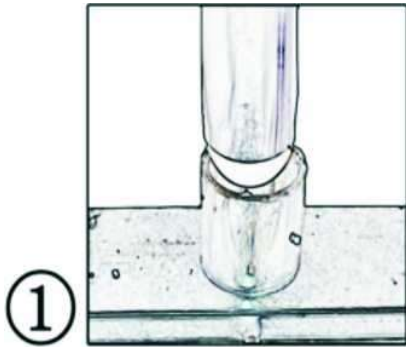

①

Let the tabletop upside down on a soft cloth to prevent scratches. Insert one pipe into a corner support.



②

Remove the allen screws and allen wrench.




③

Each corner support requires Two allen screws. Wait until the table is completely assembled before securely tightening each allen screw.




④

After all four pipes have been Attached, lower the adjustable Table base and let each pipe into the base holes.

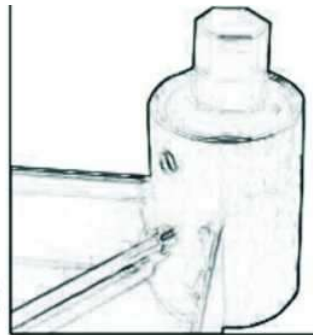

⑤

Each corner support requires Two allen screws. Wait until the table is completely assembled before securely tightening each allen screw.

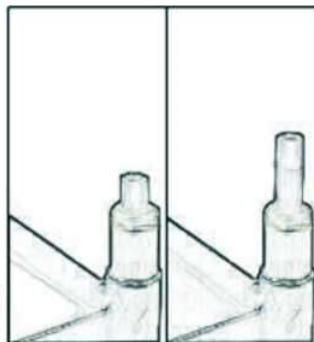

⑥

All four pipes can be adjusted for The surfaces that are not completely level. Rotate the plastic foot pad for differences in floor surface.



⑦

Turn the table over after each screw is securely tightened. Two people should be required to rotate the table.