




# **STAMINA**<sup>®</sup>

## **INMOTION<sup>®</sup> ROWER 125**

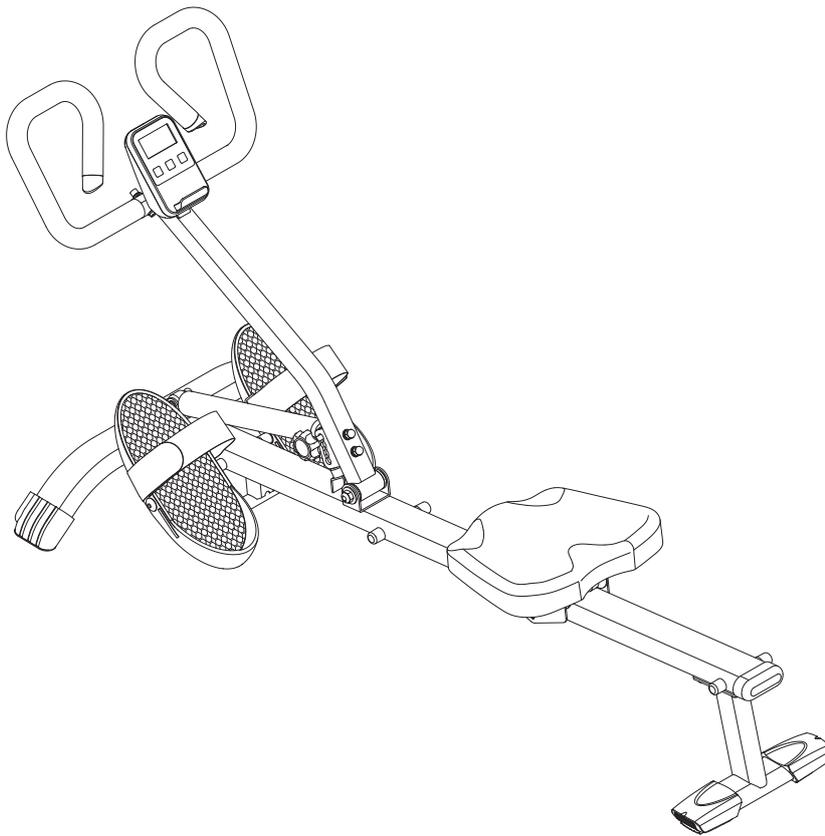

Product May Vary Slightly From Pictured.

**CAUTION:**  
Weight on this product should not exceed 250 lbs.

This Product is Distributed Exclusively by



2040 N Alliance Ave, Springfield, MO 65803  
Customer Care  
1 (800) 375-7520  
[www.staminaproducts.com](http://www.staminaproducts.com)



Download the müiv app  
for a step-by-step assembly video

## **Owner's Manual**

### **⚠ WARNING**

Exercise can present a health risk. Consult a physician before beginning any exercise program with this equipment. If you feel faint or dizzy, immediately discontinue use of this equipment. Serious bodily injury can occur if this equipment is not assembled and used correctly. Serious bodily injury can also occur if all instructions are not followed. Keep others and pets away from equipment when in use. Always make sure all bolts and nuts are securely tightened prior to each use. Follow all safety instructions in this manual.

**When calling for parts or service, please specify the following numbers:**

**Model#: 35-0125**

**S/N: \_\_\_\_\_**

**STAMINA PRODUCTS  
MADE IN CHINA**

©2022 Stamina Products, Inc.  
2022, 12

# müüv

## Quickstart Guide

IMPORTANT

Download the müüv app to experience personalized fitness coaching for your rower!  
müüv also supports other exercise equipment you own and hundreds  
of healthy activities like outdoor walking to make moving fun!



Go to the App Store on your device or  
scan the QR Code for quick access.



**DOWNLOAD APP**

**Unlimited workouts for the Stamina InMotion Rower 125**  
**Assembly video included in the app**  
**No subscription required**

Apple, the Apple logo, iPhone, and iPod touch are trademarks of Apple Inc., registered in the U.S. and other countries. App Store is a service mark of Apple Inc., registered in the U.S. and other countries. Google Play and the Google Play logo are trademarks of Google LLC.

## TABLE OF CONTENTS

Safety Instructions .....	3	Conditioning Guidelines .....	15
Before You Begin .....	5	Warm-Up and Cool-Down .....	16
Equipment Warning, Caution & Notice Labels ...	6	Warranty .....	17
Hardware Identification Chart .....	7	Product Parts Drawing .....	18
Assembly Instructions .....	8	Parts List .....	19
Operational Instructions .....	12	Notes .....	21
Storage .....	14	Fax/Mail Ordering Form .....	22
Maintenance .....	14		

## SAFETY INSTRUCTIONS

**⚠ WARNING** Cancer and Reproductive Harm [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov)

**⚠ WARNING** Consult your physician before starting this or any exercise program. This is especially important if you are over the age of 35, have never exercised before, are pregnant, or suffer from any health problem. This product is for home use only. Do not use in institutional or commercial applications. Failure to follow all warnings and instructions could result in serious injury or death.

**⚠ WARNING** To reduce the risk of serious injury, read the following Safety Instructions before using the Stamina® InMotion® Rower 125.

1. Save these instructions and ensure that other exercisers read this manual prior to using the **Stamina® InMotion® Rower 125** for the first time.
2. Read all warnings and cautions posted on the **Stamina® InMotion® Rower 125**.
3. The **Stamina® InMotion® Rower 125** should only be used after a thorough review of the Owner's Manual. Make sure that it is properly assembled and tightened before use.
4. We recommend that two people be available for assembly of this product.
5. Keep children away from the **Stamina® InMotion® Rower 125**. Do not allow children to use or play on the **Stamina® InMotion® Rower 125**. Keep children and pets away from the **Stamina® InMotion® Rower 125** when it is in use.
6. It is recommended that you place this exercise equipment on an equipment mat.
7. Set up and operate the **Stamina® InMotion® Rower 125** on a solid level surface. Do not position the **Stamina® InMotion® Rower 125** on loose rugs or uneven surfaces.
8. Make sure that adequate space is available for access to and around the **Stamina® InMotion® Rower 125**.
9. Before using, inspect the **Stamina® InMotion® Rower 125** for worn or loose components, and securely tighten or replace any worn or loose components prior to use.
10. Before using, always check the **SHOCK(10)** is secured properly with the **LOCKING KNOB(44)** and **ADJUSTMENT KNOB(45)**.
11. Shocks on steppers/rowers get HOT during use. To avoid burns, do not touch the shocks until they have time to cool.
12. Consult a physician prior to commencing an exercise program and follow his/her recommendations in developing your fitness program. If at any time during exercise you feel faint, dizzy, or experience pain, stop and consult your physician.
13. Always choose the workout which best fits your physical strength and flexibility level. Know your limits and train within them. Always use common sense when exercising.
14. Do not wear loose or dangling clothing while using the **Stamina® InMotion® Rower 125**.
15. Never exercise in bare feet or socks; always wear proper footwear such as running, walking, or cross training shoes that fit well, provide foot support, and feature non-skid rubber soles.
16. Be careful to maintain your balance while using, mounting, dismounting, or assembling the **Stamina® InMotion® Rower 125**, loss of balance may result in a fall and bodily injury.
17. Do not use the seat to move the **Stamina® InMotion® Rower 125**. The Seat will move and the **SEAT CARRIAGE(5)** may pinch your hand or fingers.
18. The **Stamina® InMotion® Rower 125** should not be used by persons weighing over 250 pounds.
19. The **Stamina® InMotion® Rower 125** should be used by only one person at a time.
20. The **Stamina® InMotion® Rower 125** is for consumer use only. It is not for use in public or semipublic facilities.

**EXTEND YOUR PARTS WARRANTY TO 180 DAYS FROM THE DATE OF PURCHASE. REGISTER YOUR PRODUCT.**



**NEED HELP?  
CONTACT US FIRST  
1 (800) 375-7520  
customer.care@staminaproducts.com**

Hi! From all of us here at Stamina Products, thank you for your purchase. We know that you have big fitness goals in mind and we are here to help you along. Call us, email us, or send us a message on Facebook. Be sure to contact us if you have any questions on your new product. We look forward to hearing from you!

With your body in mind,  
***Stamina Customer Care***

**To enact your extended warranty and to help us better serve you, please go online and register your new product.**

**register.staminaproducts.com**

It is quick and easy to register online, but if you're a little old school or just need a reason to raise that little flag on your mailbox, fill out the info on the last page of this manual and mail it in.



**ONLINE**

customer.care@staminaproducts.com  
www.staminaproducts.com



**TELEPHONE**

1 (800) 375-7520



**FAX**

(417) 889-8064



**MAIL**

Stamina Products, Inc.  
ATTN: Customer Care  
2040 N Alliance Ave  
Springfield, MO 65803

 facebook.com/StaminaProducts  
facebook.com/AeroPilates

**CUSTOMER CARE HOURS:**  
Monday-Thursday, 7:30 AM-5:00 PM, Central Time  
Friday, 8:00 AM-3:00 PM, Central Time

## BEFORE YOU BEGIN

Thank you for choosing the **Stamina® InMotion® Rower 125**. We take great pride in this quality product and hope it will provide many hours of quality exercise to make you feel better, look better, and enjoy life to its fullest.

It's a proven fact that a regular exercise program can improve your physical and mental health. Too often, our busy lifestyles limit our time and opportunity to exercise. The **Stamina® InMotion® Rower 125** provides a convenient and simple method to begin your journey of getting your body in shape and achieving a happier and healthier lifestyle.

Before reading further, please review the drawing below and familiarize yourself with the parts that are labeled. Locate the serial decal on the product and write the serial number on the cover of the manual in the space provided. See the next page for an image of the serial decal. Model


number and serial number are required when calling for assistance.

Read this manual carefully before using the **Stamina® InMotion® Rower 125**.

Providing you with a quality product is Stamina's top priority. However, sometimes there could be a missing or incorrectly sized part. If you have any questions or problems with the parts included with your **Stamina® InMotion® Rower 125**, please do not return the product. Contact us **FIRST!**

If a part is missing or defective, please contact Customer Care for assistance. Call us toll free at 1-800-375-7520 (in the U.S.) or live chat on [staminaproducts.com](http://staminaproducts.com). Our Customer Care Staff is available to assist you from 7:30 A.M. to 5:00 P.M. (Central Time) Monday through Thursday and 8:00 A.M. to 3:00 P.M. (Central Time) on Friday.

Be sure to have the name and model number of the product available when you contact us.

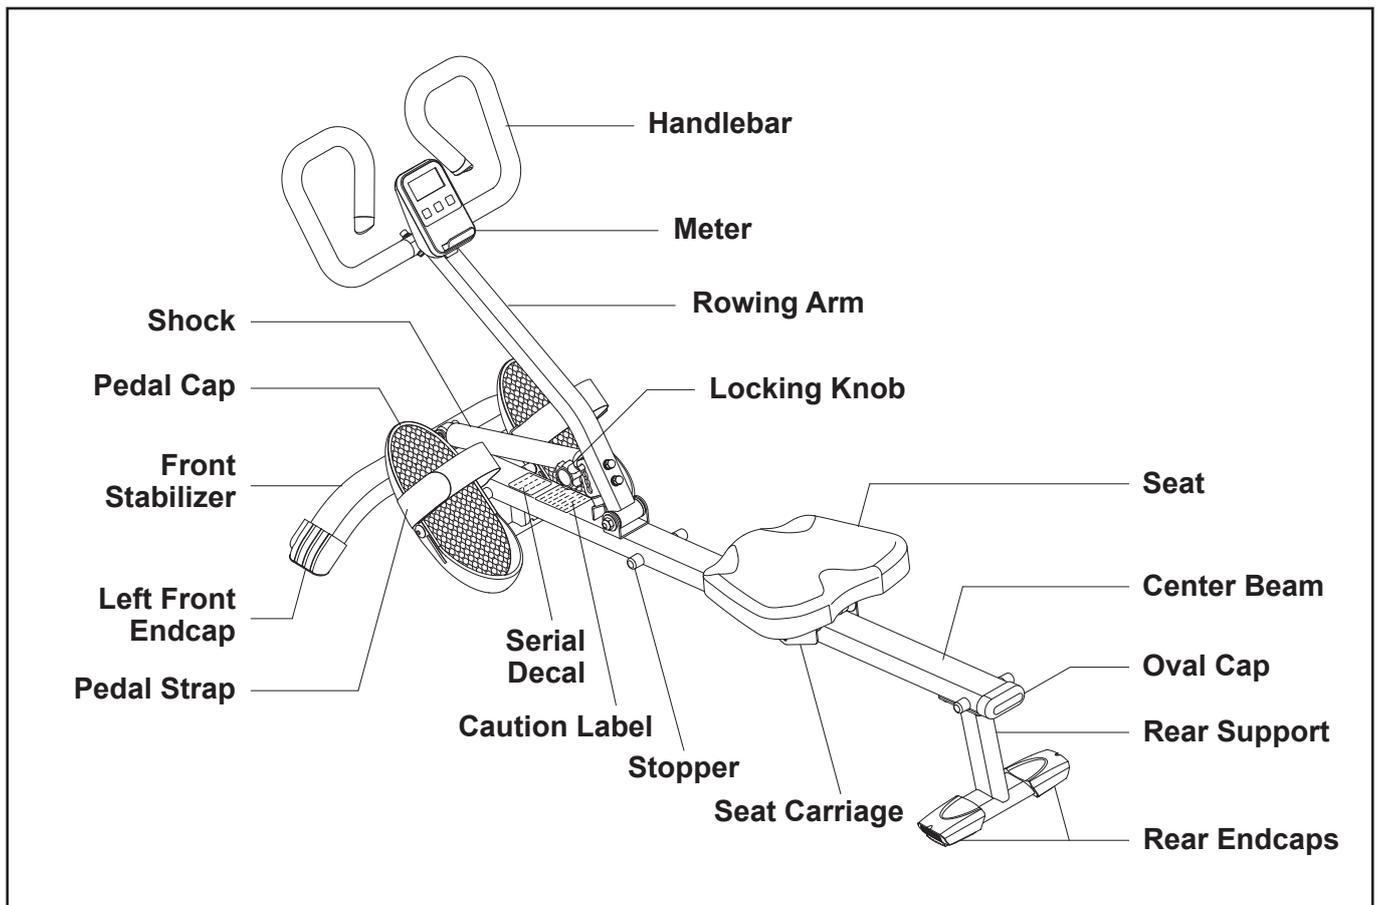

THE FOLLOWING TOOLS ARE REQUIRED FOR ASSEMBLY :



## EQUIPMENT WARNING, CAUTION & NOTICE LABELS

This chart is provided to help identify the warning, caution, and notice labels on the **Stamina® InMotion® Rower 125**. Please take a moment to familiarize yourself with all of the warning, caution, and notice labels.

### CAUTION LABEL(39)



### SHOCK CAUTION(38)




### SERIAL DECAL(48)




To best serve you, our Customer Care Representatives will need your serial number. For quick access, write in your serial number on the cover of the manual.

# HARDWARE IDENTIFICATION CHART





This chart is provided to help identify the hardware used in the assembly process. Place the washers or the ends of the bolts or screws on the circles to check for the correct diameter. Use the small scale to check the length of the bolts and screws.

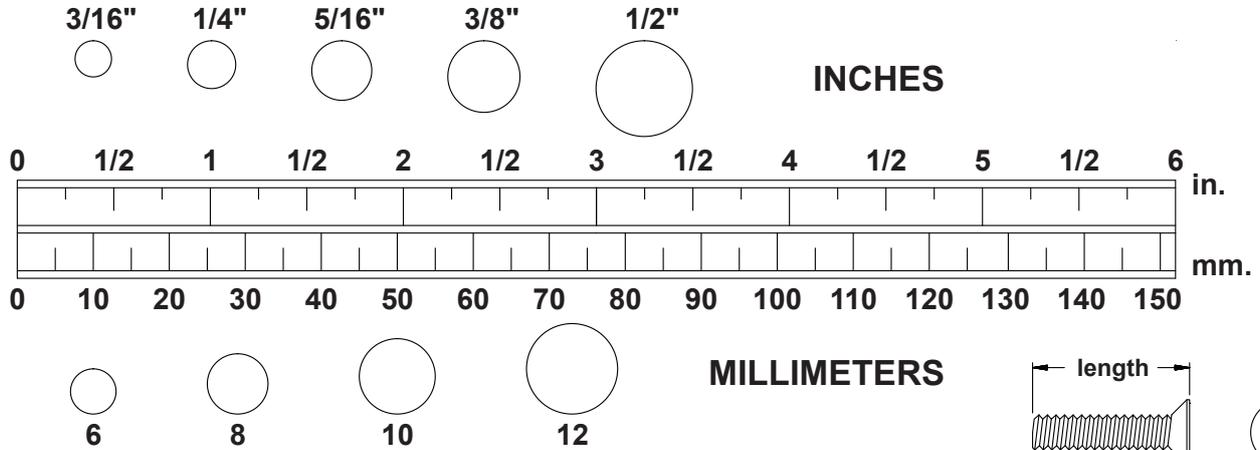

**NOTICE:** The length of all bolts and screws, except those with flat heads, is measured from below the head to the end of the bolt or screw. Flat head bolts and screws are measured from the top of the head to the end of the bolt or screw.

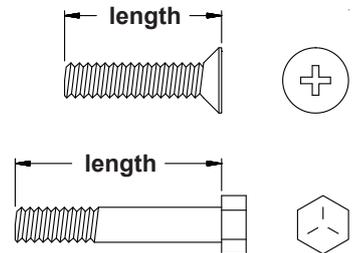

After unpacking the unit, open the hardware bag and make sure that you have all the following items. Some hardware may be already attached to the part.

	Part Number and Description	Qty
	15 Screw, Round Head (M5 x 0.8 x 15mm)	2
	21 Bolt, Button Head (M8 x 1.25 x 15mm)	8
	23 Carriage Bolt (M8 x 1.25 x 42mm)	2
	26 Bolt, Button Head (M10 x 1.5 x 80mm)	1
	49 Bolt, Socket Head (M8 x 1.25 x 42mm)	2
	12 Washer (M8)	8
	22 Large Washer (M8)	2
	27 Washer (M10)	2
	14 Acorn Nut (M8 x 1.25)	2
	28 Nylock Nut (M10 x 1.5)	1
	50 Arc Washer (M8)	2
	55 Lock Washer (M8)	2

## ASSEMBLY INSTRUCTIONS

Place all parts from the box in a cleared area and position them on the floor in front of you. Remove all packing materials from your area and place them back into the box. Do not dispose of the packing materials until assembly is completed. Read each step carefully before beginning. If you are missing a part, please go to [staminaproducts.com](http://staminaproducts.com) under the Customer Care section and order the part needed, e-mail us at [customer.care@staminaproducts.com](mailto:customer.care@staminaproducts.com), or call us toll free at 1-800-375-7520 (in the U.S.). Our Customer Care Staff is available to assist you from 7:30 A.M. to 5:00 P.M. (Central Time) Monday through Thursday and 8:00 A.M. to 3:00 P.M. (Central Time) on Friday.


**Some product parts are fit tested at the factory to ensure proper fit and alignment. Marks in the paint may be noticeable, but are not an indication of damage.**

### STEP 1

Attach the **FRONT STABILIZER(3)** to the **CENTER BEAM(2)** with **CARRIAGE BOLTS(M8x1.25x42mm)(23)**, **WASHERS(M8)(12)**, and **ACORN NUTS(M8x1.25)(14)**.

### STEP 2

Attach the **SEAT(7)** to the **SEAT CARRIAGE(5)** with **BUTTON HEAD BOLTS(M8x1.25x15mm)(21)** and **WASHERS(M8)(12)**.

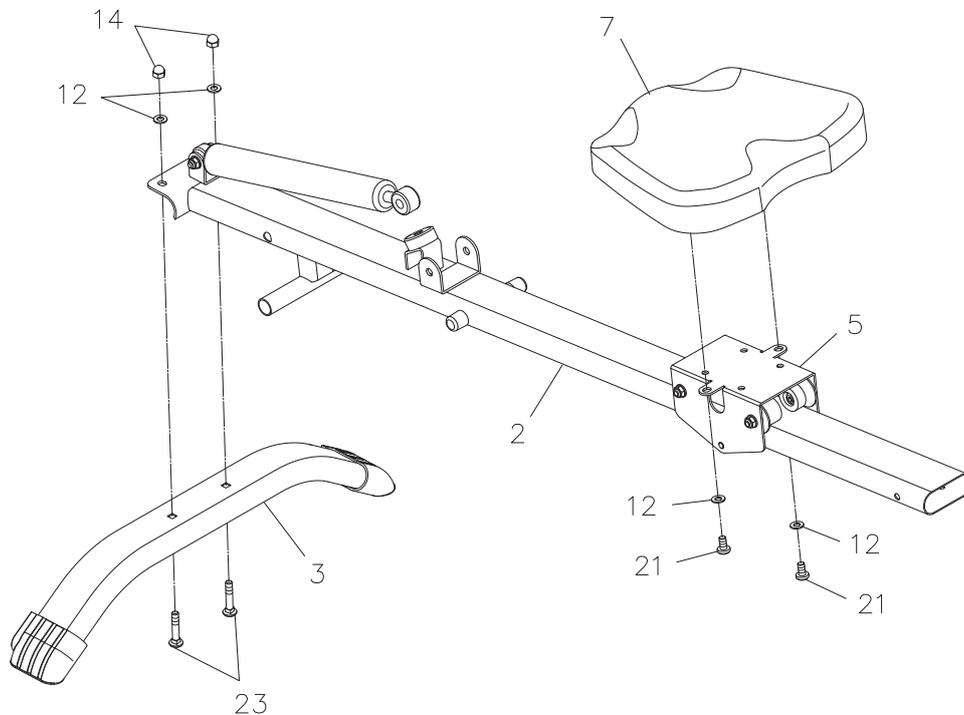


## ASSEMBLY INSTRUCTIONS

### STEP 3

Insert the **STOPPER SHAFT(30)** through the hole in the **CENTER BEAM(2)**. Screw two **STOPPERS(29)** onto both ends of the **STOPPER SHAFT(30)** and tighten at the same time.

### STEP 4

Attach the **REAR SUPPORT(1)** to the **CENTER BEAM(2)** with **BUTTON HEAD BOLTS(M8x1.25x15mm) (21)** and **WASHERS(M8)(12)**. Press The **OVAL CAP(31)** into the back end of the **CENTER BEAM(2)**.

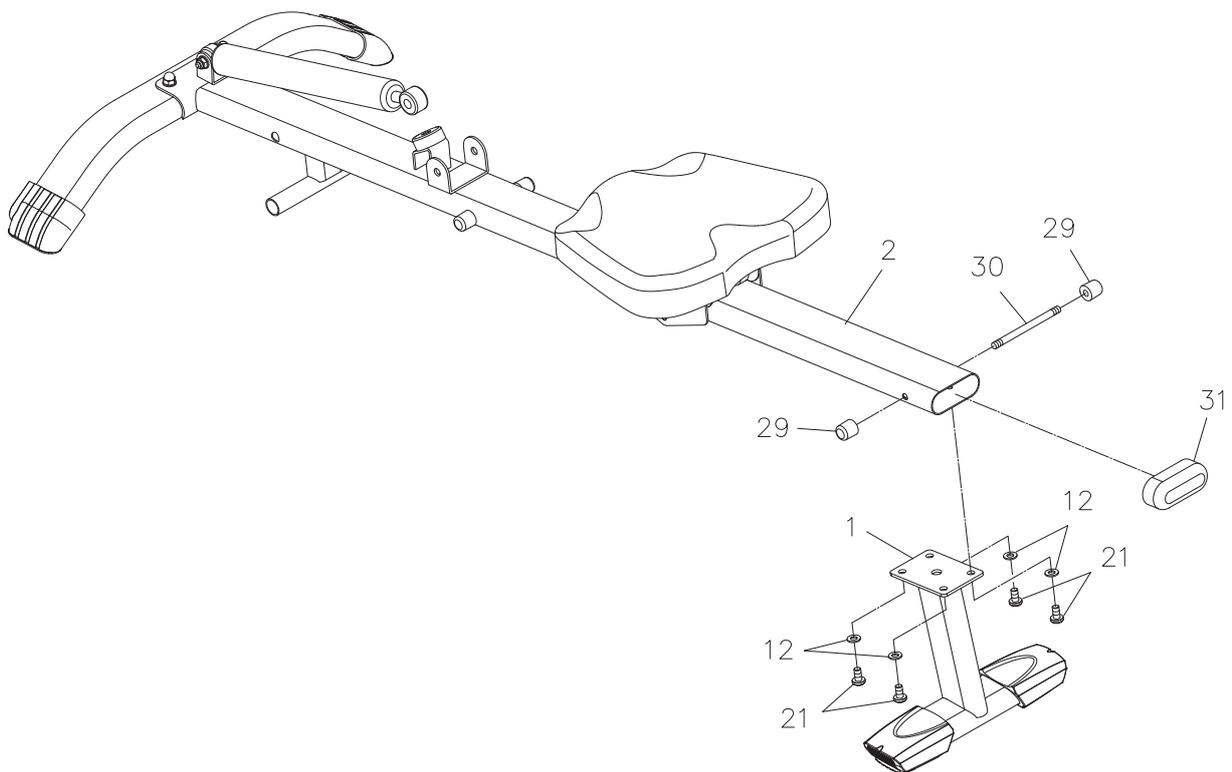

## ASSEMBLY INSTRUCTIONS

### STEP 5


Attach the **ROWING ARM(43)** to the **CENTER BEAM(2)** with **BUTTON HEAD BOLT(M10x1.5x80mm)(26)**, **WASHERS(M10)(27)**, and **NYLOCK NUT(M10x1.5)(28)**.

### STEP 6

Connect the **SHOCK(10)** to one of the adjustment holes on the **ROWING ARM(43)** and secure with the **LOCKING KNOB(44)** and the **ADJUSTMENT KNOB(45)**. Refer to detail view A. The shoulder of the **LOCKING KNOB(44)** and end of the **ADJUSTMENT KNOB(45)** must be inserted into one of the adjustment holes.

### STEP 7

Attach the **HANDLEBAR(6)** to the top of the **ROWING ARM(43)** with **SOCKET HEAD BOLTS(M8x1.25x42mm)(49)**, **LOCK WASHERS(M8)(55)**, and **ARC WASHERS(M8)(50)**.

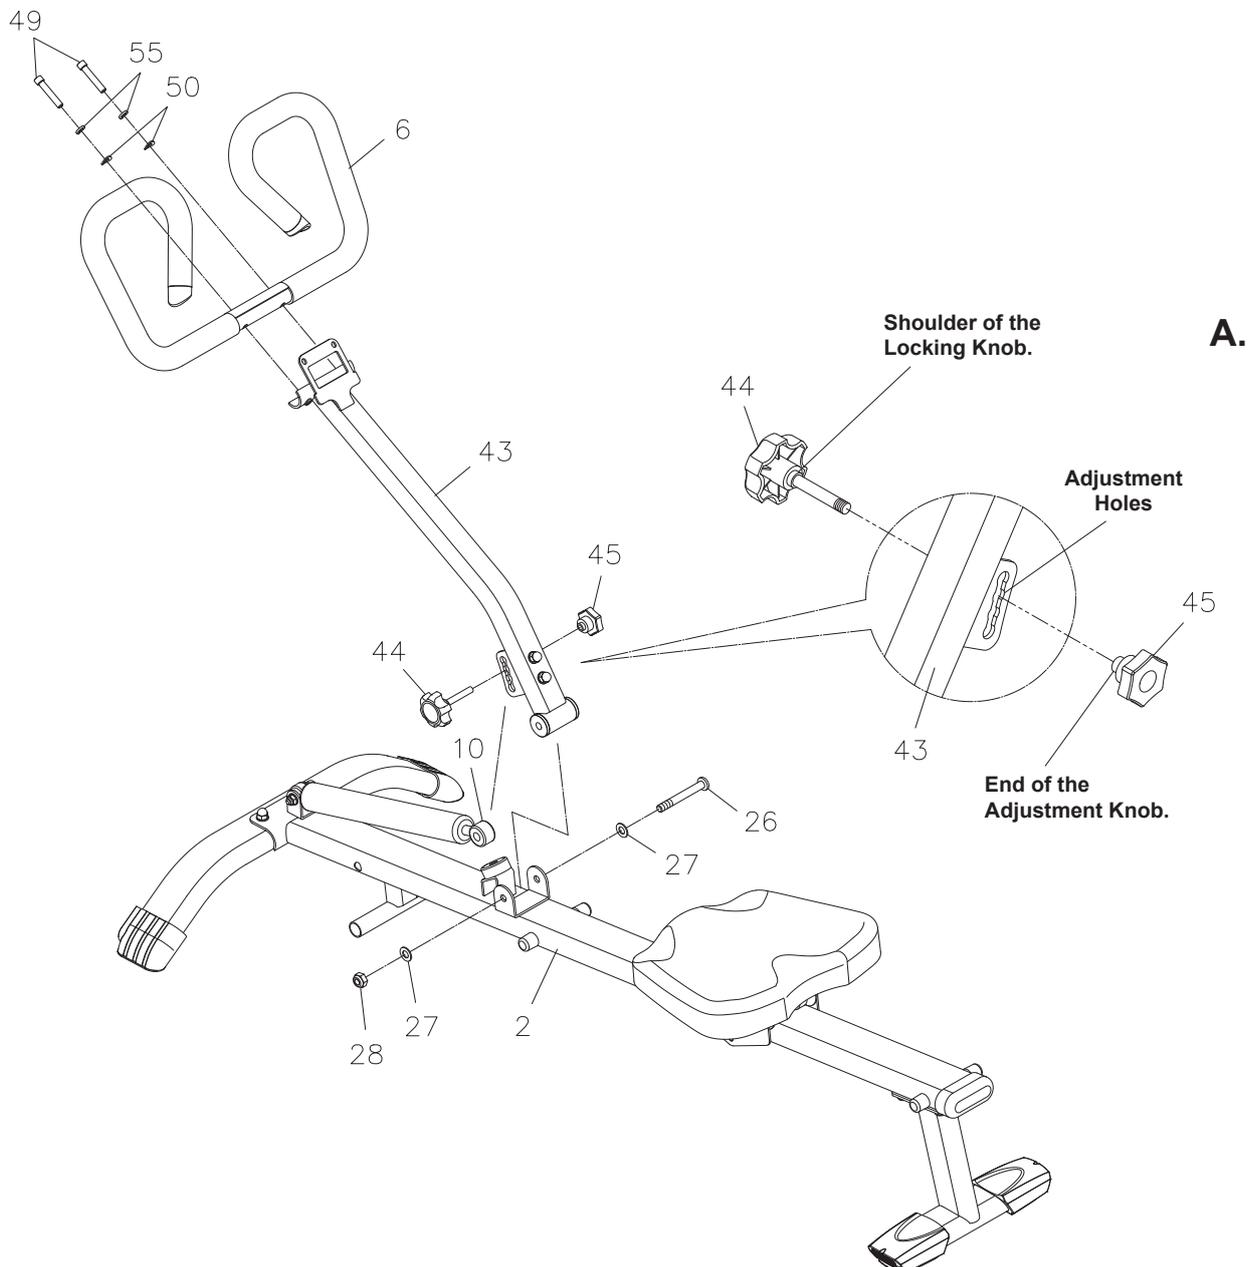


## ASSEMBLY INSTRUCTIONS

### STEP 8

Insert the **PEDAL SHAFT(19)** through holes located on the **CENTER BEAM(2)**. Slide a **PEDAL SPACER(20)** and a **PEDAL CAP(18)** onto each end of the **PEDAL SHAFT(19)**. Then secure the **PEDAL CAPS(18)** with **BUTTON HEAD BOLTS(M8x1.25x15mm)(21)** and **LARGE WASHERS(M8)(22)** at both ends of the **PEDAL SHAFT(19)**. You need to use two Allen Wrenches to tighten the **BUTTON HEAD BOLTS(M8x1.25x15mm)(21)** at both ends of the **PEDAL SHAFT(19)** at the same time.

### STEP 9

Install two AAA batteries into the **METER(8)**, the batteries are not included. See page 14 for detailed battery installation instructions. Attach the **METER(8)** onto the plate on the **ROWING ARM(43)** with **ROUND HEAD SCREWS(M5x0.8x15mm)(15)**.

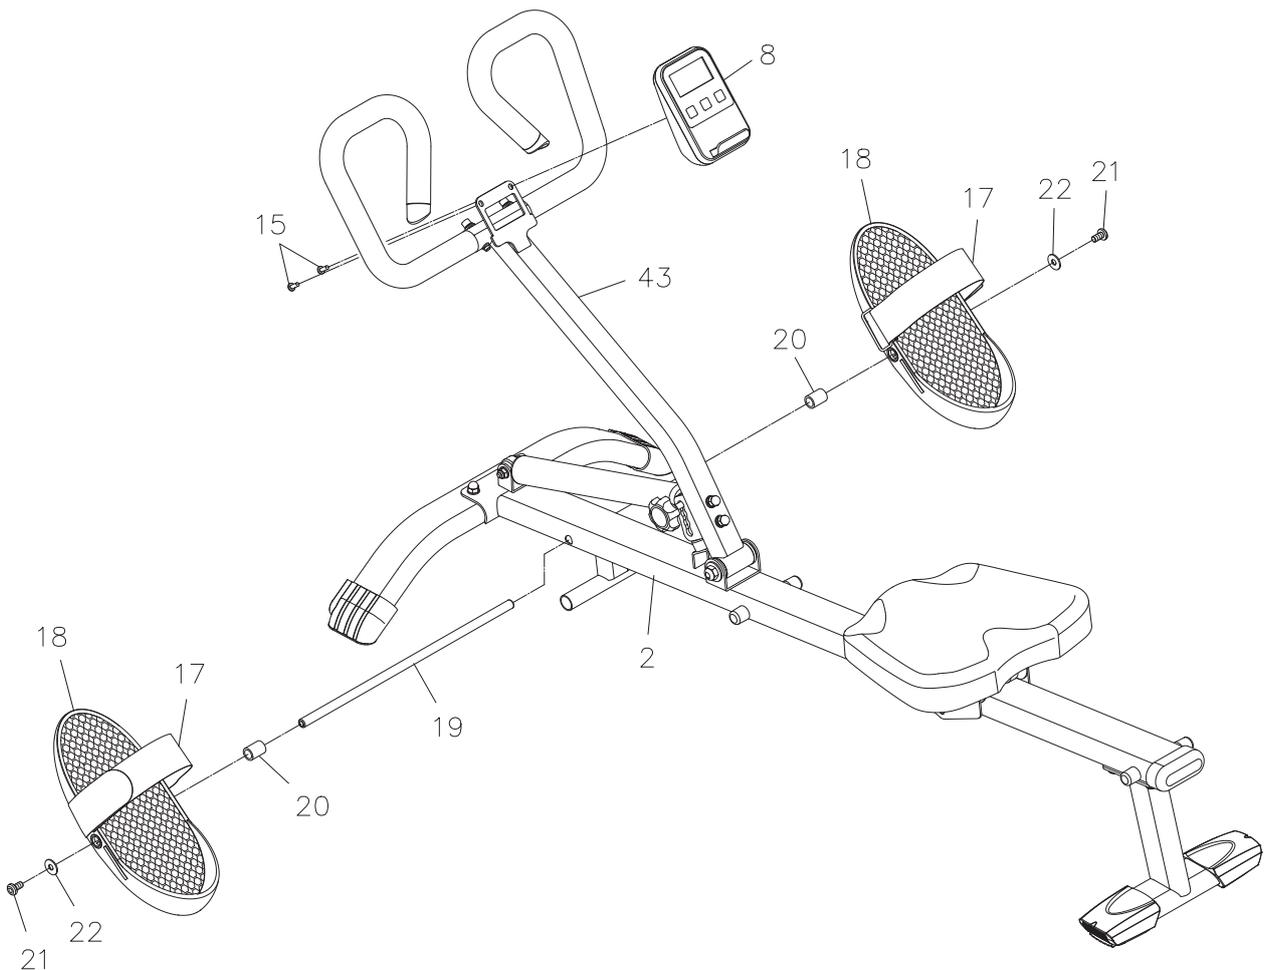


## OPERATIONAL INSTRUCTIONS

### LOAD ADJUSTMENT

The resistance of the rowing workout can be adjusted by attaching the **SHOCK(10)** to different adjustment holes on the **ROWING ARM(43)** with the **LOCKING KNOB(44)** and **ADJUSTMENT KNOB(45)**. The adjustment hole at the lowest position provides the lowest resistance. The adjustment hole at the highest position provides the highest resistance.

To adjust, loosen the **ADJUSTMENT KNOB(45)** until its end and the shoulder of the **LOCKING KNOB(44)** are completely out from the adjustment hole. Then move the **LOCKING KNOB(44)** and **ADJUSTMENT KNOB(45)** together to the desired position. Tighten the **ADJUSTMENT KNOB(45)** and make its end and the shoulder of the **LOCKING KNOB(44)** get into the desired adjustment hole.

**CAUTION:** The shocks get **HOT** after a few minutes of use. Allow to cool before moving.

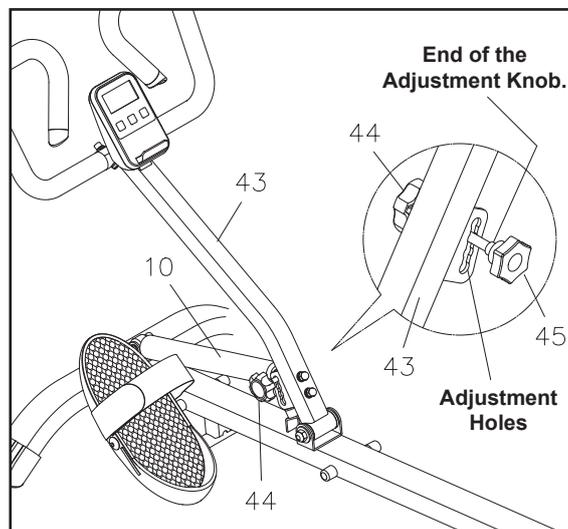


### PEDAL STRAP ADJUSTMENT


If you feel it is more comfortable for your workout, you can change to attach the **PEDAL STRAP(17)** to the lower position in the **PEDAL CAP(18)** as shown in illustration 1 below. Run the **PEDAL STRAP(17)** through the opening from the bottom of the **PEDAL CAP(18)**, then go through the Steel Ring. Slide the Steel Ring down against the **PEDAL CAP(18)**. Run the **PEDAL STRAP(17)** through the opening in the **PEDAL CAP(18)** on the other side from the top as shown in the illustration 1, then make the end of the **PEDAL STRAP(17)** go up to attach onto the upper part of the **PEDAL STRAP(17)** with the Hook & Loop Pad.

Attach the end of the **PEDAL STRAP(17)** to different position with the Hook & Loop Pad to adjust the length. Refer to illustration 2.

1.

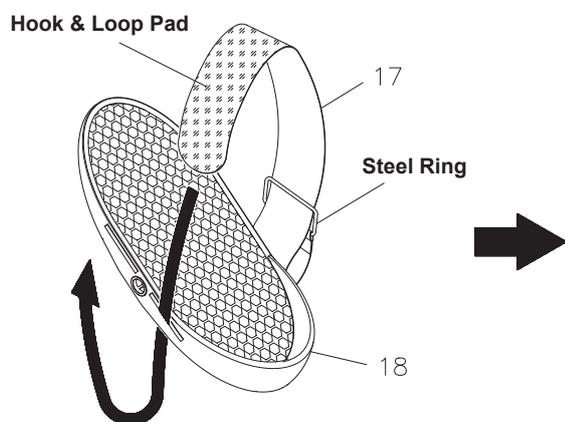

2.

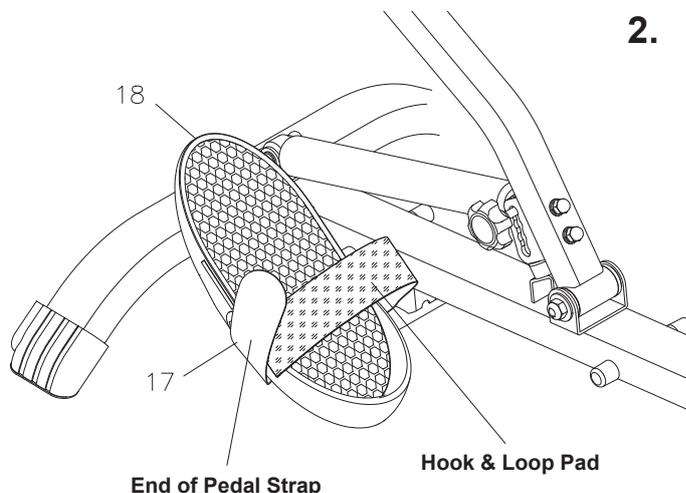

## OPERATIONAL INSTRUCTIONS

### USING THE FITNESS METER

**POWER ON:** Move the handlebar or press any button.

**POWER OFF:** Automatically shuts off after 4 minutes of inactivity.

### FUNCTION BUTTONS :

**MODE :** In the **STOP** mode, press and release to select each function for preset target values for **TIME, CALORIES, and COUNT.**


Press and release to select functions for display for **TIME, CALORIES, COUNT, TOTAL COUNT, and RPM.**

Press the button and hold it down for two seconds to reset all functions to zero.

**SET :** In the **STOP** mode, press to set target values. Press the button and hold it down for two seconds the meter will continue to add the values. Release the **SET** button to stop.

**RESET :** In the **STOP** mode, press the button to reset the setting values to zero.

Press the button and hold it down for two seconds to reset all functions to zero.

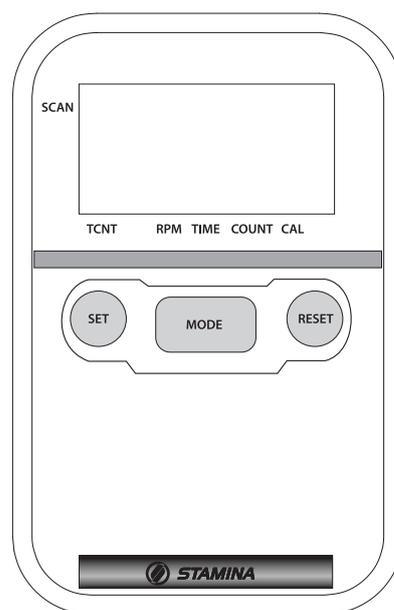

### FUNCTIONS:

**SCAN:** Automatically scans each function of **TIME, CALORIES, COUNT, TOTAL COUNT,** and **RPM** in sequence changing every six seconds. Press and release the **MODE** button until the “**SCAN**” appears on the display.

**TIME:** Displays the time from 1 sec. up to 99:59 minutes. Counts down from preset value.

**CALORIES:** Displays the calories burned from zero to 999.9 Kcal. Counts down from preset value.

**COUNT:** The calorie readout is an estimate for an average user. It should be used only as a comparison between workouts on this unit.

Displays the total number of rows you have taken from zero to 9999 rows. Counts down from preset value.

**TOTAL COUNT:** Displays the total accumulated number of rows you have taken, from zero to 9999 rows.

The **TOTAL COUNT** value is retained when the meter is turned off, until the batteries are removed.

**RPM:** Displays the rowing speed from zero to 9999 strokes per minute.

### PRESET VALUES OPERATION:

You can pull on the **HANDLEBARS(6)** to power on the meter and workout with the meter directly. Or, you can preset the function values for counting down. Press the **MODE** button to make the “**SCAN**” disappears from the display. Stop rowing for four seconds, the meter will enter the **STOP** mode. The meter will go through the input items as follows and allow you to set the function values. Use the **SET** and **RESET** buttons to input the values, and press the **MODE** button to confirm. Or, just press the **MODE** button to skip the setting and move on to the next function. After all the desired settings are chosen, begin pulling on the **HANDLEBARS(6)** to start the workout.

Time (1:00 to 99:00 min) → Calories (1.0 to 999 Kcal) → Count (10 to 9990 rows)

### NOTE:


1. You may preset values for several functions. The preset function values will start to count down. When you complete one of the preset functions, then the value of this completed function will start to count up, while the other preset functions will continue to count down.
2. The Meter will shut off automatically after 4 minutes of inactivity. All function values will be reset to zero, except **TOTAL COUNT.**

## OPERATIONAL INSTRUCTIONS

### HOW TO INSTALL AND REPLACE BATTERIES:

1. Open the Battery Door on the back of the meter.
2. The meter operates with two AAA batteries (1.5V each), the batteries are not included. Refer to the illustration to install or replace the batteries.

- NOTE:**
1. Do not mix a new battery with an old battery.
  2. Use the same type of battery. Do not mix an alkaline battery with another type of battery.
  3. Rechargeable batteries are not recommended.
  4. **Ultimate disposal of battery should be handled according to all state and federal laws and regulations.**
  5. **Do not dispose of batteries in fire.**

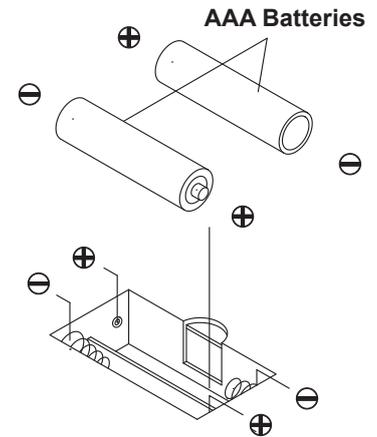

## STORAGE

1. To store the **Stamina® InMotion® Rower 125**, simply keep it in a clean dry place.
2. To avoid damage to the electronics meter, remove the batteries before storing the **Stamina® InMotion® Rower 125** for one year or more.
3. Grasp the **FRONT STABILIZER(3)** and **REAR SUPPORT(1)** to move the **Stamina® InMotion® Rower 125**. Do not use the **SEAT(7)** to move the **Stamina® InMotion® Rower 125**. The **SEAT(7)** will move and the **SEAT CARRIAGE(5)** may pinch your hand or fingers.

## MAINTENANCE

The safety and integrity designed into the **Stamina® InMotion® Rower 125** can only be maintained when the **Stamina® InMotion® Rower 125** is regularly examined for damage and wear. Special attention should be given to the following:

1. Pull on the **HANDLEBAR(6)** and verify that the **SHOCK(10)** provides resistance.
2. Clean the roller tracks on the **CENTER BEAM(2)** with an absorbent cloth.
3. Verify that all nuts and bolts are present and properly tightened. Replace missing nuts and bolts. Tighten loose nuts and bolts.
4. Verify that the **CAUTION LABEL(39)** and **SHOCK CAUTION(38)** are in place and easy to read. Call Stamina Products immediately at **1-800-375-7520** for a replacement caution label if one is missing or damaged.
5. It is the sole responsibility of the user/owner to ensure that regular maintenance is performed.
6. Worn or damaged components must be replaced immediately or the **Stamina® InMotion® Rower 125** removed from service until repair is made.
7. Only Stamina Products supplied components should be used to maintain/repair the **Stamina® InMotion® Rower 125**.
8. Keep your **Stamina® InMotion® Rower 125** clean by wiping it off with an absorbent cloth after use.

## CONDITIONING GUIDELINES

How you begin your exercise program depends on your physical condition. If you have been inactive for several years or are severely overweight, start slowly and increase your workout time gradually. Increase your workout intensity gradually by monitoring your heart rate while you exercise.


Remember to follow these essentials:

- Have your doctor review your training and diet programs.
- Begin your training program slowly with realistic goals that have been set by you and your physician.
- Warm up before you exercise and cool down after you work out.
- Take your pulse periodically during your workout and strive to stay within a range of 60% (lower intensity) to 90% (higher intensity) of your maximum heart rate zone. Start at the lower intensity, and build up to higher intensity as you become more aerobically fit.
- If you feel dizzy or lightheaded you should slow down or stop exercising.

Initially you may only be able to exercise within your target zone for a few minutes; however, your aerobic capacity will improve over the next six to eight weeks. It is important to pace yourself while you exercise so you don't tire too quickly.

To determine if you are working out at the correct intensity, use a heart rate monitor or use the table below. For effective aerobic exercise, your heart rate should be maintained at a level between 60% and 90% of your maximum heart rate. If just starting an exercise program, work out at the low end of your target heart rate zone. As your aerobic capacity improves, gradually increase the intensity of your workout by increasing your heart rate.

Measure your heart rate periodically during your workout by stopping the exercise but continuing to move your legs or walk around. Place two or three fingers on your wrist and take a six second heartbeat count. Multiply the results by ten to find your heart rate. For example, if your six second heartbeat count is 14, your heart rate is 140 beats per minute. A six second count is used because your heart rate will drop rapidly when you stop exercising. Adjust the intensity of your exercise until your heart rate is at the proper level.

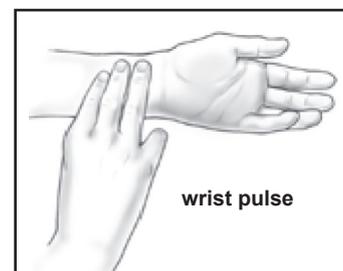

Target Heart Rate Zone Estimated by Age\*

Age	Target Heart Rate Zone (55%-90% of Maximum Heart Rate)	Average Maximum Heart Rate 100%
20 years	110-180 beats per minute	200 beats per minute
25 years	107-175 beats per minute	195 beats per minute
30 years	105-171 beats per minute	190 beats per minute
35 years	102-166 beats per minute	185 beats per minute
40 years	99-162 beats per minute	180 beats per minute
45 years	97-157 beats per minute	175 beats per minute
50 years	94-153 beats per minute	170 beats per minute
55 years	91-148 beats per minute	165 beats per minute
60 years	88-144 beats per minute	160 beats per minute
65 years	85-139 beats per minute	155 beats per minute
70 years	83-135 beats per minute	150 beats per minute


\* For cardiorespiratory training benefits, the American College of Sports Medicine recommends working out within a heart rate range of 55% to 90% of maximum heart rate. To predict the maximum heart rate, the following formula was used:  $220 - \text{Age} = \text{predicted maximum heart rate}$

## WARM-UP and COOL-DOWN

**Warm-Up** The purpose of warming up is to prepare your body for exercise and to minimize injuries. Warm up for two to five minutes before strength training or aerobic exercising. Perform activities that raise your heart rate and warm the working muscles. Activities may include brisk walking, jogging, jumping jacks, jump rope, and running in place.

**Stretching** Stretching while your muscles are warm after a proper warm-up and again after your strength or aerobic training session is very important. Muscles stretch more easily at these times because of their elevated temperature, which greatly reduces the risk of injury. Stretches should be held for 15 to 30 seconds. Do not bounce.

### Suggested Stretching Exercises

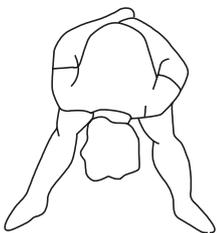

#### Lower Body Stretch

Place feet shoulder-width apart and lean forward. Keep this position for 30 seconds using the body as a natural weight to stretch the backs of the legs.

**DO NOT BOUNCE!**

When the pull on the back of the legs lessens, gradually try a lower position.




#### Floor Stretch

While sitting on the floor, open the legs as wide as possible. Stretch the upper body toward the knee on the right leg by using your arms to pull your chest to your thighs. Hold this stretch 10 to 30 seconds.


**DO NOT BOUNCE!**

Do this stretch 10 times. Repeat the stretch with the left leg.

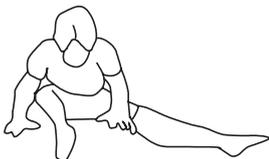

#### Bent Torso Pulls

While sitting on the floor, have legs apart, one leg straight and one knee bent. Pull the chest down to touch the thigh on the leg that is bent, and twist at the waist. Hold this position at least 10 seconds. Repeat 10 times on each side.

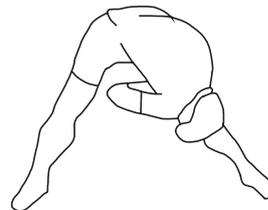

#### Bent Over Leg Stretch

Stand with feet shoulder-width apart and lean forward as illustrated. Using the arms, **gently** pull the upper body towards the right leg. Let the head hang down. **DO NOT BOUNCE!**

Hold the position a minimum of 10 seconds. Repeat pulling the upper body to the left leg. Do this stretch several times slowly.

**Remember to always check with your physician before starting any exercise program.**

**Cool-Down** The purpose of cooling down is to return the body to its normal, or near normal, resting state at the end of each exercise session. A proper cool-down slowly lowers your heart rate and allows blood to return to the heart. Your cool-down should include the stretches listed above and should be completed after each strength training session.

## LIMITED WARRANTY

MODEL 35-0125

### WARRANTY

Stamina Products, Inc. ("Stamina") warrants to the original purchaser that this product will be free from defects in materials and workmanship that arise under normal use, service, proper assembly and proper operation in accordance with product warnings/instructions for a period of 90 days on the parts and one year on the frame from the date of the original purchase from an authorized retailer. **THIS WARRANTY SHALL NOT APPLY TO ANY PRODUCT WHICH HAS BEEN SUBJECT TO COMMERCIAL USE, ABUSE, MISUSE, ALTERATION OF ANY KIND OR TO ANY DEFECT OR CHANGE CAUSED BY IMPROPER ASSEMBLY, REPAIR, REPLACEMENT, SUBSTITUTION OR USE WITH PARTS NOT PROVIDED BY STAMINA.** Commercial use includes use of product in athletic clubs, health clubs, spas, gyms, and all other public or semipublic facilities whether or not the product's use is in furtherance of a profit making enterprise, and all other use which is not for personal purposes.

To implement this limited warranty, send a written notice stating your name, date, and place of purchase and a brief description of the defect along with your receipt to Stamina Products, Inc. 2040 N Alliance Ave, Springfield, Missouri, USA, MO 65803, or email us at [customer.care@staminaproducts.com](mailto:customer.care@staminaproducts.com), or call us at 1-800-375-7520. If the defect is covered under this limited warranty, you will be requested to return the product or part to us for free repair or replacement at our option.

**NO ACTION FOR BREACH OF THIS LIMITED WARRANTY MAY BE COMMENCED MORE THAN ONE (1) YEAR AFTER THE DATE THE ALLEGED BREACH WAS OR SHOULD HAVE BEEN DISCOVERED. NO ACTION FOR BREACH OF ANY IMPLIED WARRANTY (INCLUDING MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE) MAY BE COMMENCED MORE THAN ONE (1) YEAR AFTER DELIVERY OF THE PRODUCT TO THE PURCHASER.** These warranties are not transferable. **IF ANY PART OF THE PRODUCT IS NOT IN COMPLIANCE WITH THIS LIMITED WARRANTY OR ANY IMPLIED WARRANTY, THE REMEDY OF REPAIR OR REPLACEMENT IS THE EXCLUSIVE REMEDY.** If any claim is made under this limited warranty or any implied warranty, Stamina reserves the right to require the product to be returned for inspection, at the purchaser's expense, to Stamina's premises in Springfield, Missouri. Return of the enclosed warranty registration card is not required for warranty coverage, but is merely a way of establishing the date and place of purchase.


Stamina **SHALL NOT BE LIABLE FOR THE LOSS OF USE OF ANY PRODUCT, LOSS OF TIME, INCONVENIENCE, COMMERCIAL LOSS OR ANY OTHER INDIRECT, CONSEQUENTIAL, SPECIAL OR INCIDENTAL DAMAGES DUE TO BREACH OF THE ABOVE WARRANTY OR ANY IMPLIED WARRANTY.**

**THIS LIMITED WARRANTY IS THE ONLY EXPRESS WARRANTY. NO ORAL OR WRITTEN INFORMATION GIVEN BY STAMINA, ITS AGENTS OR EMPLOYEES, SHALL CREATE A WARRANTY OR IN ANY WAY INCREASE THE SCOPE OF THIS WARRANTY.** This warranty gives you specific legal rights, and you may also have other legal rights which vary from state to state. **ANY OTHER RIGHT WHICH YOU MAY HAVE, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.**

The laws in some states affect the disclaimer or limitation of implied warranties and consequential and incidental damages. If any such law is found applicable, the foregoing disclaimers and limitations of and on implied warranties and consequential and incidental damages shall be deemed to be modified to the extent necessary to comply with applicable law.

# PRODUCT PARTS DRAWING

FRONT

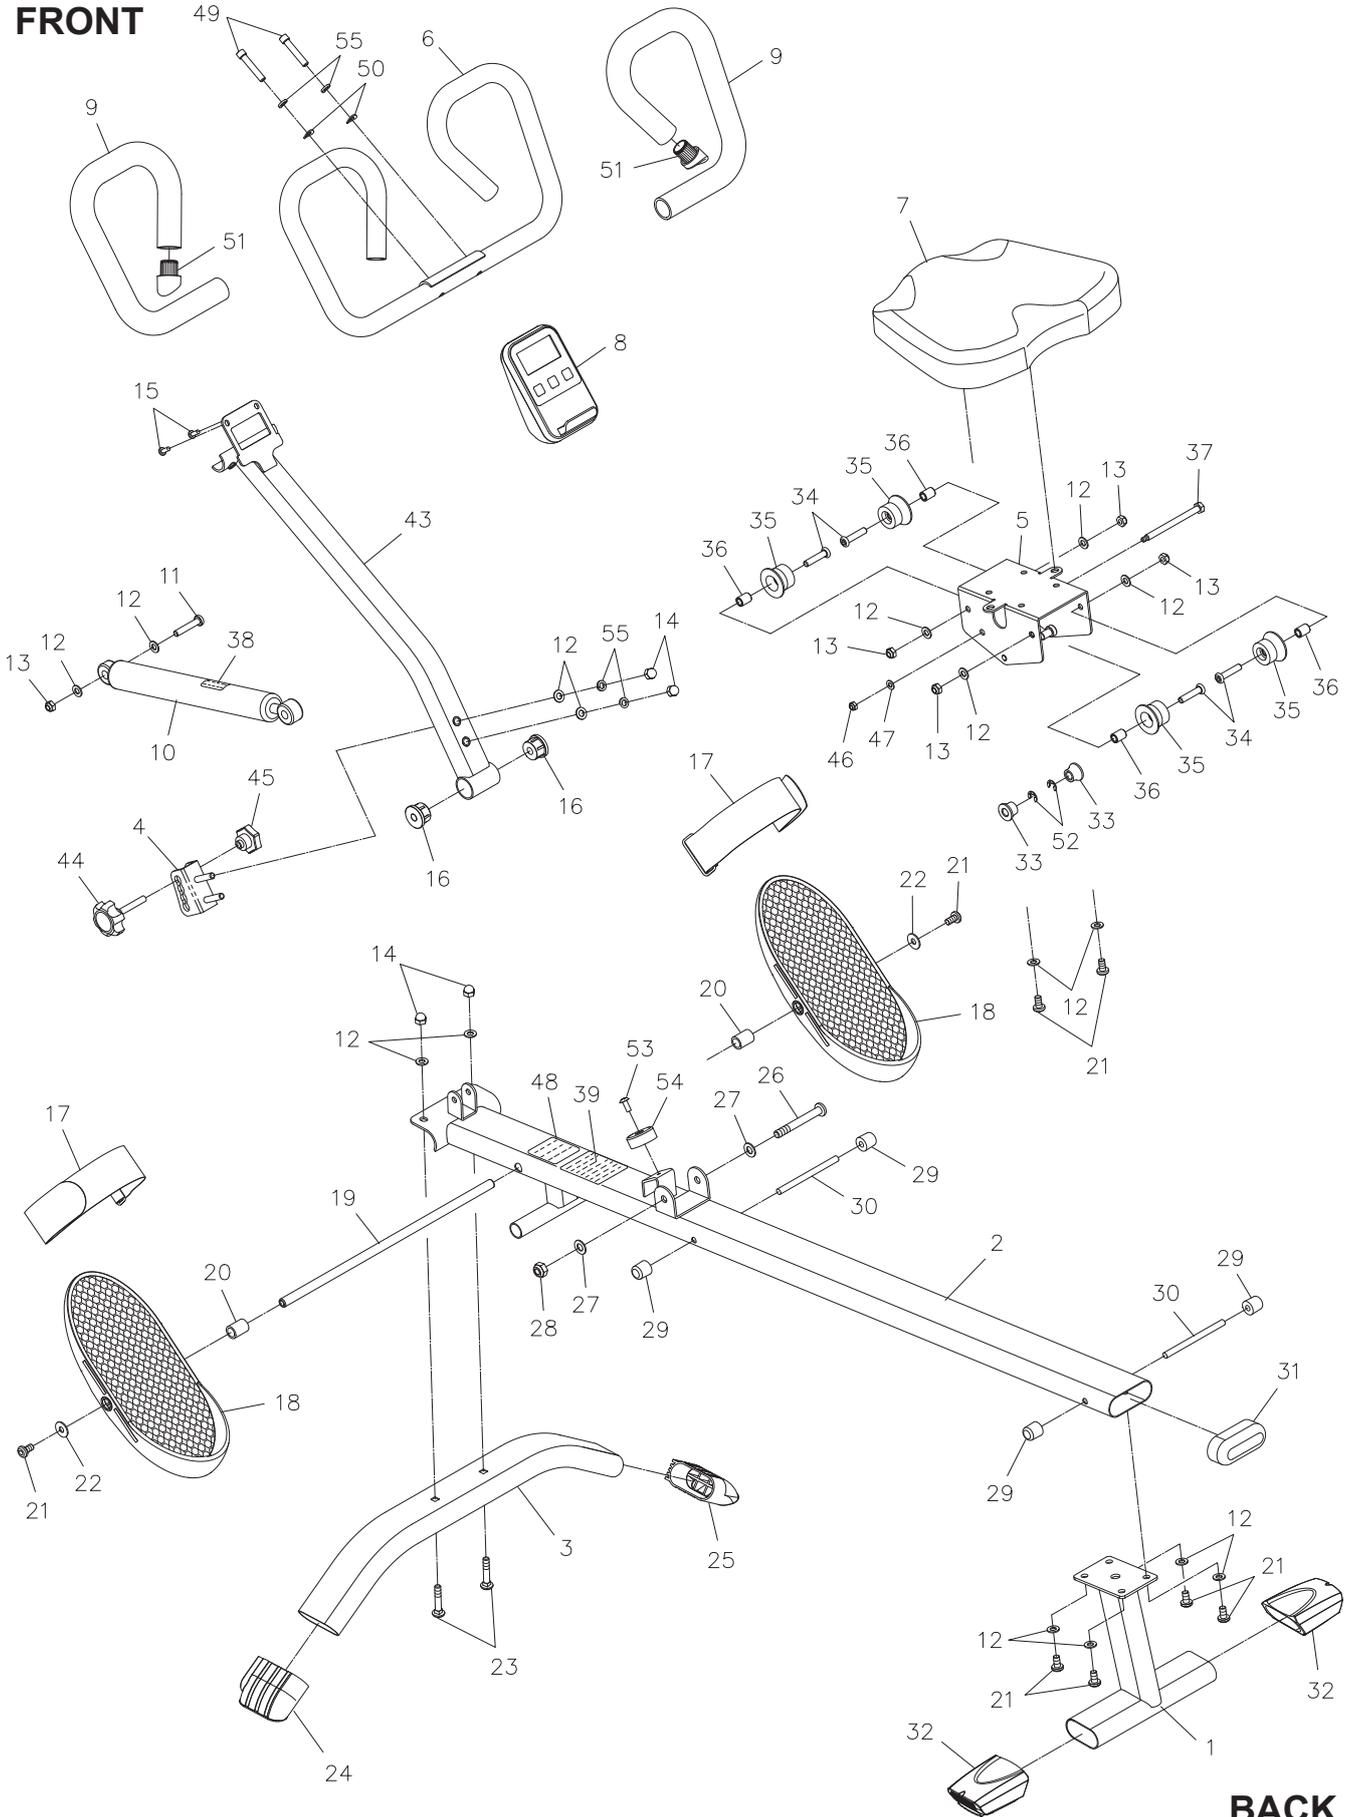

BACK

## PARTS LIST

PART#	PART NAME	QTY
1	Rear Support	1
2	Center Beam	1
3	Front Stabilizer	1
4	Adjustment Bracket	1
5	Seat Carriage	1
6	Handlebar	1
7	Seat	1
8	Meter	1
9	Foam Tube	2
10	Shock	1
11	Bolt, Button Head (M8 x 1.25 x 42mm)	1
12	Washer (M8)	16
13	Nylock Nut (M8 x 1.25)	5
14	Acorn Nut (M8 x 1.25)	4
15	Screw, Round Head (M5 x 0.8 x 15mm)	2
16	Bushing	2
17	Pedal Strap	2
18	Pedal Cap	2
19	Pedal Shaft	1
20	Pedal Spacer	2
21	Bolt, Button Head (M8 x 1.25 x 15mm)	8
22	Large Washer (M8)	2
23	Carriage Bolt (M8 x 1.25 x 42mm)	2
24	Left Front Endcap	1
25	Right Front Endcap	1
26	Bolt, Button Head (M10 x 1.5 x 80mm)	1
27	Washer (M10)	2
28	Nylock Nut (M10 x 1.5)	1
29	Stopper	4
30	Stopper Shaft	2
31	Oval Cap	1
32	Rear Endcap	2
33	Securing Roller	2
34	Bolt, Socket Flat Head (M8 x 1.25 x 36mm)	4
35	Roller	4
36	Roller Spacer (ø8.2 x ø12.7 x 17mm)	4
37	Shoulder Bolt (ø8x100mm long, M6x1 threaded)	1
38	Shock Caution	1
39	Caution Label	1
40	Allen Wrench (6mm)	2
41	Wrench	1
42	Owner's Manual	1
43	Rowing Arm	1
44	Locking Knob	1
45	Adjustment Knob	1
46	Nylock Nut (M6 x 1)	1
47	Washer (M6)	1

## **PARTS LIST**

<b>PART#</b>	<b>PART NAME</b>	<b>QTY</b>
48	Serial Decal	1
49	Bolt, Socket Head (M8 x 1.25 x 42mm)	2
50	Arc Washer (M8)	2
51	Round Plug (ø25.4mm)	2
52	E Ring (10mm)	2
53	Bolt, Round Head (M6 x 1 x 15mm)	1
54	Bumper	1
55	Lock Washer (M8)	4

## **NOTES**

## TO CONTACT CUSTOMER CARE

For your convenience, Stamina's customer care representatives can be reached by email at [customer.care@staminaproducts.com](mailto:customer.care@staminaproducts.com) or by phone at 1-800-375-7520 (in the U.S.). Our customer care representatives are available Monday through Thursday from 7:30 a.m. until 5:00 p.m., and Friday 8:00 a.m. until 3 p.m. Central Time.



**ONLINE  
CUSTOMER CARE**  
customer.care@staminaproducts.com  
www.staminaproducts.com



**TELEPHONE  
CUSTOMER CARE**  
Tel: 1 (800) 375-7520



**FAX  
CUSTOMER CARE**  
Fax: (417) 889-8064



**MAIL**  
**STAMINA PRODUCTS, INC.**  
ATTN: Customer Care  
2040 N Alliance Ave, Springfield, MO 65803

Would you like to receive email information or special offers from Stamina Products? Register at [contact.staminaproducts.com](http://contact.staminaproducts.com)

## TO REGISTER YOUR PRODUCT

To enact your warranty, please register your product by going to [register.staminaproducts.com](http://register.staminaproducts.com). Please have your product model number (printed on the cover of this owner's manual) and the serial number (printed on the black and white sticker on your product) ready.

If you don't have internet access, you can call customer care at 1-800-375-7520, or fill out and mail the product registration form below to Stamina Products, Inc.; 2040 N Alliance Ave, Springfield, MO 65803.

<b>PRODUCT REGISTRATION FORM</b>		<b>Stamina Products, Inc.</b> 2040 N Alliance Ave, Springfield, MO 65803	
Model Number: .....		Serial Number: .....	
Product Name: .....			
Place Purchased: .....			
Date of Purchase: .....		Purchase Price: .....	
First Name: .....		Last Name: .....	
City: .....	State: .....	Phone #: (    ) .....	Zip Code: .....
Email Address: .....		Phone #: (    ) .....	
Would you like to receive email information or special offers from Stamina Products?* <input type="checkbox"/> Yes <input type="checkbox"/> No *If yes, be sure your email address is included above.			



Detach and Mail or Fax the Form Above



## TO ORDER PARTS

If there are missing or damaged parts, you can go to [parts.staminaproducts.com](http://parts.staminaproducts.com) and order those parts. If you have questions, please contact customer care. Do not return the product. To order parts by mail, fill out the sheet below and fax it to 417-889-8064. The part will be mailed to your address.



Detach and Mail or Fax the Form Below



<b>PARTS ORDER FORM</b>		<b>Stamina Products, Inc.</b> 2040 N Alliance Ave, Springfield, MO 65803	
Mr./Ms: .....			
Address: .....		Apt. #: .....	
City: .....	State: .....	Zip Code: .....	
<b>IMPORTANT : We require your phone number to process the order!</b>			
Phone #: (    ) .....		Work Phone #: (    ) .....	
Date of Purchase: .....			
Model #: .....			
Purchased From: .....			

**IMPORTANT: Before filling out the portion below, make sure you have the correct information.  
Refer to the parts list to make sure you're ordering the right parts!**

PART #	DESCRIPTION	QUANTITY
EXAMPLE: 1	Rear Unit Assembly	1