

# CARSON®

## Magnivisor Deluxe™

### LED Lighted Head Visor Magnifier

Congratulations on selecting your new Carson Visor Magnifier! In order to achieve optimum performance, please follow instructions for proper use and care.



CP-60


#### PRODUCT SPECIFICATION

Magnification:	1.5x, 2x, 2.5x, 3x	Dimensions:	7.6" x 2.3" x 9.7"
Lens Width:	4"	Batteries:	3 AAA (not included)
Weight:	0.33 lbs	Accessories:	Microfiber Cloth and 4 Lenses in Protective Case


#### INSTALLING BATTERIES

1. Turn Magnivisor™ over and place one hand underneath removable LED Lamp. With the opposite hand, use a tool such as a pen and insert into hole to push LED Lamp out from compartment.


**Important:** DO NOT PULL LED LAMP FROM VISOR. Push from underneath to avoid damaging the light.

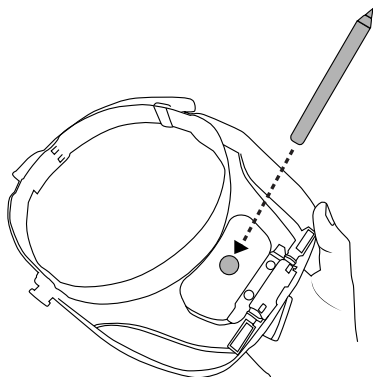

2. Press lever to remove battery door and insert 3 AAA batteries in the correct polarity. Reattach battery door when done.

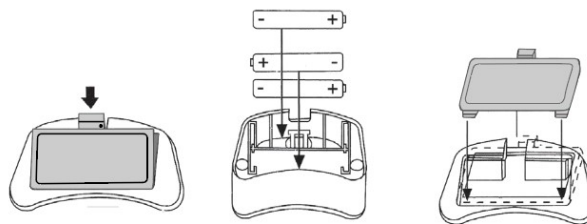


3. Return LED Lamp to top of visor, or use separately as a table light or flashlight. LED Lamp is also magnetic and can attach to any metal surface. If not using with visor, included insert will fill the compartment.

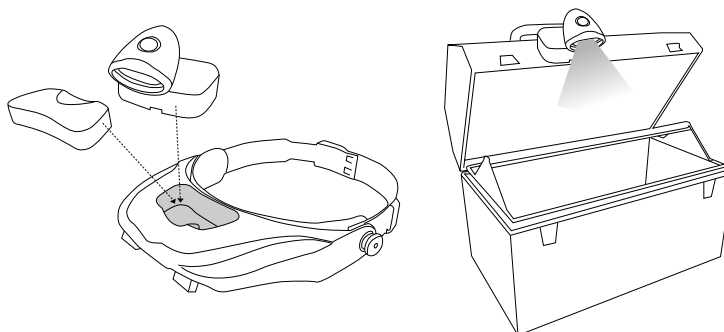

**WARNING:** Use only alkaline batteries. Mixing old and new, different brands or types within brands may cause batteries to leak, overheat or explode. Keep away from fire or excessive heat. Inspect batteries for corrosion or leakage. Insert in direction indicated. Rechargeable batteries not recommended.


#### INSERTING / REMOVING LENSES

1. Select desired lens from protective case.
2. Insert lens tabs into holder located underneath the visor. There will be an audible click when locked into place.  
**Please note:** The flat part of the lens should face inward. The curved portion should face out.
3. Gently pull on lens to remove from holder and return to case when done.

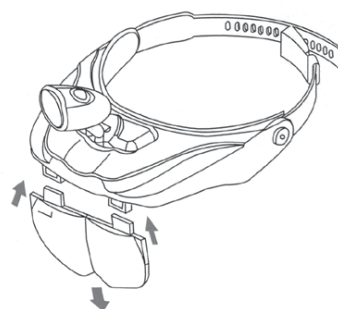


#### ADJUSTING VISOR FIT

Press and hold buckle (A) and slide strap (B) for desired fit. Release buckle to lock in place.

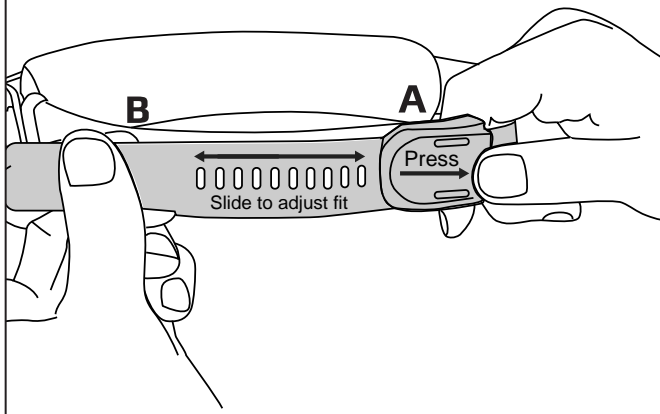

#### USING LED LIGHT

Push red button on LED Lamp to turn light on and off. Angle of headlight can be adjusted 30° to the left or right and about 90° up or down.

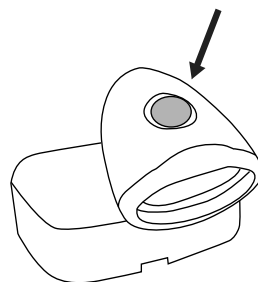

#### WARNING

**To avoid eye damage:** Do not look at the sun or bright objects. Do not place lighted magnifier directly upon human eye.

#### CLEANING AND CARE

- Clean using microfiber lens cloth. Do not use any abrasives, chemical cleaners, or solvents.
- To avoid scratching, handle lenses with care and store in case when not in use.

**Customer Service:** If you experience any difficulties, please contact us and we will be happy to help you.



✉ info@carson.com



✉ uksupport@carson.com



✉ eusupport@carson.com

For warranty information, visit [www.carson.com/warranty](http://www.carson.com/warranty)

**[www.carson.com](http://www.carson.com)**

Carson Optical 2070 5th Avenue, Ronkonkoma, NY 11779 | Tel: 631-963-5000